




Philips
IPS LCD monitor, LED
backlight with SmartImage
Lite

E Line
21.5" (54.6 cm)
Full HD display

227E4QHAD

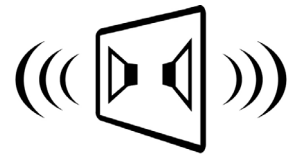

Built-in Speakers

High performance IPS display

with stereo speakers

Experience brilliant LED pictures on this IPS wide-view display with elegant and slim design. With features like HDMI and stereo speakers, it's ready to entertain you!

Superb Picture Quality

- IPS LED wide view technology for image and color accuracy
- TrueVision ensures lab quality images
- SmartImage Lite for an enhanced LCD viewing experience

Elegant Design

- Elegant, slim design complements your home decor
- Superb black cherry glossy finish
- Modern Touch controls

Experience multimedia

- HDMI-ready for Full HD entertainment
- Powerful sound with 2x2 watts RMS speakers

Greener everyday

- Low power consumption saves energy bills
- Mercury Free eco-friendly display

PHILIPS

IPS LCD monitor, LED backlight
E Line 21.5" (54.6 cm), Full HD display

227E4QHAD/00

Highlights

IPS technology



IPS

TN

IPS displays use an advanced technology which gives you extra wide viewing angles of 178/178 degree, making it possible to view the display from almost any angle - even in 90 degree Pivot mode! Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid colors, making it ideal not only for Photos, movies and web browsing, but also for professional applications which demand color accuracy and consistent brightness at all times.

SmartImage Lite

SmartImage Lite is an exclusive, leading edge Philips technology that analyzes the content displayed on your screen. Based on a scenario you select, SmartImage Lite dynamically enhances the contrast, color saturation and sharpness of images and videos for ultimate display performance - all in real time with the press on a single button.

HDMI Ready




HDMI-ready

An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. A HDMI cable enables high-quality digital video and audio all transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

Built-in stereo speakers

Now you can enjoy all your multimedia and social applications with stereo sound. These built in speakers not only sound great, but also helps you to get rid of external wire clutter and save valuable desktop space.

TrueVision

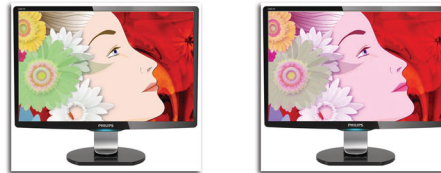

TrueVision On

TrueVision Off

TrueVision is a proprietary Philips technology that uses advanced algorithm for testing and

aligning monitor display which gives you the ultimate display performance. Philips ensures TrueVision monitors leave the factory fine-tuned with this process giving you consistent color and picture quality.

Touch controls



Touch controls are intelligent, touch sensitive icons that replace protruding buttons that lets the user adjust the monitor to their requirement. Responding to your lightest touch, Touch control gives the monitor a modern feel.

Mercury Free

Philips monitors with LED backlighting are free of Mercury content, one of the most toxic natural substances, which affects humans and animals. This reduces the environmental impact of the display throughout its life-cycle, from manufacturing to disposal.



Specifications

Picture/Display

- LCD panel type: IPS LCD
- Backlight type: W-LED system
- Panel Size: 21.5 inch / 54.6 cm
- Effective viewing area: 475.2 (H) x 267.3 (V)
- Aspect ratio: 16:9
- Optimum resolution: 1920 x 1080 @ 60Hz
- SmartResponse (typical): 7 ms (Grey to Grey)
- Brightness: 250 cd/m²
- Contrast ratio (typical): 1000:1
- SmartContrast: 20,000,000:1
- Pixel pitch: 0.248 x 0.248 mm
- Viewing angle: 178° (H) / 178° (V), @ C/R > 10
- Picture enhancement: SmartImage Lite
- Display colors: 16.7 M
- Scanning Frequency: 30 -83 kHz (H) / 56 -75 Hz (V)
- sRGB

Connectivity

- Signal Input: VGA (Analog), HDMI
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): PC audio-in, Headphone out

Convenience

- Built-in Speakers: 2Wx2
- User convenience: SmartImage lite, Input, Menu, Power On/Off, Volume
- OSD Languages: English, French, German, Italian, Portuguese, Russian, Simplified Chinese, Spanish, Turkish
- Other convenience: Kensington lock
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 7/Vista/XP

Stand

- Tilt: -5/20 degree

Power

- On mode: 26.5 W (EnergyStar 5.0 test method)

- Standby mode: 0.5 W
- Off mode: 0.3 W
- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Power supply: External, 100-240VAC, 50-60Hz

Dimensions

- Product with stand (mm): 510 x 398 x 179 mm
- Product without stand (mm): 510 x 314 x 37 mm
- Packaging in mm (WxHxD): 562 x 475 x 98 mm

Weight

- Product with stand (kg): 2.20 kg
- Product without stand (kg): 1.83 kg
- Product with packaging (kg): 3.74 kg

Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- Temperature range (storage): -20°C to 60°C °C
- Relative humidity: 20%-80 %
- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- MTBF: 30,000 hour(s)

Sustainability

- Environmental and energy: EnergyStar 5.0, RoHS, Mercury Free
- Recyclable packaging material: 100 %

Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC Class B, GOST, PSB, SASO, SEMKO, TUV/ISO9241-307, UL/cUL, WEEE

Cabinet

- Color: Black Cherry
- Finish: Glossy



Issue date 2022-04-21

Version: 5.0.1

12 NC: 8670 000 90876
EAN: 87 12581 64734 6

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com