

PHILIPS

Full HD LCD monitor

V Line

27" (68.6 cm)

1920 x 1080 (Full HD)

273V7QDSB



Vivid, crisp images, from edge to edge

A perfect all-round display with stunning images that stretch from edge to edge, made easy on the eyes, in a compact, slim design.

Perfectly designed for your space

- Compact design saves space
- VESA mount allows for flexibility

Easy on the eyes

- EasyRead mode for a paper-like reading experience
- Less eye fatigue with Flicker-Free technology
- LowBlue Mode for easy-on-the-eyes productivity

Experience true multimedia


- HDMI-ready for Full HD entertainment

Vivid pictures every time

- SmartContrast for rich black details
- IPS LED wide view technology for image and colour accuracy
- 16:9 Full HD display for crisp, detailed images
- SmartImage pre-sets for easy optimised image settings
- Narrow-border display for a seamless appearance


Highlights

IPS technology

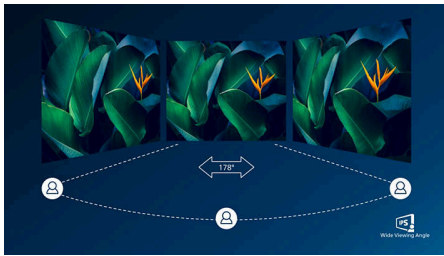


IPS displays use an advanced technology that gives you extra-wide viewing angles of 178/178 degrees, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS displays give you remarkably crisp images with vivid colours, making them ideal not only for Photos, movies and web browsing, but also for professional applications that demand colour accuracy and consistent brightness at all times.

16:9 Full HD display

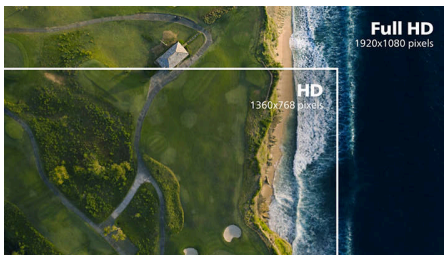


Picture quality matters. Regular displays deliver quality, but you expect more. This display features enhanced Full HD 1920 x 1080 resolution. With Full HD for crisp detail paired with high brightness, incredible contrast and realistic colours, expect a true-to-life picture.

Ultra-narrow Border

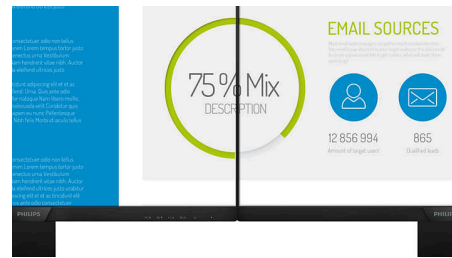

The new Philips displays feature ultra-narrow borders which allow for minimal distractions and maximum viewing size. Especially suited for multi-display or tiling setups like gaming, graphic design and professional applications, the ultra-narrow border display gives you the feeling of using one large display.

SmartContrast

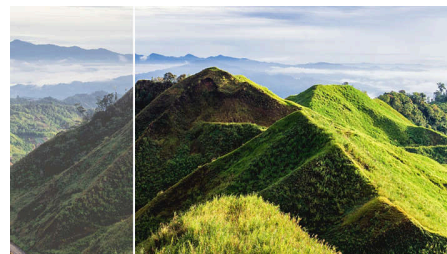


SmartContrast is a Philips technology that analyses the contents you are displaying, automatically adjusting colours and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.

SmartImage



SmartImage is an exclusive leading edge Philips technology that analyses the content displayed on your screen and optimises your display performance. This user-friendly interface allows you to select various modes, like Office, Photo, Movie, Game, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimises the contrast, colour saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time at the touch of a single button!

Flicker-Free technology

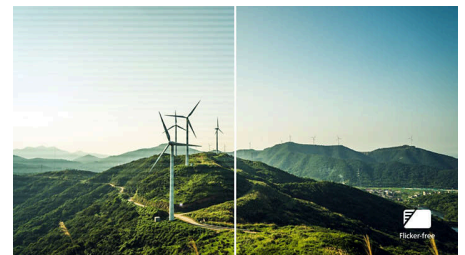


Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-Free technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.




Highlights

LowBlue Mode

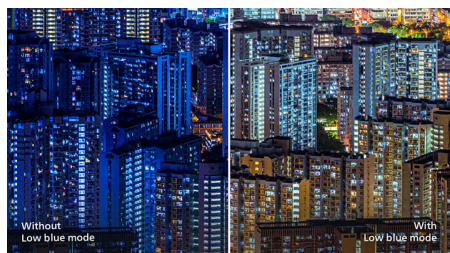


Studies have shown that just as ultra-violet rays can cause eye damage, shortwave-length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, the Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.

EasyRead mode

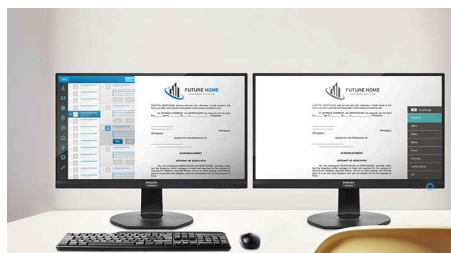

EasyRead mode for a paper-like reading experience

HDMI Ready

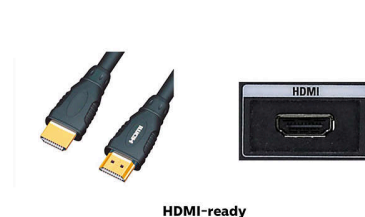

An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. An HDMI cable enables high-quality digital video and audio to be transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).



Specifications

Picture/Display

Panel Size: 27 inch/68.6 cm
Aspect ratio: 16:9
LCD panel type: IPS technology
Backlight type: W-LED system
Pixel pitch: 0.311 x 0.311 mm
Brightness: 250 cd/m²
Display colours: 16.7 M
Contrast ratio (typical): 1000:1
SmartContrast: 10,000,000:1
Response time (typical): 4 ms (GtG)*
Viewing angle: 178° (H)/178° (V), @ C/R > 10
Maximum resolution: 1920 x 1080 @ 75 Hz*
Effective viewing area: 597.89 (H) x 336.31 (V)
Scanning Frequency: 30–83 kHz (H)/56–76 Hz (V)
sRGB
Flicker-free
Pixel Density: 82 PPI
LowBlue Mode
Display Screen Coating: Anti-Glare, 3H, Haze 25%

Connectivity

Signal Input: VGA (Analogue), DVI-D (digital, HDCP), HDMI (digital, HDCP)
Sync Input: Separate Sync, Sync on Green
Audio (In/Out): HDMI audio out

Convenience

Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
User convenience: Power On/Off, Menu/OK,

Brightness/UP, Input/Down, SmartImage/Back
OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Spanish, Simplified Chinese, Swedish, Turkish, Traditional Chinese, Ukrainian
Other convenience: Kensington lock, VESA mount (100 x 100 mm)

Stand

Tilt: -5/20 degree

Power

Power supply: Built-in, 100–240 VAC, 50–60 Hz
Off mode: 0.3 W (typ.)
On mode: 15.40 W (typ.) (EnergyStar test method)
Standby mode: 0.5 W (typ.)
Power LED indicator: Operation - White, Standby mode - White (flashing)
Energy Label Class: E

Dimensions

Product with stand (mm): 613 x 454 x 227 mm
Packaging in mm (W x H x D): 664 x 452 x 134 mm
Product without stand (mm): 613 x 368 x 45 mm

Weight

Product with packaging (kg): 6.07 kg
Product with stand (kg): 4.15 kg
Product without stand (kg): 3.66 kg

Operating conditions

Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
Temperature range (operation): 0°C to 40°C °C
MTBF: 50 000 (Excluded backlight) hour(s)
Relative humidity: 20%–80 %
Temperature range (storage): -20°C to 60°C °C

Sustainability

Environmental and energy: RoHS, Mercury Free, WEEE
Recyclable packaging material: 100 %

Compliance and standards

Regulatory Approvals: CU, SEMKO, cETLus, TUV/ISO9241-307, CE Mark, FCC Class B, ICES-003, RCM, UKRAINIAN, VCCI, CECP, TUV Cert. — blue light cut-off

Cabinet

Colour: Black
Finish: Textured

What's in the box?

Cables: HDMI cable, Power cable
Monitor with stand
User Documentation

