



Philips Brilliance
LED monitor with
PowerSensor

22" (55.9 cm) B-line
WSXGA+

Brilliance

225BL2CB

World's first PowerSensor LED display saves energy

Eco-friendly, EPEAT Gold certified Philips Business Line 225BL2 LED display with intelligent PowerSensor detects user presence and adjusts power consumption saving up to 80% of energy bills!

Sustainable Eco-friendly solution

- PowerSensor ensures lower operating costs by saving energy
- EPEAT Gold ensures lowest impact on environment
- Mercury Free eco-friendly display
- ZeroWatt switch 100% power saving
- 0.1 watt Soft-Off mode

Ergonomic design

- 70mm height adjustment for ideal sitting position

Outstanding display performance

- LED technology ensures natural colors
- SmartImage: Optimized user-friendly display experience

Great convenience

- Stylish SmartTouch controls
- Built in stereo audio for multimedia experience
- USB Hub with 2 ports for easy connections*

PHILIPS

Highlights

PowerSensor



PowerSensor On

PowerSensor Off

PowerSensor is a built-in 'people sensor' that transmits and receives harmless infrared signals to determine if user is present and automatically reduces monitor brightness when user steps away from the desk, cutting energy costs by up to 80 percent and prolonging monitor life.

LED technology

White LED's are solid state devices which light up to full, consistent brightness faster saving startup time. LED's are free from mercury content which allows for eco-friendly recycling and disposal process. LED's allow for better dimming control of LCD backlight, resulting in super high contrast ratio. It also gives superior color reproduction thanks to consistent brightness across the screen.

Mercury Free


Philips monitors with LED backlighting are free of Mercury content, one of the most toxic natural substances, which affects humans and animals. This reduces the environmental impact of the display throughout its life-cycle, from manufacturing to disposal.

EPEAT Gold

Philips EPEAT GOLD certified monitors ensure protection for human health and environment, and are highly energy efficient ensuring low emissions of climate changing green house gases. EPEAT program helps

purchasers evaluate, compare and select Monitors based on 51 environmental criteria supported by US EPA. GOLD certification ensures that at least 30% of plastic used is Post Consumer Resin, which ensures reduction in use of toxic and hazardous materials. EPEAT Gold is valid only where Philips registers the product. Please visit www.epeat.net for registration status in your country.

SmartImage

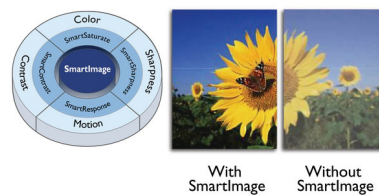

With SmartImage

Without SmartImage

SmartImage is an exclusive leading edge Philips technology that analyzes the content displayed on your screen and gives you optimized display performance. This user friendly interface allows you to select various modes like Office, Image, Entertainment, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimizes the contrast, color saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time with the press of a single button!

Zero Switch

In line with Philips' commitment to "Sense and Simplicity" we enable you to make a responsible choice to switch OFF your monitor at any given time. At the touch of a single ON/OFF button which is conveniently located at the back of the monitor, the monitors' energy consumption is reduced to Zero. In the OFF mode, the monitor is

completely cut off from AC power and thereby reducing your carbon footprint even further.

2 Ports USB 2.0 HUB

USB Hub allows user to conveniently connect their plug and play multimedia devices such as USB memory devices, camera, portable HDD, Web camera, PDA, Printer and many other devices which has USB connection available. The conveniently located USB 2.0 Hub on the monitor allows USB 2.0 signals to pass thru to the computer. Note that many devices like cameras and HDD may need to be powered On independently, as they have higher power requirements than the monitor USB Hub can provide.

SmartTouch controls



SmartTouch controls are intelligent, touch sensitive icons that replace protruding buttons. Responding to your lightest touch, SmartTouch controls, for example, power up your monitor or brighten and sharpen your display with SmartImage Lite. When activated, SmartTouch icons glow to indicate that your commands have been implemented.

70mm height adjustment

The Compact Ergo Base is a 'people friendly' Philips monitor base that tilts, swivels and is height adjustable so each user can position the monitor for maximum viewing comfort and efficiency.



Specifications

Picture/Display

- LCD panel type: TFT-LCD
- Backlight type: W-LED system
- Panel Size: 22 inch / 55.9 cm
- Aspect ratio: 16:10
- Optimum resolution: 1680 x 1050 @ 60Hz
- Response time (typical): 5 ms
- Brightness: 250 cd/m²
- SmartContrast: 20,000,000:1
- Pixel pitch: 0.282 x 0.282 mm
- Viewing angle: 176° (H) / 170° (V), @ C/R > 5
- Picture enhancement: SmartImage
- Display colors: 16.7 M
- Scanning Frequency: 30 -83 kHz (H) / 56 -75 Hz (V)
- sRGB

Connectivity

- Signal Input: VGA (Analog), DVI-D (digital, HDCP)
- USB: USB 2.0 x 2
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): Stereo Audio

Convenience

- Built-in Audio: 1.5Wx2
- User convenience: SmartImage, Volume, PowerSensor, Menu, Power On/Off
- OSD Languages: English, French, German, Spanish, Italian, Russian, Simplified Chinese, Portuguese
- Other convenience: VESA mount (100x100mm), Kensington lock
- Plug & Play Compatibility: DDC/CI, Windows 7/ Vista/XP/2000/98, Mac OS X, sRGB

Stand

- Height adjustment: 70 mm
- Swivel: -65/65 degree
- Tilt: -5/20 degree

Power

- Smart Power Mode: 12W (Min.)
- On mode: 22.5W (EnergyStar 5.0 test method)
- Standby mode: < 0.1 W
- Off mode: 0 W (with Zero Power Switch)
- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Power supply: Built-in, 100-240VAC, 50/60Hz

Dimensions

- Product with stand (mm): 484 x 505 x 249 mm
- Product without stand (mm): 351 x 505 x 59 mm
- Packaging in mm (WxHxD): 468 x 565 x 175 mm

Weight

- Product with stand (kg): 5.17 kg
- Product without stand (kg): 4.15 kg
- Product with packaging (kg): 6.92 kg

Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- Temperature range (storage): -20°C to 60°C °C
- Relative humidity: 20%-80 %
- MTBF: 30,000 hour(s)

Sustainability

- Environmental and energy: EPEAT Gold, RoHS, EnergyStar 5.0
- Recyclable packaging material: 100 %

Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC, Class B, GOST, SEMKO, TCO 5.0, TUV/GS, TUV Ergo, UL/cUL

Cabinet

- Color: Black/Black
- Finish: Texture



Issue date 2022-05-10

Version: 2.0.2

12 NC: 8670 000 62233
EAN: 87 12581 53805 7

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com