



Philips Brilliance
LCD monitor, LED
backlight

S Line
19" (48.3 cm)
1280 x 1024

19S4LMS

Sustainable productivity

with energy efficient ergonomic LED display

The Philips ergonomic LED display using 25% recycled materials and PVC-BFR free housing is ideal for eco-friendly productivity

Designed for people

- Low bezel-to-table height for maximum reading comfort
- SmartErgoBase enables user-friendly ergonomic adjustments

Great performance

- LED technology ensures natural colours
- TrueVision ensures lab quality images
- Built-in stereo speakers for multimedia

Sustainable Eco-design

- SmartPower: Up to 50% power saving
- PVC-BFR free housing
- 100% recyclable packaging

Easy to experience

- Modern Touch controls
- SmartImage pre-sets for easy optimised image settings


PHILIPS

Highlights

LED technology

White LED's are solid state devices which light up to full, consistent brightness faster saving startup time. LED's are free from mercury content, which allows for eco-friendly recycling and disposal process. LED's allow for better dimming control of the LCD backlight, resulting in a super high contrast ratio. It also gives superior colour reproduction thanks to consistent brightness across the screen.

SmartErgoBase

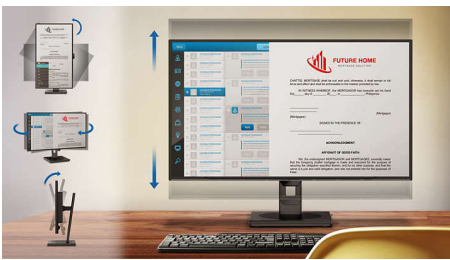

The SmartErgoBase is a monitor base that delivers ergonomic display comfort and provides cable management. The base can swivel, tilt and rotate to various angles to ensure maximum comfort. The height-adjustable stand guarantees the optimal viewing level, reducing the physical strains of a long workday, while cable management reduces cable clutter and keeps the workspace neat and professional.

SmartImage




SmartImage is an exclusive leading edge Philips technology that analyses the content displayed on your screen and optimises your display performance. This user-friendly interface allows you to select various modes, like Office, Photo, Movie, Game, Economy etc., to fit the

application in use. Based on the selection, SmartImage dynamically optimises the contrast, colour saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time at the touch of a single button!

SmartPower

SmartPower is an artificial intelligent technology which dynamically analyses the content of the screen image to achieve power saving. The backlight intensity can be controlled automatically and pre-set by the system to reduce the power consumption by up to 50%, which saves substantially on energy costs

TrueVision

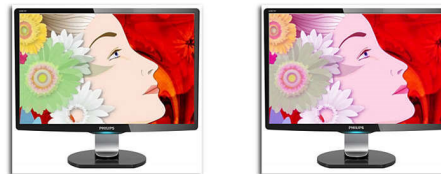

TrueVision is a proprietary Philips technology that uses an advanced algorithm for testing and aligning monitor display, which gives you the ultimate display performance. Philips ensures that TrueVision monitors leave the factory fine-tuned with this process giving you consistent colour and picture quality.

Built-in stereo speakers



A pair of high-quality stereo speakers built into a display device. They may be visible front

firing, or invisible down firing, top firing, rear firing etc. depending on model and design.

Low bezel-to-table height



Thanks to its advanced SmartErgoBase, the Philips monitor can be lowered down almost to desk level for a comfortable viewing angle. Low bezel-to-table height is the perfect solution if you use bifocals, trifocals or progressive lens glasses for your computing work. Additionally, it allows users of different heights to use the monitor at their preferred angle and height settings, helping them to reduce fatigue and strain.

PVC-BFR free housing

This Philips monitor housing is free from brominated flame retardant and polyvinyl chloride (PVC-BFR free)

Sustainability

Philips is committed to using sustainable, eco-friendly materials across its monitor range. All body plastic parts, metal chassis parts and packing materials use 100% recyclable materials. In selected models, we utilise $\geq 65\%$ Post-Consumer Recycled plastics, ensuring reduction in waste. Strict adherence to RoHS standards ensures substantial reduction or elimination of toxic substances like Lead and Mercury. Our display housing is made up of PVC/BFR-free material. For more information, please visit Philips @ <http://www.asimpleswitch.com/global/> to learn more.



Specifications

Connectivity

- Signal Input: DVI-D (digital, HDCP), VGA (Analogue)
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): PC audio-in, Headphone out

Picture/Display

- Panel Size: 19 inch/48.3 cm
- Aspect ratio: 5:4
- LCD panel type: TFT-LCD
- Backlight type: W-LED system
- Pixel pitch: 0.294 x 0.294 mm
- Optimum resolution: 1280 x 1024 @ 60 Hz
- Brightness: 250 cd/m²
- Display colours: 16.7 M
- Contrast ratio (typical): 1000:1
- SmartContrast: 20,000,000:1
- Response time (typical): 5 ms
- Viewing angle: 170° (H)/160° (V), @ C/R > 10
- Picture enhancement: SmartImage
- Effective viewing area: 376.32 mm x 301.06 mm
- Scanning Frequency: 30–83 kHz (H)/56–75 Hz (V)
- sRGB

Convenience

- Built-in Speakers: 1.5 W x 2
- Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 7/Vista/XP
- User convenience: SmartImage, Volume, SmartPower, Menu, Power On/Off
- OSD Languages: English, French, German, Italian, Portuguese, Russian, Spanish, Simplified Chinese
- Other convenience: Kensington lock, VESA mount (100 x 100 mm)
- Control software: SmartControl Premium

Stand

- Height adjustment: 110 mm
- Pivot: 90 degree
- Swivel: -65/65 degree
- Tilt: -5/20 degree

Power

- ECO mode: 11.3 W (typ.)

- Power supply: 100–240 VAC, 50–60 Hz, Built-in
- Off mode: 0.1 W
- On mode: 18.48 W (EnergyStar 5.0 test method)
- Standby mode: 0.1 W
- Power LED indicator: Operation - White, Standby mode - White (flashing)

Dimensions

- Product with stand (mm): 404 x 394 x 227 mm
- Packaging in mm (W x H x D): 444 x 400 x 174 mm
- Product without stand (mm): 404 x 347 x 55 mm

Weight

- Product with packaging (kg): 5.71 kg
- Product with stand (kg): 4.84 kg
- Product without stand (kg): 3.03 kg

Operating conditions

- Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
- Temperature range (operation): 0°C to 40°C °C
- MTBF: 30,000 hour(s)
- Relative humidity: 20%–80% %
- Temperature range (storage): -20°C to 60°C °C

Sustainability

- Environmental and energy: EnergyStar 5.0, RoHS
- Recyclable packaging material: 100 %
- Specific Substances: PVC/BFR free housing, Mercury free
- Recycled material: 25%

Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC Class B, GOST, SASO, SEMKO, TUV Ergo, TUV/GS, UL/cUL, WEEE

Cabinet

- Finish: Texture
- Foot: Black
- Front bezel: Silver
- Rear cover: Black

