



Philips Brilliance  
LCD monitor with LED  
backlight

**B Line**  
19" (48.3 cm)  
Format 16:10

**Brilliance**

**190BL1CS**

## Ergonomic business display enhances productivity

With features like SmartImage, Front Stereo Audio, USB port and Ergo base, the energy efficient 190BL1 business display enhances your productivity

### **Sustainable Eco-friendly solution**

- Energy Star for energy efficiency and low power consumption
- Eco-friendly materials that meets international standards
- EPEAT Silver ensures lower impact on environment

### **Outstanding display performance**

- LED technology ensures natural colors
- SmartImage: Optimized user-friendly display experience
- SmartContrast: For incredible rich black details
- TrueVision: Laboratory quality display performance

### **Ergonomic design**

- 70mm height adjustment for ideal sitting position
- Tilt and swivel adjustment for an ideal viewing angle

### **Great convenience**

- Built in stereo audio for multimedia experience

**PHILIPS**

# Highlights

## LED technology

White LED's are solid state devices which light up to full, consistent brightness faster saving startup time. LED's are free from mercury content which allows for eco-friendly recycling and disposal process. LED's allow for better dimming control of LCD backlight, resulting in super high contrast ratio. It also gives superior color reproduction thanks to consistent brightness across the screen.


## 70mm height adjustment

The Compact Ergo Base is a 'people friendly' Philips monitor base that tilts, swivels and is height adjustable so each user can position the monitor for maximum viewing comfort and efficiency.

## Screen tilt and swivel

Screen tilt and swivel is a mechanism built into the base permits the monitor to swivel and tilt backward or forward.

## SmartImage

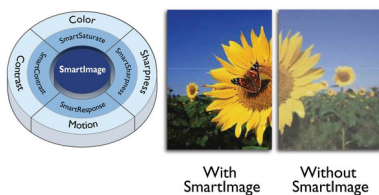

SmartImage is an exclusive leading edge Philips technology that analyzes the content displayed on your screen and gives you optimized display performance. This user friendly interface allows you to select various modes like Office, Image, Entertainment, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimizes the contrast, color saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time with the press of a single button!

## SmartContrast



SmartContrast is a Philips technology that analyzes the contents you are displaying, automatically adjusting colors and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.

## TrueVision



TrueVision is industry-leading, proprietary Philips testing and algorithm technology for monitor adjustment and fine tuning, an extensive process that ensures ultimate display performance in compliance with a standard four-times more stringent than Microsoft's Vista requirements from each and every monitor that leaves the factory - not just a few review samples. Only Philips goes to these lengths to deliver this exacting level of color accuracy and display quality in every new monitor.

## Energy Star 5.0

Energy Star is a US EPA sponsored energy efficiency program also adopted by many other

countries. Energy Star certification ensures that you are buying a product which meets the latest power efficiency standards which operates with maximum power efficiency at all operational levels. New Philips monitors are certified for Energy Star 5.0 specifications and meet or exceed the standard. For example, in sleep mode Energy Star 5.0 requires less than 1watt power consumption, whereas Philips monitors consume less than 0.5watts. Further details can be obtained from [www.energystar.gov](http://www.energystar.gov)

## Eco-friendly materials

"Philips is committed to use sustainable, eco-friendly materials across its monitor range. All body plastic parts, metal chassis parts and packing materials use 100% recyclable materials. In some selected models we utilize upto 65% post consumer recycled plastics. Strict adherence to RoHS standards ensure substantial reduction or elimination of toxic substances like Lead, for example. Mercury content in monitors with CCFL backlight has been reduced significantly, while eliminated in monitors with LED backlight completely. Visit Philips @ <http://www.asimpleswitch.com/global/> to learn more.

## EPEAT Silver

Philips EPEAT Silver certified monitors ensure protection for human health and environment, and are highly energy efficient ensuring low emissions of climate changing green house gases. EPEAT program helps purchasers evaluate, compare and select Monitors based on 51 environmental criteria supported by US EPA. EPEAT Silver is valid only where Philips registers the product. Please visit [www.epeat.net](http://www.epeat.net) for registration status in your country.

## Built-in stereo audio

A pair of high quality stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.



# Specifications

## Picture/Display

- LCD panel type: TFT-LCD
- Backlight type: W-LED system
- Panel Size: 19 inch / 48.3 cm
- Effective viewing area: 408.24 (H) x 255.15 (V)
- Aspect ratio: 16:10
- Optimum resolution: 1440x900 @ 60Hz
- Response time (typical): 5 ms
- Brightness: 250 cd/m<sup>2</sup>
- Contrast ratio (typical): 1000:1
- SmartContrast: 20,000,000:1
- Pixel pitch: 0.283 x 0.283 mm
- Viewing angle: 170° (H) / 160° (V), @ C/R > 10
- Picture enhancement: SmartImage
- Display colors: 16.7 M
- Scanning Frequency: 30 -83 kHz (H) / 56 -75 Hz (V)
- sRGB

## Connectivity

- Signal Input: DVI-D (digital, HDCP), VGA (Analog)
- USB: USB 2.0 x 1
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): Stereo Audio

## Convenience

- Built-in Audio: 1Wx2
- User convenience: SmartImage, Audio, Brightness, Menu, Auto, Power On/Off
- OSD Languages: English, French, German, Italian, Russian, Simplified Chinese, Spanish, Portuguese
- Other convenience: Kensington lock, VESA mount (100x100mm)
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 7/Vista/XP

## Stand

- Height adjustment: up to 70 mm
- Swivel: -45/45 degree
- Tilt: -5/20 degree

## Power

- ECO mode: 7.7 W (typ.)
- On mode: 11.4 W (EnergyStar 5.0 test method)
- Standby mode: 0.3 W (typ.)
- Off mode: 0.3 W (typ.)
- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Power supply: Built-in, 100-240VAC, 50-60Hz

## Dimensions

- Product with stand (mm): 436 x 422 x 201 mm
- Product without stand (mm): 436 x 305 x 68 mm
- Packaging in mm (WxHxD): 508 x 485 x 172 mm

## Weight

- Product with stand (kg): 4.12 kg
- Product without stand (kg): 3.04 kg
- Product with packaging (kg): 6.18 kg

## Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- Temperature range (storage): -20°C to 60°C °C
- Relative humidity: 20%-80 %
- MTBF: 30,000 hour(s)

## Sustainability

- Environmental and energy: EPEAT Silver, RoHS, EnergyStar 5.0, Mercury Free
- Recyclable packaging material: 100 %

## Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC Class B, GOST, SEMKO, TCO 5.2, TUV Ergo, TUV/GS, UL/cUL, WEEE

## Cabinet

- Color: Silver / Black
- Finish: Texture



Issue date 2022-04-21

Version: 2.0.1

12 NC: 8670 000 93752  
EAN: 87 12581 65638 6

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)