



Philips
LED monitor with Digital
TV tuner

T-line
23" (58.4 cm)

231T1LSB



Experience great TV viewing on your LED monitor

Experience brilliant multimedia performance with this stylish, glossy and stunning Full HD 1080p display with Digital TV tuner! Combined with HDMI and AV inputs along with powerful sound the 231T1 takes entertainment to a new height!

Ready for digital

- MPEG4 HDTV reception via DVBT tuner

Best picture quality

- Full HD LCD display, with a 1920x1080p resolution
- Smart mode selects a perfect mode for what you are watching
- Up to 5ms response time for clear, fast moving action
- LED technology ensures natural colors
- SmartContrast 20000000:1 for incredible rich black details

Experience true multimedia

- SmartSound selects a perfect mode for audio performance
- HDMI-ready for top quality, multimedia experience
- Incredible Surround for enhanced audio enjoyment

Great convenience

- Built-in TV tuner for viewing TV programs on your PC monitor
- Remote control for TV functions

PHILIPS

LED monitor with Digital TV tuner
T-line 23" (58.4 cm)

231T1LSB/00

Highlights

LED technology

White LED's are solid state devices which light up to full, consistent brightness faster saving startup time. LED's are free from mercury content which allows for eco-friendly recycling and disposal process. LED's allow for better dimming control of LCD backlight, resulting in super high contrast ratio. It also gives superior color reproduction thanks to consistent brightness across the screen.

MPEG4 HDTV

HDTV allows you to watch High Definition TV in the best picture and sound quality without additional set-top box. With the built in DVBT tuner that can handle state-of-the-art MPEG-4 formats, you can now receive and watch High Definition TV programs and other rich multimedia contents in Digital Quality

Full HD LCD display 1920x1080p



The Full HD screen has the widescreen resolution of 1920 x 1080p. This is the highest resolution of HD sources for the best possible picture quality. It is fully future proof as it supports 1080p signals from all sources, including the most recent like Blu-ray and advanced HD game consoles. The signal processing is extensively upgraded to support this much higher signal quality and resolution. It produces brilliant flicker-free progressive scan pictures with superb brightness and colors.

HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. A HDMI cable enables high-quality digital video and audio all transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

Smart mode

The optimum picture and sound depends on various aspects like the video source, content type, surroundings of the room, type of display device etc. Smart Mode has predefined picture and sound settings conveniently preset by the way you use your TV. The 'Personal' setting, allows you to define the picture settings according to your preference, store it and gain easy access for future selection. All these conveniently built into your TV for optimal settings.

SmartContrast ratio 2000000:1



You want the LCD flat display with the highest contrast and most vibrant images. Philips advanced video processing combined with unique extreme dimming and backlight boosting technology results in vibrant images. SmartContrast will increase the contrast with excellent blacklevel and accurate rendition of dark shades and colors. It gives a bright, lifelike picture with high contrast and vibrant colors.

SmartSound

SmartSound allows you to select various modes like Movie, Games, Music etc thereby automatically activating pre defined frequencies to enhance the sound related to the function

Incredible Surround



Incredible Surround is an audio technology from Philips that dramatically magnifies the sound field to immerse you in the audio. Using state-of-the-art electronic phase shifting, Incredible Surround mixes sounds from left and right in such a way that it expands the virtual distance between the two speakers. This wider spread greatly enhances the stereo effect and creates a more natural sound dimension. Incredible Surround allows you to experience total surround with greater depth and width of sound, without the use of additional speakers.

5ms response time

Response time measures signal reaction speed in milliseconds. Faster response time is better as it eliminates visible image artifacts that could dampen your experience when viewing fast moving images or objects. In this case, this LCD panel gives you 5ms response time so that you can watch your LCD TV with a clear, fast moving action.

Built-in TV tuner

A television tuner built into a monitor to display television signals as well as computer data.

Remote control for TV

Remote control for TV functions



Specifications

Connectivity

- Signal Input: VGA (Analog), HDMI, PC Audio in
- Other connections: Common Interface, CVBS in, Audio L/R in, USB Service port, S/PDIF out (coaxial)
- Ext 1: SCART in
- Ext 2: YPbPr in, Audio L/R in
- Ext 3: CVBS out, Audio L/R out

Picture/Display

- Diagonal screen size (metric): 58.42 cm
- Diagonal screen size (inch): 23 inch
- Aspect ratio: Widescreen, 16:9
- Panel resolution: 1920 x 1080
- Brightness: 250 cd/m²
- Contrast ratio (typical): 1000:1
- SmartContrast: 20,000,000:1
- Response time (typical): 5 ms
- Viewing angle: 170° (H) / 160° (V)
- Picture enhancement: Progressive scan, TrueVision
- Screen enhancement: Anti-Reflection coated screen

Convenience

- Ease of Installation: Automatic Tuning System (ATS), Plug & Play
- Other convenience: VESA mount (100x100mm)
- Ease of Use: Program List, Side Control
- Screen Format Adjustments: Widescreen, Normal, Zoom 1, Zoom 2, Auto Format, Subtitle Zoom, Super Zoom
- Remote control: 231T1 Remote control
- Smart mode: Movie, Personal, Vivid, Standard, Eco
- SmartSound: Music, Speech, Personal
- Teletext: 1000 page Smart Text
- On-Screen Display languages: Bulgarian, Croatian, Czech, Danish, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Norwegian, Polish, Portuguese, Russian, Serbian, Simplified Chinese, Slovakian, Slovenian, Spanish, Swedish, Turkish

Sound

- Output power (RMS): 2 x 5W
- Sound Enhancement: Incredible Surround, Smart Sound
- Sound System: Mono, Stereo

Power

- Mains power: 100-240V, 50/60Hz
- Off mode: 0.18 W
- On mode: 33.40 W (Typ.@monitor mode)
- Ambient temperature: 0 °C to 40 °C

Supported Display Resolution

- Computer formats: 1920 x 1080, 60Hz
- Video formats: 480i, 60Hz, 480p, 60Hz, 576i, 50Hz, 576p, 50Hz, 720p, 50, 60Hz, 1080i, 50, 60Hz, 1080p, 50, 60Hz

Dimensions

- Product with stand (mm): 399 x 560 x 176 mm
- Packaging in mm (WxHxD): 477 x 653 x 160 mm
- Product without stand (mm): 364 x 560 x 65 mm

Weight


- Product with packaging (kg): 7.59 kg
- Product with stand (kg): 5.53 kg
- Product without stand (kg): 5.35 kg

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- TV system: PAL I, PAL B/G, PAL D/K, SECAM B/G, SECAM D/K, SECAM L/L'
- Video Playback: NTSC, SECAM, PAL
- Tuner Display: PLL
- Digital TV: DVB Terrestrial *

Accessories

- Included accessories: Table top stand, Power cord, Quick start guide, User Manual, Remote Control, Batteries for remote control

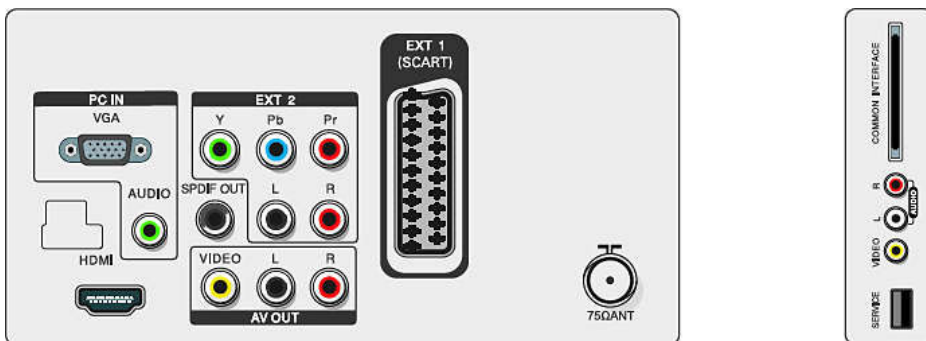

Issue date 2024-03-24

Version: 3.0.1

EAN: 87 12581 59592 0

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com