

PHILIPS

LCD monitor with
USB-C

Business Monitor

B Line

27" (68.6 cm)

2560 x 1440 (QHD)

276B9H



Simplify your connections

with USB-C

The Philips B line monitor with USB-C replaces cable clutter. View Quad HD image quality and re-charge your laptop all at the same time with a single USB-C cable. A secure pop-up webcam with Windows Hello offers personalised, greater security.

Excellent performance

- IPS technology for full colours and wide viewing angles
- Crystal clear images with Quad HD 2560 x 1440 pixels
- Secure sign-in with pop-up webcam

Designed for the way you work

- Built-in stereo speakers for multimedia
- SmartErgoBase enables user-friendly ergonomic adjustments
- Less eye fatigue with Flicker-Free technology
- LowBlue Mode for easy-on-the-eyes productivity
- EasyRead mode for a paper-like reading experience

Single cable USB-C connection

- Connect your notebook with one USB-C cable
- Power and re-charge compatible notebook from the monitor

Designed for sustainability

- PowerSensor saves up to 80% energy costs

Highlights

USB-C connection




This Philips display features a USB type-C connector with power delivery. With intelligent and flexible power management, you can power charge your compatible device directly. Its slim, reversible USB-C allows for easy, one-cable connection. You can watch high-resolution video and transfer data at super speed, while powering up and recharging your compatible device at the same time.

Power and re-charge notebook

This monitor features a built-in USB-C connector that meets USB Power Delivery standard. With intelligent and flexible power management, you can now power up and/or re-charge your compatible* Notebook directly from the Monitor using a single USB-C cable.

IPS technology

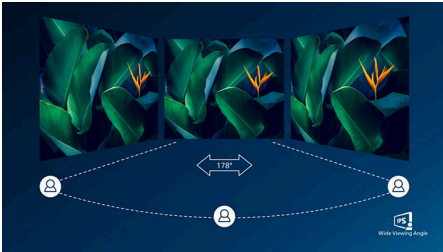

IPS displays use advanced technology that gives you extra-wide viewing angles of 178/178 degrees, making it possible to view the display from almost any angle — even in 90-degree Pivot mode! Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid colours, making it ideal not only for Photos,

films and web browsing, but also for professional applications that demand colour accuracy and consistent brightness at all times.

CrystalClear images



These Philips screens deliver Crystal Clear, Quad HD 2560 x 1440 or 2560 x 1080 pixel images. Utilising high-performance panels with a high-density pixel count, enabled by high bandwidth sources like USB-C, Displayport and HDMI, these new displays will make your images and graphics come alive. Whether you are a demanding professional who requires extremely detailed information for CAD-CAM solutions and uses 3D graphic applications, or a financial wizard working on huge spreadsheets, Philips displays will give you Crystal Clear images.

Pop-up webcam



Philips' innovative and secure webcam pops up when you need it and securely tucks back into the monitor when you are not using it. The webcam is also equipped with advanced sensors for Windows Hello facial recognition, which conveniently logs you into your Windows devices in less than 2 seconds, 3 times faster than a password.

Flicker-Free technology




Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-Free technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

LowBlue Mode



Studies have shown that just as ultra-violet rays can cause eye damage, shortwave-length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, the Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.

EasyRead mode

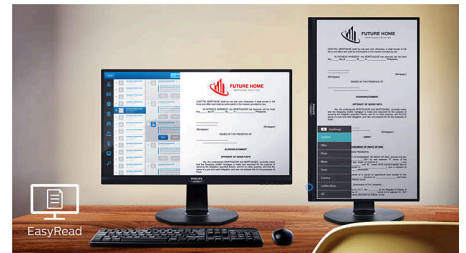

EasyRead mode for a paper-like reading experience



USB-C



Wide Viewing Angle



Quad HD



Flicker-free



LowBlue Mode



EasyRead



SmartErgo Base



PowerSensor


Business Monitor

LCD monitor with USB-C

276B9H/01

Highlights


SmartErgoBase

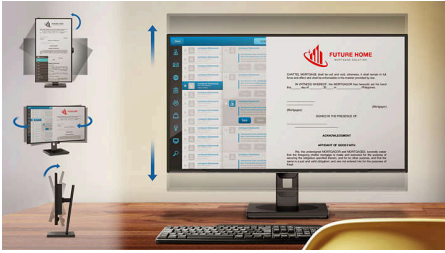

The SmartErgoBase is a monitor base that delivers ergonomic display comfort and provides cable management. The base can swivel, tilt and rotate to various angles to ensure maximum comfort. The height-adjustable stand guarantees the optimal viewing level, reducing the physical

strains of a long workday, while cable management reduces cable clutter and keeps the workspace neat and professional.

PowerSensor

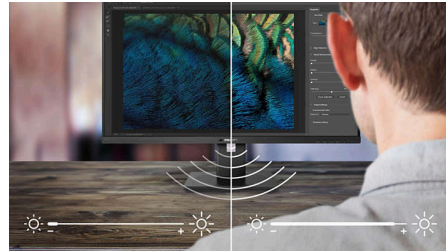

PowerSensor is a built-in 'people sensor' that transmits and receives harmless infrared signals to determine if the user is present and then automatically reduces monitor brightness when

then user steps away from the desk, cutting energy costs by up to 80 percent and prolonging monitor life

Built-in stereo speakers



A pair of high-quality stereo speakers built into a display device. They may be visible front firing, or invisible down firing, top firing, rear firing etc. depending on model and design.



USB-C



Wide Viewing Angle



Quad HD



Flicker-free



LowBlue Mode



EasyRead

Specifications

Picture/Display

Panel Size: 27 inch/68.6 cm
Aspect ratio: 16:9
LCD panel type: IPS technology
Backlight type: W-LED system
Pixel pitch: 0.233 x 0.233 mm
Brightness: 350 cd/m²
Display colours: 16.7 M
Colour gamut (typical): NTSC 111%*, sRGB 124%*
Contrast ratio (typical): 1000:1
SmartContrast: 50,000,000:1
Response time (typical): 4 ms (Grey to Grey)*
Viewing angle: 178° (H)/178° (V), @ C/R > 10
Picture enhancement: SmartImage
Maximum resolution: 2560 x 1440 @ 75 Hz*
Effective viewing area: 596.7 x 335.7 mm
Scanning Frequency: 30–114 kHz (H)/48–75 Hz (V)
sRGB
Flicker-free
Pixel Density: 109 PPI
LowBlue Mode
Display Screen Coating: Anti-Glare, 3H, Haze 25%
EasyRead
Adaptive sync

Connectivity

Signal Input: DisplayPort 1.2 x 1, HDMI 1.4 x 1, USB-C 3.2 Gen 1 x 1 (upstream, power delivery up to 65 W)
Sync Input: Separate Sync
Audio (In/Out): Audio out
USB: USB-C x 1 (upstream), USB 3.2 x 3 (downstream with 1 fast charge B.C 1.2)
HDCP: HDCP 1.4 (DP/HDMI/USB-C)

USB

Power delivery: USB PD version 3.0
Super speed: Data and Video transfer
DP: Built-in DisplayPort Alt mode
USB-C max. power delivery: Up to 65 W (5 V/3 A; 9 V/3 A; 10 V/3 A; 12 V/3 A; 15 V/3 A; 20 V/3.25 A)
USB-C: Reversible plug connector

Convenience

Built-in Speakers: 2 W x 2
Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10/8.1/8/7

User convenience: SmartImage, Input, PowerSensor, Menu, Power On/Off
OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
Other convenience: Kensington lock, VESA mount (100 x 100 mm)
Control software: SmartControl
Built-in webcam: Pop-up 2.0 megapixel FHD camera with microphone and LED indicator (for Windows 10 Hello)

Stand

Height adjustment: 150 mm
Pivot: -/+ 90 degree
Swivel: -/+ 175 degree
Tilt: -5/30 degree

Power

ECO mode: 14.9 W (typ.)
Power supply: Built-in, 100–240 VAC, 50–60 Hz
Off mode: Zero watts with Zero switch
On mode: 18.6 W (typ.) (EnergyStar test method)
Standby mode: 0.3 W (typ.)
Power LED indicator: Operation - White, Standby mode - White (flashing)
Energy Label Class: F

Dimensions

Packaging in mm (W x H x D): 690 x 462 x 250 mm
Product without stand (mm): 614 x 372 x 61 mm
Product with stand (max height): 614 x 558 x 263 mm

Weight

Product with packaging (kg): 10.35 kg
Product with stand (kg): 7.85 kg
Product without stand (kg): 5.10 kg

Operating conditions

Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
Temperature range (operation): 0°C to 40 °C
Relative humidity: 20%-80 %
Temperature range (storage): -20°C to 60 °C
MTBF (demonstrated): 70,000 hrs (excluded backlight)

Sustainability

Environmental and energy: PowerSensor, Energy Star 8.0, EPEAT*, TCO Certified Edge, RoHS
Post consumer recycled plastic: 85%
Recyclable packaging material: 100 %
Specific Substances: PVC/BFR free housing, Mercury free

Compliance and standards

Regulatory Approvals: CB, TUV/GS, TUV Ergo, CU-EAC, EAEU RoHS, FCC Class B, ICES-003, CE Mark

Cabinet

Finish: Texture
Foot: Black
Front bezel: Black
Rear cover: Black

What's in the box?

Cables: HDMI cable, DP cable, USB-C to C cable, Power cable
Monitor with stand
User Documentation



* "IPS" word mark / trademark and related patents on technologies belong to their respective owners.
* The maximum resolution works for either USB-C, DP or HDMI input.
* Response time value equal to SmartResponse
* NTSC Area based on CIE 1976
* sRGB Area based on CIE1931
* Activities such as screen sharing and online streaming over the Internet can impact your network performance. Your hardware and network bandwidth will determine the overall audio and video quality.
* For USB-C power and charging function, your Notebook/device must support USB-C standard Power Delivery specifications. Please check with your Notebook user manual or manufacturer for more details.
* For Video transmission via USB-C, your Notebook/device must support USB-C DP Alt mode
* EPEAT rating is valid only where Philips registers the product. Please visit <https://www.epeat.net/> for registration status in your country.
* The monitor may look different from feature images.