

Philips  
LCD monitor

V Line  
24" (61 cm)

246V5LHAB



## Enjoy great LED pictures in vivid colors

with stereo speakers

Enjoy vivid LED pictures with this attractive, glossy design display. Equipped with HDMI and stereo speakers, it's a great choice!

### **Vivid pictures every time**

- LED technology for vivid colors
- SmartContrast for rich black details
- 16:9 Full HD display for crisp detailed images

### **Modern design**

- Attractive glossy design
- VESA mount allows for flexibility

### **Experience multimedia**

- Powerful sound with 2x2 watts RMS speakers
- HDMI-ready for Full HD entertainment

### **Greener everyday**

- Mercury Free eco-friendly display
- Low power consumption saves energy bills
- Energy Star for energy efficiency and low power consumption

# PHILIPS

# Highlights

## LED technology

White LED's are solid state devices which light up to full, consistent brightness faster saving startup time. LED's are free from mercury content which allows for eco-friendly recycling and disposal process. LED's allow for better dimming control of LCD backlight, resulting in super high contrast ratio. It also gives superior color reproduction thanks to consistent brightness across the screen.

## Built-in stereo speakers

Now you can enjoy all your multimedia and social applications with stereo sound. These built in speakers not only sound great, but also helps you to get rid of external wire clutter and save valuable desktop space.


## SmartContrast



SmartContrast is a Philips technology that analyzes the contents you are displaying, automatically adjusting colors and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected,

contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.

## 16:9 Full HD display

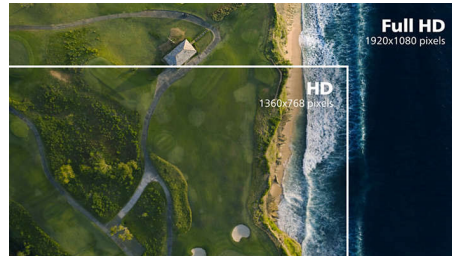

Picture quality matters. Regular displays deliver quality, but you expect more. This display features enhanced Full HD 1920 x 1080 resolution. With Full HD for crisp detail paired with high brightness, incredible contrast and realistic colors expect a true to life picture.

## HDMI Ready



HDMI-ready

An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. A HDMI cable enables high-quality digital video and

audio all transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

## Mercury Free

Philips monitors with LED backlighting are free of Mercury content, one of the most toxic natural substances, which affects humans and animals. This reduces the environmental impact of the display throughout its life-cycle, from manufacturing to disposal.

## Low power consumption

Low power consumption saves energy bills

## Attractive glossy design

Attractive glossy design

## VESA mount

VESA mount allows for flexibility

## Energy Star

Energy Star for energy efficiency and low power consumption



# Specifications

## Connectivity

- Signal Input: VGA (Analog ), HDMI
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): PC audio-in, Headphone out

## Picture/Display

- Panel Size: 24 inch / 61 cm
- Aspect ratio: 16:9
- LCD panel type: TFT-LCD
- Backlight type: W-LED system
- Pixel pitch: 0.277 x 0.277 mm
- Optimum resolution: 1920 x 1080 @ 60 Hz
- Brightness: 250 cd/m<sup>2</sup>
- Display colors: 16.7 M
- Contrast ratio (typical): 1000:1
- SmartContrast: 10,000,000:1
- Response time (typical): 1 ms GtG\*
- Viewing angle: 170° (H) / 160° (V), @ C/R &gt; 10
- Effective viewing area: 531.36 (H) x 298.89 (V)
- Scanning Frequency: 30 -83 kHz (H) / 56 -75 Hz (V)
- sRGB

## Convenience

- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
- Built-in Audio: 2.0W x 2
- User convenience: Auto/Down, Brightness/Back, Menu/OK, Power On/Off, Volume/Up
- OSD Languages: English, French, German, Italian, Portuguese, Russian, Spanish, Simplified Chinese, Turkish
- Other convenience: Kensington lock, VESA mount (100x100mm)

## Stand

- Tilt: -5/20 degree

## Power

- Power supply: Built-in, 100-240VAC, 50-60Hz
- Off mode: 0.3 W (typ.)
- On mode: 16.86 W (EnergyStar 7.0 test method)

- Standby mode: 0.5 W (typ.)
- Power LED indicator: Operation - White, Standby mode- White (blinking)

## Dimensions

- Product with stand (mm): 565 x 435 x 238 mm
- Product with stand in inch: 22.2 x 17.1 x 9.4 inch
- Packaging in mm (WxHxD): 613 x 446 x 131 mm
- Product without stand (mm): 565 x 354 x 63 mm
- Packaging in inch (WxHxD): 24.1 x 17.6 x 5.2 inch
- Product without stand in inch: 22.2 x 13.9 x 2.5 inch

## Weight

- Product with packaging (kg): 6.05 kg
- Product with stand (kg): 4.65 kg
- Product with packaging (lb): 13.31 lb
- Product with stand (lb): 10.23 lb
- Product without stand (kg): 4.22 kg
- Product without stand (lb): 9.28 lb

## Operating conditions

- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- Temperature range (operation): 0°C to 40°C °C
- MTBF: 30,000 hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C

## Sustainability

- Environmental and energy: EnergyStar 7.0, RoHS, Mercury Free
- Recyclable packaging material: 100 %

## Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, cETLus, FCC Class B, GOST, PSB, SASO, SEMKO, TCO Certified, TUV/ISO9241-307, WEEE

## Cabinet

- Color: Black
- Finish: Glossy (front bezel) /Texture (rear cover)



Issue date 2024-03-24

Version: 7.0.1

UPC: 6 09585 23666 0

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* HDMI cables vary depending on region and models.  
\* Response time value equal to SmartResponse