



Philips
LCD Monitor with Digital
TV tuner

51 cm (20") w T-line
1600 x 900 (HD+)

201T1SB



Digital HD TV monitor in a stylish package

Experience brilliant multimedia performance with this stylish, glossy and stunning display with Digital HD TV tuner! Combined with HDMI and AV inputs along with powerful sound, the 201T1 takes entertainment to new heights!

Great picture quality

- HD Ready for the highest quality display of HD signals
- HD+ LCD display, with a 1600 x 900 resolution
- SmartContrast 50000:1 for incredible rich black details
- Smart mode selects a perfect mode for what you are watching
- Up to 5 ms response time for clear, fast-moving action

Great convenience

- Built-in TV tuner for viewing TV programmes on your PC monitor
- Remote control for TV functions

Experience true multimedia

- HDMI-ready for top quality, multimedia experience
- SmartSound selects a perfect mode for audio performance
- Incredible Surround for enhanced audio enjoyment

Ready for digital

- MPEG4 HDTV reception via DVBT tuner

PHILIPS

Highlights

MPEG4 HDTV

HDTV allows you to watch High Definition TV in the best picture and sound quality without an additional set-top box. With the built in DVBT tuner that can handle state-of-the-art MPEG-4 formats, you can now receive and watch High Definition TV programmes and other rich multimedia content in Digital Quality

HD Ready



Enjoy the exceptional picture quality of High Definition pictures and be fully prepared for HD sources like HDTV set-top boxes and Blu-ray discs. HD Ready is a protected label that offers picture quality beyond that of progressive scan. It conforms to strict standards laid out by EICTA to offer an HD screen that displays the benefits of the resolution and picture quality of a High Definition signal. It has a universal connection for both analogue YPbPr and uncompressed Digital connection of DVI or HDMI, supporting HDCP. It can display 720p, and 1080i signals at 50 and 60 Hz.

HDMI Ready



HDMI-ready

An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. An HDMI cable enables high-quality digital video and audio to be transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

Smart mode

The optimum picture and sound depends on various aspects like the video source, content type, surroundings of the room, type of display device etc. Smart Mode has predefined picture and sound settings conveniently pre-set by the way you use your TV. The 'Personal' setting, allows you to define the picture settings according to your preference, store it and gain easy access for future selection. All these conveniently built into your TV for optimal settings.

SmartContrast ratio 50000:1



With SmartContrast



Without SmartContrast

You want the LCD flat display with the highest contrast and most vibrant images. Philips

advanced video processing combined with unique extreme dimming and backlight-boosting technology results in vibrant images. SmartContrast will increase the contrast with excellent black level and accurate rendition of dark shades and colours. It gives a bright, lifelike picture with high contrast and vibrant colours.

Incredible Surround



Incredible Surround is an audio technology from Philips that dramatically magnifies the sound field to immerse you in the audio. Using state-of-the-art electronic phase shifting, Incredible Surround mixes sounds from left and right in such a way that it expands the virtual distance between the two speakers. This wider spread greatly enhances the stereo effect and creates a more natural sound dimension. Incredible Surround allows you to experience total surround with greater depth and width of sound, without the use of additional speakers.

5 ms response time

Response time measures signal reaction speed in milliseconds. A faster response time is better as it eliminates visible image artefacts that could dampen your experience when viewing fast-moving images or objects. In this case, this LCD panel gives you a 5 ms response time so that you can watch your LCD TV with a clear, fast-moving action.



Specifications

Picture/Display

- Aspect ratio: Widescreen, 16:9
- Brightness: 250 cd/m²
- SmartContrast: 50000:1
- Contrast ratio (typical): 1000:1
- Diagonal screen size: 20 inch / 50.8 cm
- Panel resolution: 1600 x 900
- Picture enhancement: Progressive scan, TrueVision
- Response time (typical): 5 ms
- Screen enhancement: Anti-Reflection coated screen
- Viewing angle: 170° (H)/160° (V)

Supported Display Resolution

Computer formats

Resolution	Refresh rate
1600 x 900	60 Hz

Video formats

Resolution	Refresh rate
480i	60 Hz
480p	60 Hz
576i	50 Hz
576p	50 Hz
720p	50, 60 Hz
1080i	50, 60 Hz
1080p	50, 60 Hz

Sound

- Output power (RMS): 2 x 3 W
- Sound Enhancement: Incredible Surround, Smart Sound
- Sound System: Mono, Stereo

Convenience

- Ease of Installation: Automatic Tuning System (ATS), Plug and Play
- Ease of Use: Programme List, Side Control
- Remote control: 201T1 Remote control
- On-Screen Display languages: Bulgarian, Croatian, Czech, Danish, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Norwegian, Polish, Portuguese, Russian, Serbian, Simplified Chinese, Slovakian, Slovenian, Spanish, Swedish, Turkish

- Other convenience: VESA mount (100 x 100 mm)
- Screen Format Adjustments: Widescreen, Normal, Zoom 1, Zoom 2
- Smart mode: Movie, Personal, Vivid, Standard, Eco
- SmartSound: Music, Speech, Personal
- Teletext: 1000-page Smart Text

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- TV system: PAL I, PAL B/G, PAL D/K, SECAM B/G, SECAM D/K, SECAM L/L'
- Video Playback: NTSC, SECAM, PAL
- Tuner Display: PLL
- Digital TV: DVB Terrestrial*
- Tuner bands: Hyperband, S-Channel, UHF, VHF

Connectivity

- Signal Input: VGA (Analogue), HDMI, PC Audio in
- Ext 1: SCART in
- Ext 2: YPbPr in, Audio L/R in
- Ext 3: CVBS out, Audio L/R out
- Other connections: Common Interface, CVBS in, Audio L/R in, USB Service port, S/PDIF out (coaxial)

Power

- On mode: 29 W (Typ.@monitor mode)
- Off mode: <0.3 W
- Ambient temperature: 0 °C to 40 °C
- Mains power: 100-240 V, 50/60 Hz

Dimensions


- Packaging in mm (W x H x D): 420 x 565 x 160 mm
- Product with stand (mm): 361 x 490 x 176 mm
- Product without stand (mm): 327 x 490 x 65 mm

Weight

- Product with stand (kg): 4.9 kg
- Product without stand (kg): 4.72 kg
- Product with packaging (kg): 6.6 kg

Accessories

- Included accessories: Tabletop stand, Power cord, Quick start guide, User Manual, Remote Control, Batteries for remote control

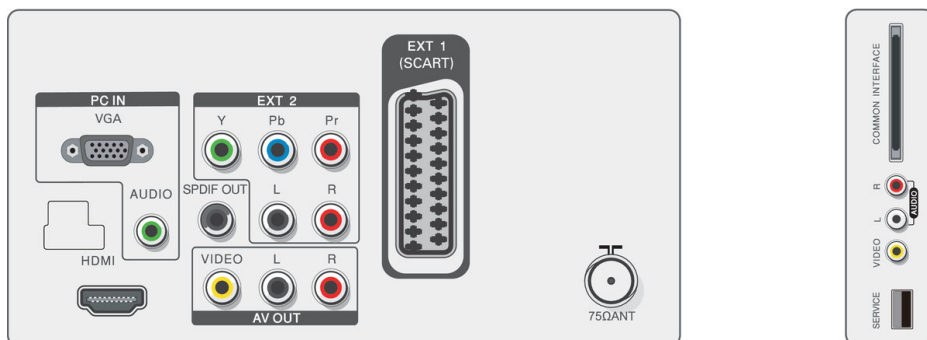

Issue date 2019-05-10

Version: 2.0.3

12 NC: 8670 000 55008
EAN: 87 12581 49401 8

© 2019 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com