



Philips  
LCD monitor

### V Line

24" (61 cm)  
1920 x 1080 (Full HD)

246V5LDSB

## Enjoy great LED pictures in vivid colours

Enjoy vivid LED pictures with this attractive, glossy design display. Equipped with HDMI, it's a great choice!

#### **Vivid pictures every time**

- LED technology for vivid colours
- SmartContrast for rich black details
- 16:9 Full HD display for crisp, detailed images
- Less eye fatigue with Flicker-Free technology

#### **Modern design**

- Attractive glossy design
- VESA mount allows for flexibility

#### **Experience multimedia**

- HDMI-ready for Full HD entertainment

#### **Greener every day**

- Mercury Free eco-friendly display
- Low power consumption saves energy bills
- Energy Star for energy efficiency and low power consumption

# PHILIPS

LCD monitor  
V Line 24" (61 cm), 1920 x 1080 (Full HD)


246V5LDSB/00

# Highlights

## LED technology

White LED's are solid state devices which light up to full, consistent brightness faster saving startup time. LED's are free from mercury content, which allows for eco-friendly recycling and disposal process. LED's allow for better dimming control of the LCD backlight, resulting in a super high contrast ratio. It also gives superior colour reproduction thanks to consistent brightness across the screen.

## 16:9 Full HD display

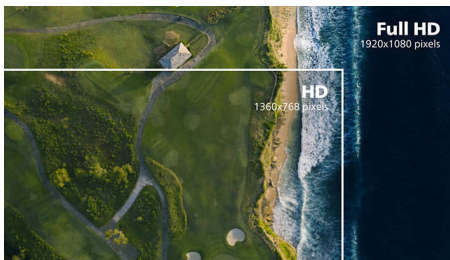

Picture quality matters. Regular displays deliver quality, but you expect more. This display features enhanced Full HD 1920 x 1080 resolution. With Full HD for crisp detail paired with high brightness, incredible contrast and realistic colours, expect a true-to-life picture.

## Flicker-Free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-Free technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

## SmartContrast



SmartContrast is a Philips technology that analyses the contents you are displaying, automatically adjusting colours and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.

## HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. An HDMI cable enables high-quality digital video and audio to be transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

## Mercury Free

Philips monitors with LED backlighting are free from Mercury, one of the most toxic natural substances, which affects humans and animals. This reduces the environmental impact of the display throughout its lifecycle, from manufacturing to disposal.

## Low power consumption

Low power consumption saves energy bills

## Attractive glossy design

Attractive glossy design

## VESA mount

VESA mount allows for flexibility

## Energy Star

Energy Star for energy efficiency and low power consumption



# Specifications

## Connectivity

- Signal Input: VGA (Analogue), DVI-D (digital, HDCP), HDMI (HDCP)
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): HDMI audio out

## Picture/Display

- Panel Size: 24 inch/61 cm
- Aspect ratio: 16:9
- LCD panel type: TFT-LCD
- Backlight type: W-LED system
- Pixel pitch: 0.277 x 0.277 mm
- Optimum resolution: 1920 x 1080 @ 60 Hz
- Brightness: 250 cd/m<sup>2</sup>
- Display colours: 16.7 M
- Contrast ratio (typical): 1000:1
- SmartContrast: 10,000,000:1
- Response time (typical): 1 ms (Grey to Grey)\*
- Viewing angle: 170° (H)/160° (V), @ C/R &gt; 10
- Effective viewing area: 531.36 (H) x 298.89 (V)
- Scanning Frequency: 30–83 kHz (H)/56–76 Hz (V)
- sRGB

## Convenience

- Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
- User convenience: Power On/Off, Menu/OK, Brightness/Back, 4:3 Wide/Up, Auto/Down
- OSD Languages: English, French, German, Italian, Portuguese, Russian, Simplified Chinese, Spanish, Turkish, Brazil Portuguese, Czech, Dutch, Finnish, Greek, Hungarian, Japanese, Korean, Polish, Swedish, Traditional Chinese, Ukrainian
- Other convenience: Kensington lock, VESA mount (100 x 100 mm)

## Stand

- Tilt: -5/20 degree

## Power

- Power supply: Built-in, 100–240 VAC, 50–60 Hz
- Off mode: 0.5 W (typ.)

- On mode: 15.66 W (EnergyStar 7.0 test method)
- Standby mode: 0.5 W (typ.)
- Power LED indicator: Operation - White, Standby mode - White (flashing)
- Energy Label Class: E

## Dimensions

- Product with stand (mm): 565 x 435 x 238 mm
- Packaging in mm (W x H x D): 613 x 446 x 131 mm
- Product without stand (mm): 565 x 354 x 63 mm

## Weight

- Product with packaging (kg): 6.05 kg
- Product with stand (kg): 4.65 kg
- Product without stand (kg): 4.22 kg

## Operating conditions

- Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
- Temperature range (operation): 0°C to 40°C °C
- MTBF: 30,000 hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C

## Sustainability

- Environmental and energy: EnergyStar 7.0, RoHS, Mercury Free
- Recyclable packaging material: 100 %

## Compliance and standards

- Regulatory Approvals: CE Mark, FCC Class B, cETLus, CU-EAC, SEMKO, TCO Certified, BSMI, TUV/ISO9241-307, WEEE

## Cabinet

- Colour: Black
- Finish: Glossy (front bezel)/Textured (rear cover)

## What's in the box?

- Cables: D-Sub cable, Power cable
- Monitor with stand
- User Documentation



Issue date 2024-04-29

Version: 2.0.1

EAN: 87 12581 74172 3

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Response time value equal to SmartResponse