



Philips
LCD monitor with
SmartControl Lite

V Line
24" (61 cm)

246V5LSB

Enjoy great LED pictures in vivid colors

Enjoy vivid LED pictures with this attractive, glossy design display. Equipped with SmartControl lite, it's a great choice!

Vivid pictures every time

- Easy display performance tuning with SmartControl Lite
- LED technology for vivid colors
- SmartContrast for rich black details
- 16:9 Full HD display for crisp detailed images

Modern design

- Attractive glossy design
- VESA mount allows for flexibility

Greener everyday

- Mercury Free eco-friendly display
- Low power consumption saves energy bills
- Energy Star for energy efficiency and low power consumption

PHILIPS

Highlights

LED technology

White LED's are solid state devices which light up to full, consistent brightness faster saving startup time. LED's are free from mercury content which allows for eco-friendly recycling and disposal process. LED's allow for better dimming control of LCD backlight, resulting in super high contrast ratio. It also gives superior color reproduction thanks to consistent brightness across the screen.

SmartControl Lite

SmartControl Lite is the next generation 3D icon based GUI monitor control software. This allows user to fine-tune most parameters of the monitor like Color, Brightness, screen calibration, Multi-media, ID management, etc with the mouse.


SmartContrast



SmartContrast is a Philips technology that analyzes the contents you are displaying,

automatically adjusting colors and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.

16:9 Full HD display

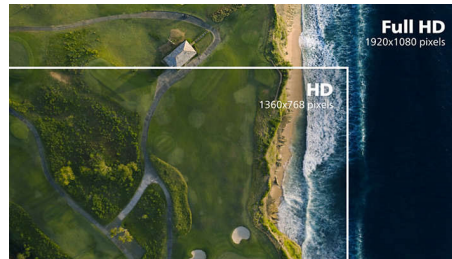

Picture quality matters. Regular displays deliver quality, but you expect more. This display features enhanced Full HD 1920 x 1080 resolution. With Full HD for crisp detail paired with high brightness, incredible contrast and realistic colors expect a true to life picture.

Mercury Free

Philips monitors with LED backlighting are free of Mercury content, one of the most toxic natural substances, which affects humans and animals. This reduces the environmental

impact of the display throughout its life-cycle, from manufacturing to disposal.

Low power consumption

Low power consumption saves energy bills

Attractive glossy design

Attractive glossy design

VESA mount

VESA mount allows for flexibility

Energy Star

Energy Star for energy efficiency and low power consumption



Specifications

Connectivity

- Signal Input: VGA (Analog), DVI-D (digital, HDCP)
- Sync Input: Separate Sync, Sync on Green

Picture/Display

- Panel Size: 24 inch / 61 cm
- Aspect ratio: 16:9
- LCD panel type: TFT-LCD
- Backlight type: W-LED system
- Pixel pitch: 0.277 x 0.277 mm
- Optimum resolution: 1920 x 1080 @ 60 Hz
- Brightness: 250 cd/m²
- Display colors: 16.7 M
- Contrast ratio (typical): 1000:1
- SmartContrast: 10,000,000:1
- Response time (typical): 5 ms
- Viewing angle: 170° (H) / 160° (V), @ C/R > 10
- Effective viewing area: 531.36 (H) x 298.89 (V)
- Scanning Frequency: 30 -83 kHz (H) / 56 -75 Hz (V)
- sRGB

Convenience

- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
- User convenience: Auto/Down, 4:3 Wide/Up, Brightness/Back, Menu/OK, Power On/Off
- OSD Languages: English, French, German, Italian, Portuguese, Russian, Simplified Chinese, Spanish, Turkish
- Other convenience: Kensington lock, VESA mount (100x100mm)

Stand

- Tilt: -5/20 degree

Power

- Power supply: Built-in, 100-240VAC, 50-60Hz

- Off mode: 0.3 W (typ.)
- On mode: 16.86 W (EnergyStar 7.0 test method)
- Standby mode: 0.5 W (typ.)
- Power LED indicator: Operation - White, Standby mode- White (blinking)

Dimensions

- Product with stand (mm): 565 x 435 x 238 mm
- Packaging in mm (WxHxD): 613 x 446 x 131 mm
- Product without stand (mm): 565 x 354 x 63 mm

Weight

- Product with packaging (kg): 6.05 kg
- Product with stand (kg): 4.65 kg
- Product without stand (kg): 4.22 kg

Operating conditions

- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- Temperature range (operation): 0°C to 40°C °C
- MTBF: 30,000 hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C

Sustainability

- Environmental and energy: EnergyStar 7.0, RoHS, Mercury Free
- Recyclable packaging material: 100 %

Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, cETLus, FCC Class B, GOST, PSB, SASO, SEMKO, TCO Certified, TUV/ISO9241-307, WEEE

Cabinet

- Color: Black
- Finish: Glossy (front bezel) /Texture (rear cover)



Issue date 2024-03-23

Version: 3.0.1

EAN: 87 12581 67049 8

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com