

Philips Gaming Monitor  
Full HD Curved LCD  
monitor

## Momentum

27" (68.6 cm)  
1920 x 1080 (Full HD)

278M6QJEB5



# Get in the moment

The new curved Momentum monitor gets you in the moment. AMD FreeSync™ technology, 165Hz fast refresh rate, and 1ms response time give flawlessly smooth entertainment experience for playing games and watching movies.

### Built for fast action

- 165Hz refresh rates for ultra-smooth, brilliant images
- AMD FreeSync™ Premium; tear free, stutter free, fluid gaming
- SmartImage game mode optimized for gamers
- 1ms (MPRT) fast response for crisp image and smooth gameplay

### Superb Picture Quality

- VA display gives awesome images with wide viewing angle

### Design to enhance the senses

- Crafted with premium materials for a sophisticated look
- Curved display design for more immersive experience

### Get comfortable

- Less eye fatigue with Flicker-free technology
- LowBlue Mode for easy on-the-eyes productivity
- Height-adjustable for better ergonomic comfort

# PHILIPS

Full HD Curved LCD monitor  
Momentum 27" (68.6 cm), 1920 x 1080 (Full HD)

# Highlights

## Curved display design




Desktop monitors offer a personal user experience, which suits a curve design very well. The curved screen provides a pleasant yet subtle immersion effect, which focuses on you at the center of your desk.

## VA display



Philips VA LED display uses an advanced vertical alignment technology which gives you super-high static contrast ratios for extra vivid and bright images. While standard office applications are handled with ease, it is especially suitable for photos, web-browsing, movies, gaming, and demanding graphical applications. It's optimized pixel management technology gives you 176/176 degree extra wide viewing angle, resulting in crisp images.

## AMD FreeSync™ Premium

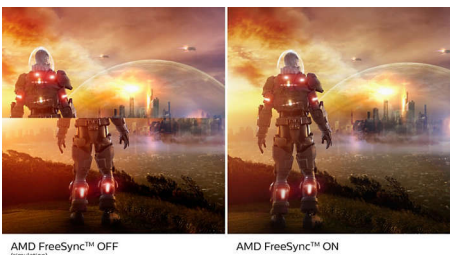

Gaming shouldn't be a choice between choppy gameplay or broken frames. AMD FreeSync™ Premium equips serious gamers with a fluid, tear-free gameplay experience at peak performance. There are no compromises,

game confidently with a high refresh rate, low framerate compensation, and low latency.

## 165Hz Gaming



You play intense, competitive gaming. You demand display with lag free, ultra-smooth images. This Philips display redraws the screen image up-to 165 times per second, effectively faster than a standard display. A lower frame rate can make enemies appear to jump from spot to spot on the screen, making them difficult targets to hit. With 165Hz frame rate, you get those critical missing images on the screen which shows enemy movement in ultra-smooth motion so you can easily target them. With ultra-low input lag and no screen tearing, this Philips display is your perfect gaming partner

## SmartImage Game mode



The new Philips gaming display has quick access OSD fine tuned for gamers, offering you multiple options. "FPS" mode (First person shooting) improves dark themes in games, allowing you to see hidden objects in dark areas. "Racing" mode adapts display with fastest response time, high color, along with image adjustments. "RTS" mode (Real time strategy) has a special SmartFrame mode which enables highlighting of specific area and allows for size and image adjustments. Gamer 1 and Gamer 2 enable you to save personal customized settings based on different games, ensuring best performance.


278M6QJEB5/69

## 1ms MPRT fast response



MPRT (motion picture response time) is more intuitive way to describe the response time, which directly refers the duration from seeing blurry noise to clean and crisp images. Philips gaming monitor with 1 ms MPRT effectively eliminates smearing and motion blur, delivers shaper and precise visuals to enhance gaming experience. Best choice for playing thrilling and twitch-sensitive games.

## LowBlue Mode

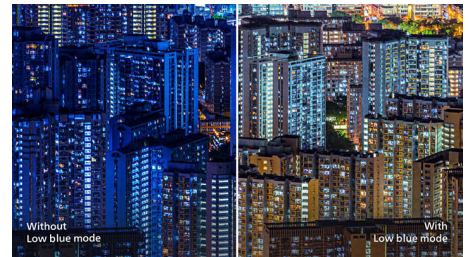

Studies have shown that just as ultra-violet rays can cause eye damage, shortwave length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.

## Flicker-free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-free Technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.



# Specifications

## Connectivity

- Signal Input: VGA (Analog), DisplayPort 1.2, HDMI 2.0 x 2
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): Audio out

## Picture/Display

- Panel Size: 27 inch / 68.6 cm
- Aspect ratio: 16:9
- LCD panel type: VA LCD
- Backlight type: W-LED system
- Pixel pitch: 0.311 x 0.311 mm
- Optimum resolution: 1920 x 1080 @ 165 Hz
- Brightness: 250 cd/m<sup>2</sup>
- Display colors: 16.7 M
- Color gamut (typical): NTSC 102.1%\*, sRGB 130.2%\*
- Contrast ratio (typical): 3000:1
- SmartContrast: 80,000,000:1
- Response time (typical): 1 ms (MPRT)
- Viewing angle: 178° (H) / 178° (V), @ C/R > 10
- Picture enhancement: SmartImage game
- Effective viewing area: 596.74 (H) x 335.66 (V) - at a 1800R curvature\*
- Scanning Frequency: 104 - 186 kHz (H) / 30 - 165 Hz (V)
- sRGB
- Flicker-free
- Pixel Density: 82 PPI
- LowBlue Mode
- Display Screen Coating: Anti-Glare, 3H, Haze 40%
- AMD FreeSync™ technology: Premium

## Convenience

- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
- User convenience: Menu/OK, Input/Up, SmartImage Game/Return, SmartSize/Down, Power On/Off
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (100x100mm)
- Control software: SmartControl

## Stand

- Height adjustment: 130 mm
- Tilt: -5/20 degree

## Power

- Power supply: External, 100-240VAC, 50-60Hz
- Off mode: <math>0.3\text{ W}</math> (typ.)
- On mode: 33.8 W (typ.)
- Standby mode: <math>0.5\text{ W}</math> (typ.)
- Power LED indicator: Operation - White, Standby mode - White (blinking)

## Dimensions

- Packaging in mm (WxHxD): 694 x 520 x 358 mm
- Product without stand (mm): 612 x 369 x 52 mm
- Product with stand(max height): 612 x 416 x 286 mm

## Weight

- Product with packaging (kg): 9.69 kg
- Product with stand (kg): 6.25 kg
- Product without stand (kg): 4.51 kg

## Operating conditions

- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- Temperature range (operation): 0 to 40 °C
- MTBF: 50,000 hrs (excluding backlight) hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20 to 60 °C

## Sustainability

- Environmental and energy: RoHS, WEEE
- Recyclable packaging material: 100 %
- Specific Substances: Mercury free, PVC / BFR free housing

## Compliance and standards

- Regulatory Approvals: CB, CE Mark, CCC, CECP, CEL, PSB

## Cabinet

- Color: Black
- Finish: Glossy



Issue date 2024-03-24

Version: 6.0.1

EAN: 87 12581 76032 8

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Radius of the arc of the display curvature in mm

\* Response time value equal to SmartResponse

\* NTSC Area based on CIE1976

\* sRGB Area based on CIE1931

\* 2020 Advanced Micro Devices, Inc. All rights reserved. AMD, the AMD Arrow logo, AMD FreeSync™ and combinations thereof are trademarks of Advanced Micro Devices, Inc. Other product names used in this publication are for identification purposes only and may be trademarks of their respective companies.

\* The monitor may look different from feature images.