



Philips Signage Solutions  
Q-Line Display

75"

Direct LED Backlight  
Ultra HD



75BDL3511Q

## Stand out

Easy-setup 18/7 display.

Inform and enthrall with a Philips Q-Line Professional Ultra HD Display. This reliable solution can be up and running as quickly as you need.

### Cost-effective system solution

- Energy-saving automatic backlight control
- Integrated media player. Easily schedule USB content
- FailOver ensures that content is always playing
- Easy control. Remotely manage networked displays

### Effortless setup. Total control.

- Operate, monitor and maintain with CMND and Control
- OPS slot allows for PC embedding without cabling
- Schedule what you want, when you want with SmartPlayer

### Superb picture. Ultra-high brightness.

- Ultra-HD. Rich images. Stunning contrast

# PHILIPS

# Highlights

## Ultra-HD Resolution

Ultra-HD. Rich images. Stunning contrast

## CMND and Control



Run your display network over a local (LAN) connection. CMND and Control allows you to perform vital functions like controlling inputs and monitoring display status. Whether you're in charge of one screen or 100.


## Easy control

Easy control. Remotely manage networked displays

## Energy saving

Energy-saving automatic backlight control

## FailOver

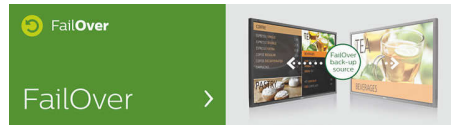


From waiting room to meeting room, never show a blank screen. FailOver lets your Philips Professional Display switch automatically between primary and secondary inputs, ensuring that content keeps playing even if the primary source goes down. Simply set a list of alternative inputs to be sure your business is always on.

## Integrated media player

Easily schedule content to play from USB. Your Philips Professional Display will wake from standby to play the content you want, and then return to standby once playback has finished.

## OPS slot



Integrate a full-power PC or Android-powered CRD50 module directly into your Philips Professional Display. The OPS slot contains all the connections you need to run your slot-in solution, including a power supply.

## SmartPlayer



Turn your USB into a true cost-effective digital signage device. Simply save your content (video, audio, pictures) on your USB and plug into your display. Create your playlist and schedule your content via the on-screen menu, and enjoy your own playlists anytime, anywhere.

# Specifications

## Connectivity

- Audio output: 3.5 mm jack
- Video input: DVI-I (x 1), HDMI 2.0 (x 3), USB 2.0 (x 2)
- Audio input: 3.5 mm jack
- Other connections: OPS
- External control: IR (in/out) 3.5 mm jack, RJ45, RS232C (in/out) 2.5 mm jack

## Picture/Display

- Diagonal screen size (metric): 189.3 cm
- Diagonal screen size (inch): 74.5 inch
- Aspect ratio: 16:9
- Panel resolution: 3840 x 2160
- Pixel pitch: 0.4296 x 0.4296 mm
- Optimum resolution: 3840 x 2160 @ 60 Hz
- Brightness: 400 cd/m<sup>2</sup>
- Display colours: 1.07 Billion
- Contrast ratio (typical): 1200:1
- Dynamic contrast ratio: 500,000:1
- Response time (typical): 8 ms
- Viewing angle (horizontal): 178 degree
- Viewing angle (vertical): 178 degree
- Panel technology: IPS
- Clinical image: D-Image preset (dicom part 14 compatible)
- Haze: 1%

## Convenience

- Placement: Landscape (18/7), Portrait (18/7)
- Tiled Matrix: Up to 10 x 15
- Keyboard control: Hidden, Lockable
- Remote control signal: Lockable
- Signal loop through: RS232, IR Loop through
- Ease of installation: Smart Insert
- Energy-saving functions: Smart Power
- Network controllable: RS232, RJ45
- Start-up: Switch on delay, Switch on status, Boot on source
- Start-up window: enable/disable Philips logo

## Sound

- Built-in speakers: 2 x 10 W RMS

## Power

- Mains power: 100–240 V~, 50/60 Hz
- Consumption (Typical): 180 W
- Consumption (Max): 320 W
- Standby power consumption: <0.5 W
- Power Saving Features: Smart Power
- Energy Label Class: G

## Supported Display Resolution

- Computer formats: 640 x 480, 60, 67, 72, 75 Hz, 720 x 400, 70 Hz, 800 x 600, 56, 60, 72, 75 Hz, 832

- x 624, 75 Hz, 1024 x 768, 60, 70, 75 Hz, 1152 x 864, 75 Hz, 1152 x 870, 75 Hz, 1280 x 720, 60 Hz, 1280 x 800, 60 Hz, 1280 x 1024, 60 Hz, 1440 x 900, 60 Hz, 1600 x 1200, 60 Hz, 1680 x 1050, 60 Hz, 1920 x 1080, 60 Hz
- Video formats: 480i, 60 Hz, 480p, 60 Hz, 576p, 50 Hz, 576i, 50 Hz, 720p, 60 Hz, 1080i, 50, 60 Hz, 1080p, 50, 60 Hz, 3840 x 2160, 30Hz, 3840 x 2160, 60 Hz

## Dimensions

- Set Width: 1683.5 mm
- Product weight: 37.3 kg
- Set Height: 961.7 mm
- Set Depth: 69.5 mm(D@wall mount)/91.8 mm(D@handle) mm
- Set Width (inch): 66.28 inch
- Set Height (inch): 37.86 inch
- Wall Mount: 600 x 400 mm, M8
- Set Depth (inch): 2.74(@ wall mount)/3.61(@ handle) inch
- Bezel width: 14.9 mm (Even bezel)
- Product weight (lb): 82.23 lb

## Operating conditions

- Altitude: 0 ~ 3000 m
- Temperature range (operation): 0 ~ 40 °C
- MTBF: 50,000 hour(s)
- Temperature range (storage): -20 ~ 60 °C
- Humidity range (operation)[RH]: 20~80% RH (No condensation)
- Humidity range (storage) [RH]: 5~95% RH (No condensation)

## Multimedia Applications

- USB Playback Video: H.264, JPEG, MPEG, WMV3
- USB Playback Picture: BMP, JPEG, PNG
- USB Playback Audio: AAC, WMA, MPEG, HEAAC

## Accessories

- Included Accessories: IR sensor cable (1.8 m) (x 1), Philips logo (x 1), AC power cord, AC Switch Cover, Quick start guide (x 1), Remote control and AAA batteries, RS232 daisy chain cable (x 1), USB Cover and screw x 1, Wire Clamper (x 3)

## Miscellaneous

- On-Screen Display Languages: Arabic, English, French, German, Italian, Japanese, Polish, Russian, Spanish, Simplified Chinese, Turkish, Traditional Chinese
- Warranty: 3 year warranty
- Regulatory approvals: CE, FCC, Class A, CB, BSMI, EPA, VCCI, CU, ETL, EMF, PSB



Issue date 2024-04-24

Version: 1.0.2

EAN: 87 12581 77861 3

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)