


PHILIPS

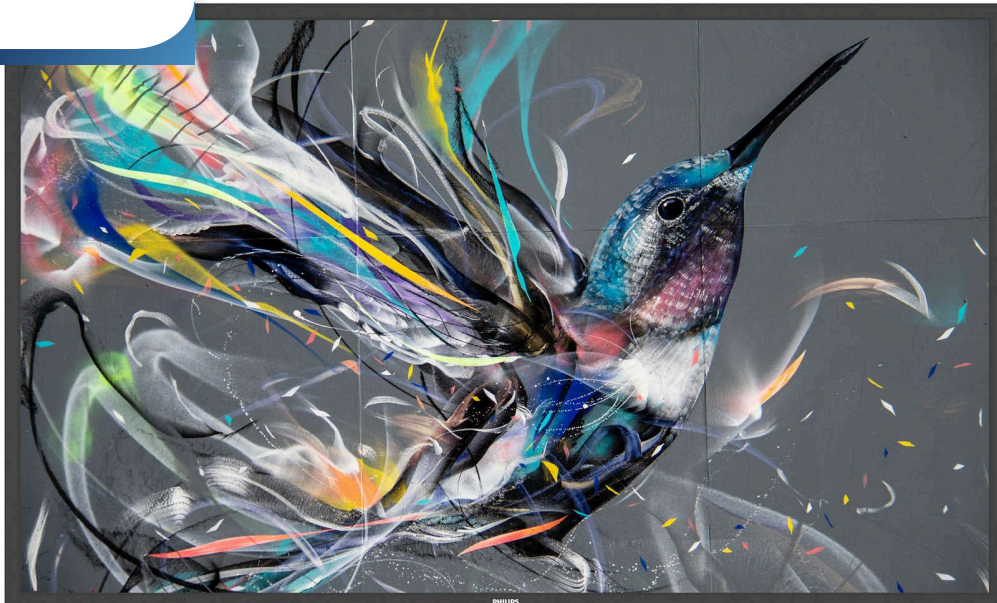

Q-Line Display

Signage Solutions

75"

Direct LED Backlight

Ultra HD



75BDL3511Q

Stand out

Easy-setup 18/7 display.

Inform and enthrall with a Philips Q-Line Professional Ultra HD Display. This reliable solution can be up and running as quickly as you need.

Cost-effective system solution

- Energy-saving automatic backlight control
- Integrated media player. Easily schedule USB content
- FailOver ensures that content is always playing
- Easy control. Remotely manage networked displays

Effortless setup. Total control.

- Operate, monitor and maintain with CMND and Control
- OPS slot allows for PC embedding without cabling
- Schedule what you want, when you want with SmartPlayer

Superb picture. Ultra-high brightness.

- Ultra-HD. Rich images. Stunning contrast


Highlights

CMND and Control



Run your display network over a local (LAN) connection. CMND and Control allows you to perform vital functions like controlling inputs and monitoring display status. Whether you're in charge of one screen or 100.

FailOver

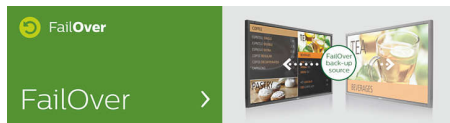


From waiting room to meeting room, never show a blank screen. FailOver lets your Philips Professional Display switch automatically between primary and secondary inputs, ensuring

that content keeps playing even if the primary source goes down. Simply set a list of alternative inputs to be sure your business is always on.

Integrated media player


Easily schedule content to play from USB. Your Philips Professional Display will wake from standby to play the content you want, and then return to standby once playback has finished.

OPS slot



Integrate a full-power PC or Android-powered CRD50 module directly into your Philips Professional Display. The OPS slot contains all the connections you need to run your slot-in solution, including a power supply.

SmartPlayer



Turn your USB into a true cost-effective digital signage device. Simply save your content (video, audio, pictures) on your USB and plug into your display. Create your playlist and schedule your content via the on-screen menu, and enjoy your own playlists anytime, anywhere.

Specifications

Picture/Display

Diagonal screen size (metric): 189.3 cm
Diagonal screen size (inch): 74.5 inch
Aspect ratio: 16:9
Panel resolution: 3840 x 2160
Pixel pitch: 0.4296 x 0.4296 mm
Optimum resolution: 3840 x 2160 @ 60 Hz
Brightness: 400 cd/m²
Display colours: 1.07 Billion
Contrast ratio (typical): 1200:1
Dynamic contrast ratio: 500,000:1
Response time (typical): 8 ms
Viewing angle (horizontal): 178 degree
Viewing angle (vertical): 178 degree
Panel technology: IPS
Clinical image: D-Image preset (dicom part 14 compatible)
Haze: 1%

Connectivity

Audio output: 3.5 mm jack
Video input: DVI-I (x 1), HDMI 2.0 (x 3), USB 2.0 (x 2)
Audio input: 3.5 mm jack
Other connections: OPS
External control: IR (in/out) 3.5 mm jack, RJ45, RS232C (in/out) 2.5 mm jack

Convenience

Placement: Landscape (18/7), Portrait (18/7)
Tiled Matrix: Up to 10 x 15
Keyboard control: Hidden, Lockable
Remote control signal: Lockable
Signal loop through: RS232, IR Loop through
Ease of installation: Smart Insert
Energy-saving functions: Smart Power
Network controllable: RS232, RJ45
Start-up: Switch on delay, Switch on status, Boot on source
Start-up window: enable/disable Philips logo

Sound

Built-in speakers: 2 x 10 W RMS

Power

Mains power: 100–240 V~, 50/60 Hz
Consumption (Typical): 180 W
Consumption (Max): 320 W
Standby power consumption: <0.5 W
Power Saving Features: Smart Power
Energy Label Class: G

Supported Display Resolution

Computer formats: 640 x 480, 60, 67, 72, 75 Hz, 720 x 400, 70 Hz, 800 x 600, 56, 60, 72, 75 Hz, 832 x 624, 75 Hz, 1024 x 768, 60, 70, 75 Hz, 1152 x 864, 75 Hz, 1152 x 870, 75 Hz, 1280 x 720, 60 Hz, 1280 x 800, 60 Hz, 1280 x 1024, 60 Hz, 1440 x 900, 60 Hz, 1600 x 1200, 60 Hz, 1680 x 1050, 60 Hz, 1920 x 1080, 60 Hz
Video formats: 480i, 60 Hz, 480p, 60 Hz, 576p, 50 Hz, 576i, 50 Hz, 720p, 60 Hz, 1080i, 50, 60 Hz, 1080p, 50, 60 Hz, 3840 x 2160, 30Hz, 3840 x 2160, 60 Hz

Dimensions

Set Width: 1683.5 mm
Product weight: 37.3 kg
Set Height: 961.7 mm
Set Depth: 69.5 mm(D@wall mount)/91.8 mm(D@handle) mm
Set Width (inch): 66.28 inch
Set Height (inch): 37.86 inch
Wall Mount: 600 x 400 mm, M8
Set Depth (inch): 2.74(@ wall mount)/3.61(@ handle) inch
Bezel width: 14.9 mm (Even bezel)
Product weight (lb): 82.23 lb

Operating conditions

Altitude: 0 ~ 3000 m
Temperature range (operation): 0 ~ 40 °C
MTBF: 50,000 hour(s)
Temperature range (storage): -20 ~ 60 °C
Humidity range (operation)[RH]: 20~80% RH (No condensation)
Humidity range (storage) [RH]: 5~95% RH (No condensation)

Multimedia Applications

USB Playback Video: H.264, JPEG, MPEG, WMV3
USB Playback Picture: BMP, JPEG, PNG
USB Playback Audio: AAC, WMA, MPEG, HEAAC

Accessories

Included Accessories: IR sensor cable (1.8 m) (x 1), Philips logo (x 1), AC power cord, AC Switch Cover, Quick start guide (x 1), Remote control and AAA batteries, RS232 daisy chain cable (x 1), USB Cover and screw x 1, Wire Clamper (x 3)

Miscellaneous

On-Screen Display Languages: Arabic, English, French, German, Italian, Japanese, Polish, Russian, Spanish, Simplified Chinese, Turkish, Traditional Chinese
Warranty: 3 year warranty
Regulatory approvals: CE, FCC, Class A, CB, BSMI, EPA, VCCI, CU, ETL, EMF, PSB

