



Philips
LCD monitor

S Line

23 (22.5" / 57.2 cm diag.)
1920 x 1200 (WUXGA)

230S8QHSB

Reliable and essential

for business efficiency

Our S Line monitor delivers business efficiency. The 16:10 ratio display gives you extra vertical height for increased productivity, while flicker-free and LowBlue mode make work easy-on-the eyes.

Perfectly designed for your space

- VESA mount allows for flexibility
- Narrow border display for a seamless appearance
- Screen tilts to your ideal, individualized viewing angle

Great performance

- IPS LED wide view technology for image and color accuracy
- 16:10 aspect ratio for more vertical screen height
- HDMI ensures universal digital connectivity
- SmartImage presets for easy optimized image settings

Designed for comfortable productivity

- EasyRead mode for a paper-like reading experience
- Less eye fatigue with Flicker-free technology
- LowBlue Mode for easy on-the-eyes productivity


PHILIPS

LCD monitor
S Line 23 (22.5" / 57.2 cm diag.), 1920 x 1200 (WUXGA)

230S8QHSB/69

Highlights

IPS technology

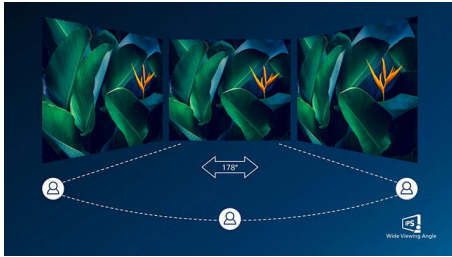

IPS displays use an advanced technology which gives you extra wide viewing angles of 178/178 degree, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid colors, making it ideal not only for Photos, movies and web browsing, but also for professional applications which demand color accuracy and consistent brightness at all times.

SmartImage



SmartImage is an exclusive leading edge Philips technology that analyzes the content displayed on your screen and gives you optimized display performance. This user friendly interface allows you to select various modes like Office, Photo, Movie, Game, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimizes the contrast, color saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time with the press of a single button!

HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. A HDMI cable enables high-quality digital video and audio all transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

UltraNarrow Border



The new Philips displays feature ultra-narrow borders which allow for minimal distractions and maximum viewing size. Especially suited for multi-display or tiling setup like gaming, graphic design and professional applications, the ultra-narrow border display gives you the feeling of using one large display.

LowBlue Mode



Studies have shown that just as ultra-violet rays can cause eye damage, shortwave length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.

Flicker-free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-free Technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

EasyRead mode



EasyRead mode for a paper-like reading experience



Specifications

Picture/Display

- Panel Size: 22.5 inch / 57.2 cm
- Aspect ratio: 16:10
- LCD panel type: IPS technology
- Backlight type: W-LED system
- Pixel pitch: 0.25425 x 0.24765 mm
- Optimum resolution: 1920 x 1200 @ 60Hz
- Brightness: 250 cd/m²
- Display colors: 16.7M
- Color gamut (typical): NTSC 85%*, sRGB101.8%*
- Contrast ratio (typical): 1000:1
- SmartContrast: 50,000,000:1
- Response time (typical): 5 ms (Gray to Gray)*
- Viewing angle: 178° (H) / 178° (V), @ C/R > 10
- Picture enhancement: SmartImage
- Effective viewing area: 488.16 (H) x 297.18 (V)
- Scanning Frequency: 30 - 83 kHz (H) / 56 - 76 Hz (V)
- sRGB
- Flicker-free
- Pixel Density: 101 PPI
- LowBlue Mode
- Display Screen Coating: Anti-Glare, 3H, Haze 25%
- EasyRead

Connectivity

- Signal Input: VGA (Analog), HDMI 1.4
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): Audio out

Convenience

- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
- User convenience: SmartImage, Input, Brightness, Menu, Power On/Off
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (100x100mm)
- Control software: SmartControl

Stand

- Tilt: -5/25 degree

Power

- ECO mode: 9.4 W (typ.)
- Power supply: Built-in, 100-240VAC, 50-60Hz
- Off mode: < 0.3 W (typ.)
- On mode: 14.99 W (typ.) (EnergyStar 7.0 test method)
- Standby mode: < 0.3 W (typ.)
- Power LED indicator: Operation - White, Standby mode- White (blinking)

Dimensions

- Packaging in mm (WxHxD): 559 x 481 x 136 mm
- Product without stand (mm): 499 x 323 x 42 mm
- Product with stand(max height): 499 x 414 x 208 mm

Weight

- Product with packaging (kg): 4.53 kg
- Product with stand (kg): 3.00 kg
- Product without stand (kg): 2.58 kg

Operating conditions

- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- Temperature range (operation): 0°C to 40°C °C
- MTBF: 70,000 hrs (excluded backlight) hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C

Sustainability

- Environmental and energy: EnergyStar 7.0, RoHS, TCO Certified, WEEE
- Recyclable packaging material: 100 %
- Specific Substances: PVC / BFR free housing, Mercury free
- Recycled material: 25%

Compliance and standards

- Regulatory Approvals: CE Mark, PSB

Cabinet

- Finish: Texture
- Foot: Silver/Black
- Front bezel: Black/Black
- Rear cover: Black/Black



Issue date 2024-11-02

Version: 3.0.1

EAN: 87 12581 75694 9

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* "IPS" word mark / trademark and related patents on technologies belong to their respective owners.

* Response time value equal to SmartResponse

* NTSC Area based on CIE1976

* sRGB Area based on CIE1931

* The monitor may look different from feature images.