



Philips
LCD monitor, LED
backlight

E Line
27" (68.6 cm)

273E3LHSB

Great entertainment on your big LED display

This big 273E3 Full HD LED display with HDMI, touch control is ready to engage you in the entertainment world

Great picture quality

- Full HD LCD display, with a 1920 x 1080p resolution
- SmartContrast 20,000,000:1 for incredible rich black details
- SmartImage Lite for an enhanced LCD viewing experience
- LED technology ensures natural colours
- SmartResponse of 1 ms

Design that complements any interior

- Modern Touch controls

Experience true multimedia

- HDMI-ready for top quality, multimedia experience
- Built-in speakers for audio without desktop clutter

Great convenience

- Easy picture format control switching between wide and 4:3 formats
- Easy display performance tuning with SmartControl Lite

PHILIPS

LCD monitor, LED backlight
E Line 27" (68.6 cm)

Highlights

LED technology

White LED's are solid state devices which light up to full, consistent brightness faster saving startup time. LED's are free from mercury content, which allows for eco-friendly recycling and disposal process. LED's allow for better dimming control of the LCD backlight, resulting in a super high contrast ratio. It also gives superior colour reproduction thanks to consistent brightness across the screen.

Full HD LCD display 1920 x 1080p



The Full HD screen has the widescreen resolution of 1920 x 1080p. This is the highest resolution of HD sources for the best possible picture quality. It is fully future-proof as it supports 1080p signals from all sources, including the most recent sources such as Blu-ray and advanced HD game consoles. The signal processing is extensively upgraded to support this much higher signal quality and resolution. It produces brilliant flicker-free progressive scan pictures with superb brightness and colours.

HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. An HDMI cable enables high-quality digital video and audio to be transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

SmartResponse — 1 ms



SmartResponse is an exclusive Philips overdrive technology that when turned on, automatically adjusts response times to specific application requirements like gaming and films, which require faster response times in order to produce judder, time-lag and ghost image free images.


Built-in speakers

A pair of stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing etc, depending on model and design.

SmartImage Lite

SmartImage Lite is an exclusive, leading edge Philips technology that analyses the content displayed on your screen. Based on a scenario you select, SmartImage Lite dynamically enhances the contrast, colour saturation and sharpness of images and videos for ultimate display performance - all in real time with the press of a single button.

SmartContrast ratio 20,000,000:1

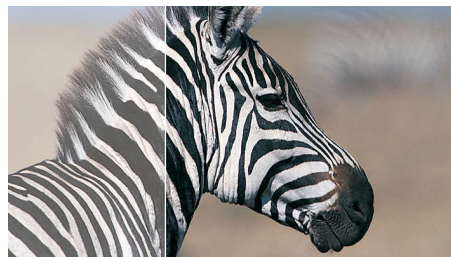

You want the LCD flat display with the highest contrast and most vibrant images. Philips advanced video processing combined with unique extreme dimming and backlight-boosting technology results in vibrant images. SmartContrast will increase the contrast with excellent black level and accurate rendition of dark shades and colours. It gives a bright,

273E3LHSB/00


lifelike picture with high contrast and vibrant colours.

Touch controls



Touch controls are intelligent, touch-sensitive icons that replace protruding buttons to allow users to adjust the monitor to their requirements. Responding to the lightest touch, Touch control gives the monitor a modern feel.

Easy picture format control

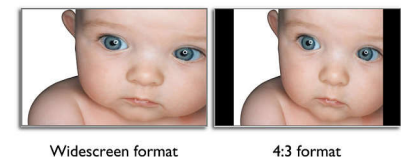

Philips easy picture format control on OSD switches from the 4:3 aspect ratio to the widescreen mode and back again to match the display's aspect ratio with your content; it allows you to work with wide documents without scrolling or viewing widescreen media in the widescreen mode and gives you distortion-free, native mode display of 4:3 ratio content.

SmartControl Lite

SmartControl Lite is the next generation 3D icon-based GUI monitor control software. This allows the user to fine-tune most parameters of the monitor like Colour, Brightness, screen calibration, Multimedia, ID management etc. with the mouse.



Specifications

Connectivity

- Signal Input: VGA (Analogue), DVI-D (digital, HDCP), HDMI
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): Headphone out, PC audio-in

Picture/Display

- Panel Size: 27 inch/68.6 cm
- Aspect ratio: 16:9
- LCD panel type: TFT-LCD
- Backlight type: W-LED system
- Pixel pitch: 0.311 x 0.311 mm
- Optimum resolution: 1920 x 1080 @ 60 Hz
- Brightness: 300 cd/m²
- Display colours: 16.7 M
- Contrast ratio (typical): 1200:1
- SmartContrast: 20,000,000:1
- Response time (typical): 3.5 ms
- Viewing angle: 178° (H) / 170° (V), @ C/R > 5
- Picture enhancement: SmartImage Lite
- Effective viewing area: 597.6 (H) x 336.2 (V) mm
- Scanning Frequency: 30–83 kHz (H)/56–75 Hz (V)
- sRGB
- SmartResponse (typical): 1 ms (Grey to Grey)

Convenience

- Built-in Speakers: 2 W x 2
- Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 7
- User convenience: Menu, Power On/Off, Input, SmartImage Lite, Volume
- OSD Languages: English, French, German, Italian, Portuguese, Russian, Simplified Chinese, Spanish, Turkish
- Other convenience: Kensington lock, VESA mount (100 x 100 mm)

Stand

- Tilt: -5/20 degree

Power

- Power supply: 100-240 VAC, 50/60 Hz, Built-in

- Off mode: 0.3 W
- On mode: 20.4 W (EnergyStar 5.0 test method)
- Standby mode: 0.5 W
- Power LED indicator: Operation - White, Standby mode - White (flashing)

Dimensions

- Product with stand (mm): 642 x 440 x 227 mm
- Packaging in mm (W x H x D): 700 x 525 x 138 mm
- Product without stand (mm): 642 x 391 x 64 mm

Weight

- Product with packaging (kg): 8.82 kg
- Product with stand (kg): 8.2 kg
- Product without stand (kg): 6.5 kg

Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- MTBF: 30,000 hour(s)
- Relative humidity: 20%–80% %
- Temperature range (storage): -20°C to 60°C °C

Sustainability

- Environmental and energy: EnergyStar 5.0, EPEAT Silver, RoHS, Mercury Free
- Recyclable packaging material: 100 %

Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC Class B, GOST, PSB, SASO, SEMKO, TUV Ergo, TUV/GS, TCO Certified, UL/cUL, WEEE

Cabinet

- Colour: Carbonite black
- Finish: Texture

What's in the box?

- Cables: VGA, Power
- Monitor with stand
- User Documentation



Issue date 2024-03-24

Version: 7.0.1

EAN: 87 12581 59676 7

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com