



Philips Brilliance
LCD monitor with Pivot
base, USB, Audio

22" (55.9 cm) P-line
WSXGA+

220P2ES

Professional eco-friendly ergonomic display

Eco-friendly, EPEAT Gold certified Philips Professional 220P2 display with ZeroWatt switch, 0.1 watt Soft off mode, Smart Ergo Base, Stereo Audio and a 4-port USB Hub boosts your productivity

Sustainable Eco-friendly solution

- EPEAT Gold ensures lowest impact on environment
- ZeroWatt switch 100% power saving
- 0.1 watt Soft-Off mode
- SmartPower: Up to 50% power saving

Outstanding display performance

- SmartImage: Optimised user-friendly display experience

Ergonomic design

- 130 mm height adjustment for ideal sitting position
- 90-degree screen rotation and smart cable management

Great convenience

- USB Hub with four ports for easy connections
- Stylish SmartTouch controls
- Built in stereo audio for multimedia experience

PHILIPS

Highlights

Built-in stereo audio

A pair of high-quality stereo speakers built into a display device. They may be visible front firing, or invisible down firing, top firing, rear firing etc. depending on model and design.


130 mm height adjustment

The Super Ergo Base is a 'people friendly' Philips monitor base that not only tilts and swivels, but is also height adjustable and pivots 90 degrees, so that each user can adjust the monitor to their personal preference for maximum viewing comfort and efficiency.

ScreenRotate

ScreenRotate makes it possible to use a monitor in either the landscape or portrait mode; to change orientation for a better view of a selected document or image, the monitor is rotated to the desired orientation.

SmartImage

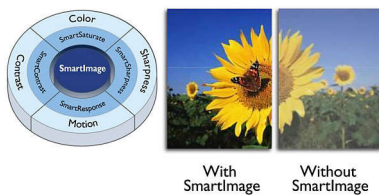

SmartImage is an exclusive leading edge Philips technology that analyses the content displayed on your screen and gives you optimised display performance. This user-friendly interface allows you to select various modes like Office, Image, Entertainment, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimises the contrast, colour saturation and sharpness of

images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time with the press of a single button!

SmartPower

SmartPower is an artificial intelligent technology which dynamically analyses the content of the screen image to achieve power saving. The backlight intensity can be controlled automatically and pre-set by the system to reduce the power consumption by up to 50%, which saves substantially on energy costs

EPEAT Gold

Philips EPEAT GOLD certified monitors ensure protection for human health and the environment, and are highly energy efficient ensuring low emissions of climate changing greenhouse gases. The EPEAT programme helps purchasers evaluate, compare and select Monitors based on 51 environmental criteria supported by the US EPA. GOLD certification ensures that at least 30% of plastic used is Post-Consumer Resin, which ensures reduction in the use of toxic and hazardous materials. EPEAT Gold is valid only where Philips registers the product. Please visit www.epeat.net for the registration status in your country.

Four Ports USB 2.0 HUB

USB Hub allows user to conveniently connect their plug and play multimedia devices such as USB memory devices, camera, portable HDD, Web camera, PDA, Printer and many other devices which have USB connection available. The conveniently located USB 2.0 Hub on the monitor allows USB 2.0 signals to pass through

to the computer. Note that many devices like cameras and HDD may need to be powered On independently, as they have higher power requirements than the monitor USB Hub can provide.

Zero Switch

In line with Philips' commitment to "Sense and Simplicity" we enable you to make a responsible choice to switch OFF your monitor at any given time. At the touch of a single ON/OFF button which is conveniently located at the back of the monitor, the monitors' energy consumption is reduced to Zero. In the OFF mode, the monitor is completely cut off from AC power and thereby reducing your carbon footprint even further.

SmartTouch controls



SmartTouch controls are intelligent, touch sensitive icons that replace protruding buttons. Responding to your lightest touch, SmartTouch controls, for example, power up your monitor or brighten and sharpen your display with SmartImage Lite. When activated, SmartTouch icons glow to indicate that your commands have been implemented.

0.1 Watt Standby mode

0.1 watt Soft-Off mode



Specifications

Connectivity

- Signal Input: VGA (Analogue), DVI-D (digital, HDCP)
- USB: USB 2.0 x 4
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): Stereo Audio

Picture/Display

- Panel Size: 22 inch/55.9 cm
- Aspect ratio: 16:10
- LCD panel type: TFT-LCD
- Pixel pitch: 0.282 x 0.282 mm
- Optimum resolution: 1680 x 1050 @ 60 Hz
- Brightness: 250 cd/m²
- Display colours: 16.7 M
- SmartContrast: 500,000
- Response time (typical): 5 ms
- Viewing angle: 176° (H)/170° (V), @ C/R > 5
- Picture enhancement: SmartImage
- Scanning Frequency: 30–83 kHz (H)/56–75 Hz (V)
- sRGB

Convenience

- Plug and Play Compatibility: DDC/CI, Windows 7/ Vista/XP/2000/98, Mac OS X
- Built-in Audio: 1.5 W x 2
- User convenience: SmartImage, SmartControl, SmartPower, Volume, Menu, Power On/Off
- OSD Languages: English, French, German, Spanish, Italian, Russian, Simplified Chinese, Portuguese
- Other convenience: VESA mount (100 x 100 mm), Kensington lock

Stand

- Height adjustment: 130 mm
- Pivot: Yes (auto pivot)
- Swivel: -65/65 degree
- Tilt: -5/20 degree

Power

- Power supply: Built-in, 100-240 VAC, 50/60 Hz
- Smart Power Mode: 12 W (Min.)
- Off mode: 0 W (with Zero Power Switch)
- On mode: < 22.5 W (EnergyStar 5.0 test method)
- Standby mode: < 0.1 W
- Power LED indicator: Operation - White, Standby mode - White (flashing)

Dimensions

- Product with stand (mm): 505 x 495 x 250 mm
- Packaging in mm (W x H x D): 565 x 468 x 263 mm
- Product without stand (mm): 505 x 351 x 59 mm

Weight

- Product with packaging (kg): 8.40 kg
- Product with stand (kg): 6.25 kg
- Product without stand (kg): 4.15 kg

Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- MTBF: 50,000 hour(s)
- Relative humidity: 20%–80% %
- Temperature range (storage): -20°C to 60°C °C

Sustainability

- Environmental and energy: EPEAT Gold, RoHS, EnergyStar 5.0
- Recyclable packaging material: 100 %

Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC, Class B, GOST, SEMKO, TCO 5.0, TUV/GS, TUV Ergo, UL/cUL

Cabinet

- Colour: Silver/Black
- Finish: Texture



Issue date 2024-03-24

Version: 3.1.3

EAN: 87 12581 55315 9

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com