

# PHILIPS

## Series 7000

### All-in-One Trimmer

21 pieces: face, head & body

Precision trimming comb

Self-sharpening steel blades

BeardSense technology



MG7960/28



## One tool, ultimate precision

For face, head & body

Craft your personal look with this versatile trimmer, which includes 21 quality tools and accessories for styling your face, head and body. The precision trimming comb delivers a precise trim at the exact length you want.

#### Precise and even trim

- Even trim in one pass
- A trimmer that adjusts to your beard
- Long lasting performance for precise results

#### Versatile styling for face, head and body

- Get the details right
- All-in-one for face, head & body
- Get an even trim and sharp edges
- Trim hair down there
- 30% faster hair trimming\*\*

#### Quality & Ease of use

- Always know when it's time to charge
- Easy to grip and control
- Runs 7 weeks on a single charge\*
- Water-resistant for convenient use and easy cleaning

# Highlights

## 21 tools & accessories




This all-in-one trimmer offers 21 tools and accessories for all your grooming needs. Conveniently trim and style your facial hair, clip your hair and groom your body.

## Precision beard styling



The trimmer and its multi-comb set offer 22 length settings from 0.5 to 16 mm in up to 0.2 mm precision steps for shorter and longer beard styles. The narrow design of the precision trimmer attachment makes it easy to create sharp edges and fine details. The precision shaver attachment cleans up cheeks, chin and neck to finish your look.

## Effective body grooming

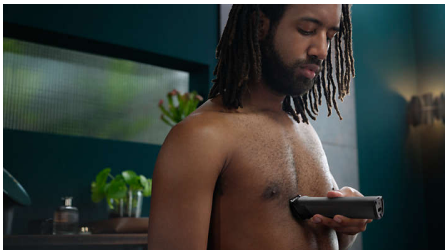


Efficiently trim your body hair with the click-on combs for body.

## Fast hair clipping




Hair clipping is 30% faster\*\* thanks to an extra-wide 41 mm stainless steel hair clipper that cuts more with every stroke. Create your hairstyle with length settings with the 2, 4, 9, 12 and 16 mm extra-wide hair combs.

## Nose/ear/eyebrow trimming

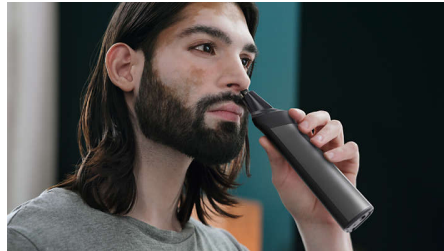


The nose/ear trimmer attachment removes unwanted nose and ear hair quickly and safely. Easily keep your eyebrows neat and tidy with the dedicated eyebrow comb.

## Precision trimming comb

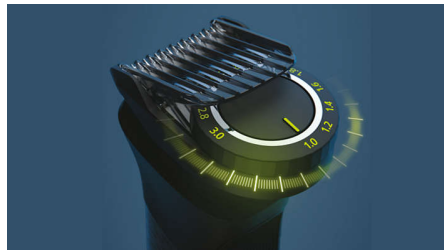

The patented trimming comb offers 11 length settings between 1-3 mm, so you can achieve an even trim at the exact length you want.

## Self-sharpening steel blades

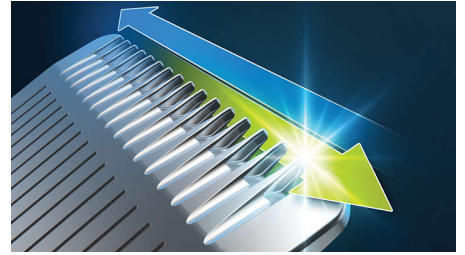

Stainless steel blades remain sharp as day one for long lasting performance. No oil required.

## BeardSense technology



The trimmer scans the beard density 125x per second and boosts power exactly when you need it to tackle also dense, bushy or longer beards.

## Up to 170 minutes of runtime



A powerful lithium-ion battery provides up to 170 minutes of runtime with 5-minutes quick charge option for long life and maximum power.

# Specifications

## Power

**Charging:** 70 minutes, 5 min quick charge

**Run time:** Up to 3 hours

**Battery type:** Lithium-ion

**Charging method:** USB-A (no adapter included)

**Maximum power consumption:** 5 W

**Input Voltage:** 5 V

## Design

**Handle:** Ergonomic rubber grip

## Service

**5-year warranty**

## Ease of use

**Display:** Battery low indicator, Battery full indicator, Battery charging indicator

**Wet & Dry:** Fully washable

**Maintenance free:** No blade oil required

**Operation:** Cordless use only

## Versatile styling

**Tools & accessories:** 21

**Styling tools:** Steel trimmer, Steel precision trimmer, Nose and ear trimmer, Extra-wide hair trimmer, Precision shaver, Precision trimming comb, 3-7 mm adjustable comb, 9-13 mm adjustable comb, 2 body combs, Eyebrow comb, 2 wide fading hair combs, 5 wide hair

combs

**Accessories:** Soft pouch, Cleaning brush, USB-A (adapter not included)

## Precise trim

**Cutting performance:** Self-sharpening steel blades, BeardSense technology

**Precision trimming:** Precision trimming comb

**Length settings:** 22 (0.5 - 16 mm)

**Precision steps:** Up to 0.2 mm

