



Philips G400 Series
Wired mechanical gaming
keyboard

7-way ambiglow lighting

High-speed mechanical keys
Full key N-rollover
Black alloy surface

SPK8413

Brighten up your gaming

"The new G413 Momentum gaming keyboard features backlit and silent, high speed mechanical keys for the ultimate experience.

Performance to dominate

- Dialed-in mechanical cyan switches for fast reaction
- Full-key roll over anti-ghosting for complex fast inputs

Cool looks to match your mod

- Ambiglow game lighting for more immersive gaming

Designed for heavy use

- 50 million keystroke lifespan
- Alloy surface for super durability

PHILIPS

Wired mechanical gaming keyboard
7-way ambiglow lighting High-speed mechanical keys, Full key N-rollover, Black alloy surface

Specifications

Technical specifications

- Product Type: High performance mechanical gaming keyboard
- Design Type: Ergonomic design
- Connectivity: USB 2.0 wired
- Front Panel Material: Metal front-panel
- Front Panel Color: Black
- Keys: 104 Keys
- Key Rollover Type: N-key rollover
- Macro Key Type: Five additional dedicated macro keys (Y,U,I,O,P)
- Key Lifespan: 50 million keystroke lifespan

- Travel Distance Type Of Key: Medium key travel
- Lighting Effect Type: Multi Color LED backlight
- Water Resistant: No

Physical Dimensions

- Dimensions (LxWxH): 450.5*163.7*42(mm)
- Weight: 985g

OS/System Requirements

- System Requirements: Microsoft Windows XP, Windows Vista, Windows 7, Windows 8, Windows 10 or later; Linux; Mac OS



SPK8413/00


Highlights

Full n-key rollover




Fast complex gaming key strokes demand advanced performance. With full N-key rollover every key is registered independently without confusion so that each keystroke is correctly registered regardless of how many other keys are being pressed or held down at the time.

50 million keystroke lifespan

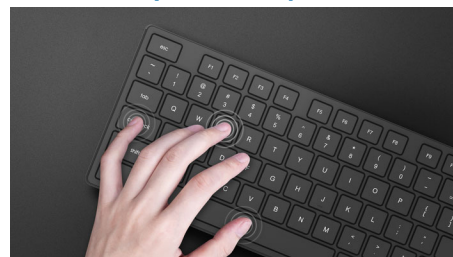

How long does it take to get to 50 million keystrokes? A long time. Familiar and reliable this keyboard is built to last for many years of fast action.

Alloy surface design

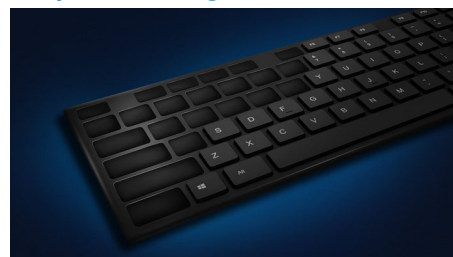

Everything about this keyboard is built to last for rugged high performance use, even down to the keyboard surface. The Alloy surface is designed for high durability, superior rigidity and looks great too.

Fast mechanical switches



The most popular mechanical switches for gaming keyboards, Cyan mechanical switches offer gamers a light tactile clicky key for rapid activation and performance.



Issue date 2021-12-09

Version: 1.0.1

12 NC: 8670 001 57014
EAN: 87 12581 75474 7

© 2021 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com