



Philips
LCD monitor with
SmartControl Lite

V Line
24" (61 cm)

246V5LSB

Enjoy great LED pictures in vivid colours

Enjoy vivid LED pictures with this attractive, glossy design display. Equipped with SmartControl Lite, it's a great choice!

Vivid pictures every time

- Easy display performance tuning with SmartControl Lite
- LED technology for vivid colours
- SmartContrast for rich black details
- 16:9 Full HD display for crisp, detailed images

Modern design

- Attractive glossy design
- VESA mount allows for flexibility

Greener every day

- Mercury Free eco-friendly display
- Low power consumption saves energy bills
- Energy Star for energy efficiency and low power consumption

PHILIPS

Highlights

LED technology

White LED's are solid state devices which light up to full, consistent brightness faster saving startup time. LED's are free from mercury content, which allows for eco-friendly recycling and disposal process. LED's allow for better dimming control of the LCD backlight, resulting in a super high contrast ratio. It also gives superior colour reproduction thanks to consistent brightness across the screen.

SmartControl Lite

SmartControl Lite is the next generation 3D icon-based GUI monitor control software. This allows the user to fine-tune most parameters of the monitor like Colour, Brightness, screen calibration, Multimedia, ID management etc. with the mouse.


SmartContrast



SmartContrast is a Philips technology that analyses the contents you are displaying,

automatically adjusting colours and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.

16:9 Full HD display

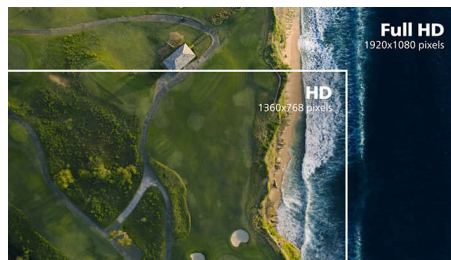

Picture quality matters. Regular displays deliver quality, but you expect more. This display features enhanced Full HD 1920 x 1080 resolution. With Full HD for crisp detail paired with high brightness, incredible contrast and realistic colours, expect a true-to-life picture.

Mercury Free

Philips monitors with LED backlighting are free from Mercury, one of the most toxic natural substances, which affects humans and animals. This reduces the environmental impact of the

display throughout its lifecycle, from manufacturing to disposal.

Low power consumption

Low power consumption saves energy bills

Attractive glossy design

Attractive glossy design

VESA mount

VESA mount allows for flexibility

Energy Star

Energy Star for energy efficiency and low power consumption



Specifications

Connectivity

- Signal Input: VGA (Analogue), DVI-D (digital, HDCP)
- Sync Input: Separate Sync, Sync on Green

Picture/Display

- Panel Size: 24 inch/61 cm
- Aspect ratio: 16:9
- LCD panel type: TFT-LCD
- Backlight type: W-LED system
- Pixel pitch: 0.277 x 0.277 mm
- Optimum resolution: 1920 x 1080 @ 60 Hz
- Brightness: 250 cd/m²
- Display colours: 16.7 M
- Contrast ratio (typical): 1000:1
- SmartContrast: 10,000,000:1
- Response time (typical): 5 ms
- Viewing angle: 170° (H)/160° (V), @ C/R >= 10
- Effective viewing area: 531.36 (H) x 298.89 (V)
- Scanning Frequency: 30–83 kHz (H)/56–75 Hz (V)
- sRGB

Convenience

- Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
- User convenience: Auto/Down, 4:3 Wide/Up, Brightness/Back, Menu/OK, Power On/Off
- OSD Languages: English, French, German, Italian, Portuguese, Russian, Simplified Chinese, Spanish, Turkish
- Other convenience: Kensington lock, VESA mount (100 x 100 mm)

Stand

- Tilt: -5/20 degree

Power

- Power supply: Built-in, 100–240 VAC, 50–60 Hz
- Off mode: 0.3 W (typ.)
- On mode: 16.86 W (EnergyStar 7.0 test method)

- Standby mode: 0.5 W (typ.)
- Power LED indicator: Operation - White, Standby mode - White (flashing)

Dimensions

- Product with stand (mm): 565 x 435 x 238 mm
- Packaging in mm (W x H x D): 613 x 446 x 131 mm
- Product without stand (mm): 565 x 354 x 63 mm

Weight

- Product with packaging (kg): 6.05 kg
- Product with stand (kg): 4.65 kg
- Product without stand (kg): 4.22 kg

Operating conditions

- Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
- Temperature range (operation): 0°C to 40°C °C
- MTBF: 30,000 hour(s)
- Relative humidity: 20–80% %
- Temperature range (storage): -20°C to 60°C °C

Sustainability

- Environmental and energy: EnergyStar 7.0, RoHS, Mercury Free
- Recyclable packaging material: 100 %

Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, cETLus, FCC Class B, GOST, PSB, SASO, SEMKO, TCO Certified, TUV/ISO9241-307, WEEE

Cabinet

- Colour: Black
- Finish: Glossy (front bezel)/Textured (rear cover)

What's in the box?

- Cables: VGA, Power
- Monitor with stand
- User Documentation



Issue date 2024-04-06

Version: 5.0.1

EAN: 87 12581 67047 4

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com