

PHILIPS



4K HDR display with
Ambiglow

Gaming Monitor

Momentum

55" (139.7 cm)

3840 x 2160 (4K UHD)



558M1RY

Take console gaming to the next level

This Momentum display boasts sound by legendary audio experts Bowers & Wilkins, creates a new-level console gaming. Get immersed in the performance of this beautiful large display. Enjoy gaming awesomeness with optimal sound and visuals.

Features designed for gamers' needs

- Less eye fatigue with Flicker-Free technology
- MultiView enables simultaneous dual connection and view
- Low input lag reduces time delay between devices to monitor

Design to enhance the senses

- Ambiglow intensifies entertainment with a halo of light

Immersive next-level sound by Bowers & Wilkins

- Covered with a premium speaker fabric created by Kvadrat
- Integrated woofer, mid-high and tweeters for majestic sound

Expand your viewing experience

- UltraClear 4K UHD (3840 x 2160) resolution for precision
- SmartImage HDR gives optimal viewing from your HDR content
- 120 Hz refresh rates for ultra-smooth, brilliant images
- AMD FreeSync™ Premium Pro; smooth, low latency HDR gaming

Gaming Monitor

4K HDR display with Ambiglow

558M1RY/01

Highlights


Sound by Bowers & Wilkins

Six sound modes to optimise your gaming, viewing or listening experience. Sport and Racing: create a realistic, being-there experience when enjoying sports or racing games. RPG and Adventure: immerse yourself in spacious and atmospheric sound. Shooting and Action: experience punchy, impactful sound for maximum excitement and realism. Movie Watching: enhance movie soundtracks for an immersive, cinematic listening experience. Music: True Sound by Bowers & Wilkins, delivering the performance as the artist intended. Personal: access the EQ menu to adjust the sound to your specific requirements.

Kvadrat speaker fabric

Sound this perfect should be heard with no obstructions. The soundbar on this Philips display is covered with a premium speaker fabric created by high-end manufacturer Kvadrat. This beautiful wool-blend material is acoustically transparent, allowing every scintillating detail to flow freely from the speaker into the room.

Ambiglow technology

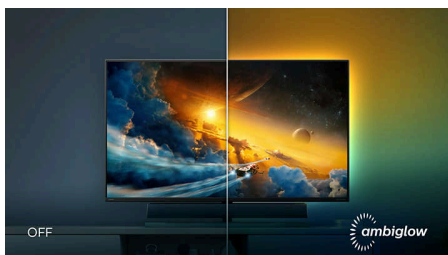

Ambiglow adds a new dimension to your viewing experience. The innovative Ambiglow technology enhances the content on the screen by creating a halo of light from the monitor. Its fast processor analyses the incoming image content and continuously adapts the colour and brightness of the emitted light to match the


image. Especially suited for watching movies, sports or playing games, Philips Ambiglow offers you a unique and immersive viewing experience.

SmartImage HDR



Select one of SmartImage HDR modes to best suit your needs. HDR Game: optimised for playing video games. With brighter white and darker black, the gaming scene is vivid and reveals more details, easily spot enemies hiding in the dark corners and shadows. HDR Movie: ideal for watching HDR movie. Delivers better contrast and brightness for a more realistic and immersive viewing experience. HDR Photo: enhanced red, green and blue for lively visuals. DisplayHDR: VESA DisplayHDR certified*. Personal: customised settings in picture menu. *Please refer to specification for HDR grade.


UltraClear 4K UHD Resolution

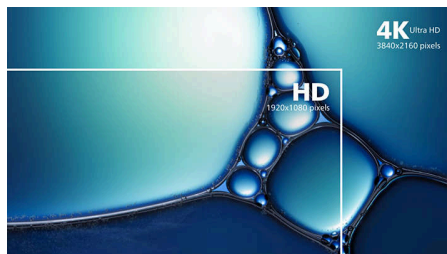

These Philips displays utilise high-performance panels to deliver UltraClear, 4K UHD (3840 x 2160) resolution images. Whether you are a demanding professional requiring extremely detailed images for CAD solutions, a user of 3D

graphics applications or a financial wizard working on huge spreadsheets, Philips displays will make your images and graphics come alive.

AMD FreeSync™ Premium Pro

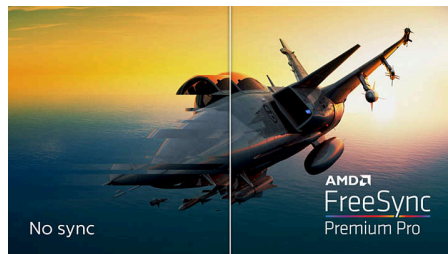

Gaming shouldn't be a choice between choppy gameplay or broken frames. AMD FreeSync™ Premium Pro provides the true HDR gaming experience: a combination of smooth gaming at peak performance and exceptional high dynamic range visuals while still maintaining low latency.

120 Hz Gaming



You play intense, competitive games. You demand a display with lag-free, ultra-smooth images. This Philips display redraws the screen image up to 120 times per second, effectively faster than a standard display. A lower frame rate can make enemies appear to jump from spot to spot on the screen, making them difficult targets to hit. With 120 Hz frame rate, you get those critical missing images on the screen, showing enemy movement in ultra-smooth motion so you can easily target them. With ultra-low input lag and no screen tearing, this Philips display is your perfect gaming partner.

4K
Ultra HD

AMD
FreeSync
Premium Pro

120Hz

Low Input Lag

Flicker-free

Multiview

Flicker-free

VESA CERTIFIED
DisplayHDR 1000


Gaming Monitor

4K HDR display with Ambiglow

558M1RY/01

Highlights

Low Input Lag

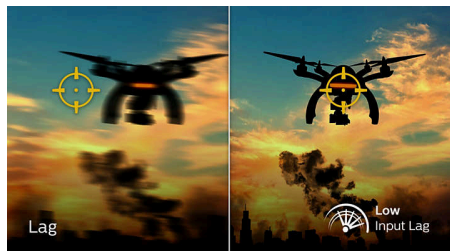


Input lag is the amount of time that elapses between performing an action with connected devices and seeing the result on screen. Low input lag reduces the time delay between entering a command from your devices to monitor, greatly improving play on twitch-sensitive video games, particularly important for playing fast-paced, competitive games.

Flicker-Free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-Free technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

MultiView technology

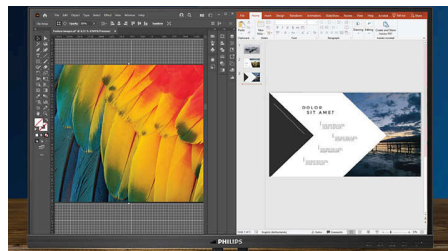

With the ultra-high resolution Philips MultiView display, you can now experience a world of connectivity. MultiView enables active dual connect and view so that you can work with multiple devices like a PC and notebook simultaneously, for complex multitasking.

4K
Ultra HD

AMD
FreeSync
Premium Pro

120Hz

Low Input Lag

Flicker-free

Multiview

Gaming Monitor

4K HDR display with Ambiglow

558M1RY/01

Specifications

Picture/Display

Panel Size: 55 inch/139.7 cm

Aspect ratio: 16:9

LCD panel type: VA LCD

Backlight type: W-LED system

Pixel pitch: 0.315 x 0.315 mm

Optimum resolution: HDMI: 3840 x

2160 @ 60 Hz, 2560 x 1440 @ 120 Hz; DP: 3840 x

2160 @ 120 Hz

Brightness: Normal Mode: 750 cd/m²; HDR

Mode: 1200 cd/m²

Display colours: Colour support 1.07 billion colours

Colour gamut (typical): NTSC 104%*, sRGB 125%*

Colour gamut (min.): DCI-P3 Coverage: 95%*

Contrast ratio (typical): 4000:1

SmartContrast: Mega Infinity DCR

Response time (typical): 4 ms (Grey to Grey)

Viewing angle: 178° (H)/178° (V), @ C/R > 10

Picture enhancement: SmartImage game

Effective viewing area: 1209.6 (H) x 680.4 (V) mm

Scanning Frequency: HDMI: 30–160 kHz (H)/40–

60 Hz (V); DP: 30–270 kHz (H)/48–120 Hz (V)

sRGB

Delta E: < 2 (sRGB)

Flicker-free

Pixel Density: 80 PPI

LowBlue Mode

SmartUniformity: 95 ~ 103%

Low Input Lag

AMD FreeSync™ technology: Premium Pro

HDR: DisplayHDR 1000 certified

Ambiglow: 3 sided

Connectivity

Signal Input: DisplayPort 1.4 x 1, HDMI 2.0 x 3

Sync Input: Separate Sync

Audio (In/Out): Headphone out

USB: USB-B x 1 (upstream), USB 3.2 x 4

(downstream with 2 fast charge B.C 1.2)

Convenience

Plug and Play Compatibility: DDC/CI, Mac OS X,

sRGB, Windows 10 / 8.1 / 8 / 7

User convenience: Power On/Off, Menu/OK,

Input/Up, Sound Mode/Down, SmartImage

game/Back

OSD Languages: Brazil Portuguese, Czech, Dutch,

English, Finnish, French, German, Greek,

Hungarian, Italian, Japanese, Korean, Polish,

Portuguese, Russian, Spanish, Simplified Chinese,

Swedish, Turkish, Traditional Chinese, Ukrainian

Other convenience: Kensington lock, VESA

mount (200 x 200 mm)

MultiView: PIP/PBP mode, 2 x devices

Sound

Output Power: 40 W (RMS), 2.1 Channel, Sound

by Bowers & Wilkins

Sound Enhancement: DTS Sound

Speaker Configuration: 2 x tweeters, 10 W x 2

mid-high speakers, 20 W x 1 woofer

Stand

Tilt: -5/10 degree

Power

Power supply: Internal, 100–240 VAC, 50–60 Hz

Off mode: 0.3 W (typ.)

On mode: 122.96 W (typ.)

Standby mode: 0.5 W (typ.)

Power LED indicator: Operation - N.A., Off - Red,

Standby - Red (breathing)

Energy Label Class: G

Dimensions

Packaging in mm (W x H x D): 1390 x 990 x

376 mm

Product without stand (mm): 1232 x 715 x

102 mm

Product with stand (max height): 1232 x 834 x

308 mm

Weight

Product with packaging (kg): 34.31 kg

Product with stand (kg): 26.5 kg

Product without stand (kg): 22.7 kg

Operating conditions

Altitude: Operation: +12,000 ft (3658 m), Non-

operation: +40,000 ft (12,192 m)

Temperature range (operation): 0°C to 40°C °C

MTBF: 50 000 (Excluded backlight) hour(s)

Relative humidity: 20%-80 %

Temperature range (storage): -20°C to 60°C °C

Sustainability

Environmental and energy: RoHS

Recyclable packaging material: 100 %

Specific Substances: Mercury free, PVC/BFR free housing

Compliance and standards

Regulatory Approvals: CB, CE Mark,

TUV/ISO9241-307, TUV-BAUART, UKRAINIAN,

CU-EAC, EAEU RoHS, CCC, CECP, CEL

Cabinet

Colour: Black

Finish: Textured/Glossy

What's in the box?

Cables: DP cable, HDMI cable, Power cable

Monitor with stand

User Documentation

Accessory: Remote control



* Response time value equal to SmartResponse

* For best output performance, please always ensure that your graphic card is capable of achieving the maximum resolution and refresh rate of this Philips display.

* BT. 709 / DCI-P3 Coverage based on CIE1976

* NTSC Area based on CIE 1976

* sRGB Area based on CIE1931

* 2020 Advanced Micro Devices, Inc. All rights reserved. AMD, the AMD Arrow logo, AMD FreeSync™ and combinations thereof are trademarks of Advanced Micro Devices, Inc. Other product names used in this publication are for identification purposes only and may be trademarks of their respective companies.

* The monitor may look different from feature images.