



Philips  
LCD monitor

56 cm/22" w E-line

1920x1080 Full HD

220E1SB

## Full HD 16:9 display with Glossy design

Enjoy more with this Vista-ready Full HD 1080p quality display! The 220E1 comes with attractive Glossy finish and easy to use features - All in a budget friendly package.

### Great picture quality

- Full HD LCD display, 1920x1080p resolution
- 5ms fast response time
- SmartContrast 25000:1 for incredible rich black details
- DVI signal input for full HD performance with HDCP

### Design that complements any interior

- Glossy finish to enhance your decor

### Great convenience

- Easy picture format control switching in wide and 4:3 format

**PHILIPS**  
sense and simplicity

LCD monitor  
56 cm/22" w E-line 1920x1080 Full HD

220E1SB/97

# Highlights

## Full HD 1920x1080p LCD display

This display has a resolution that is referred to as Full HD. With state-of-the-art LCD screen technology it has the full high-definition widescreen resolution of 1920 x 1080p. It allows the best possible picture quality from any format of HD input signal. It produces brilliant flicker-free pictures with optimum brightness and superb colors. This vibrant and sharp image will provide you with an enhanced viewing experience.

## 5ms on/off response time

On-Off response time is the period required for a liquid crystal cell to go from active (black) to inactive (white) and back to active (black) again. It is measured in milliseconds. Faster is better: Lower response time means faster transitions and, therefore, results in fewer visible image artifacts in the display of transition of texts and graphics. On-Off response time is a more important measure in the display of business content like documents, graphs and photos.

## SmartContrast ratio 25000:1




You want the LCD flat display with the highest contrast and most vibrant images. Philips advanced video processing combined with unique extreme dimming and backlight boosting technology results in vibrant images. SmartContrast will increase the contrast with excellent blacklevel and accurate rendition of dark shades and colors. It gives a bright, lifelike picture with high contrast and vibrant colors.

## DVI signal with HDCP

High-Bandwidth Digital Content Protection (HDCP) is a copyright protection system that is incorporated into the DVI connector. It

helps stop unauthorized duplication of copyrighted content. HDCP allows you to play protected content media such as movies and concerts. It checks the signal to prevent piracy, allowing only legal copies of content to display.

## Easy picture format control

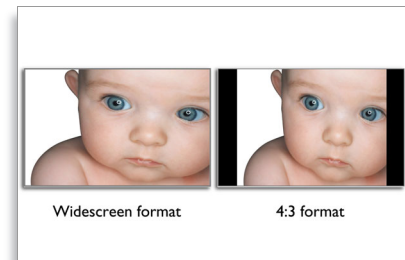

Philips easy picture format control on OSD is to switch from the 4:3 aspect ratio to the widescreen mode and back again to match the display's aspect ratio with your content for working with wide documents without scrolling or viewing widescreen media in the widescreen mode and distortion-free, native mode display of 4:3 ratio content.



# Specifications

## Picture/Display

- LCD panel type: TFT-LCD
- Panel Size: 21.5 inch / 54.61 cm
- Aspect ratio: 16:9
- Pixel pitch: 0.248 x 0.248 mm
- Brightness: 250 cd/m<sup>2</sup>
- SmartContrast: 25000:1
- Response time (typical): 5 ms
- Optimum resolution: 1920 x 1080 @ 60Hz
- Viewing angle: 170° (H) / 160° (V), @ C/R > 10
- Display colors: 16.7 M
- Scanning Frequency: 30 - 83 kHz (H) / 56 - 76 Hz (V)
- sRGB

## Connectivity

- Signal Input: VGA (Analog), DVI-D
- Sync Input: Composite Sync, Separate Sync, Sync on Green

## Convenience

- User convenience: Brightness, Menu, Auto, Power On/Off
- OSD Languages: English, French, German, Italian, Russian, Simplified Chinese, Spanish, Portuguese, Turkish
- Other convenience: VESA mount (100x100mm), Kensington lock
- Plug & Play Compatibility: DDC/CI, Windows 7/ Vista/XP/2000/98, sRGB

## Stand

- Tilt: -5/20 degree

## Power

- On mode: <20.5W (EnergyStar 5.0 test method)
- Off mode: < 0.5 W
- Power LED indicator: Operation - green, Stand by/ sleep - Amber
- Power supply: Built-in, 100-240VAC, 50/60Hz

## Dimensions

- Product with stand (mm): 512 x 374 x 205 mm
- Product without stand (mm): 453 x 570 x 140 mm
- Packaging in mm (WxHxD): 570 x 453 x 140 mm

## Weight

- Product with stand (kg): 4.4 kg
- Product without stand (kg): 4.04 kg
- Product with packaging (kg): 6.28 kg

## Operating conditions

- Temperature range (operation): 0 - 40 °C
- Temperature Range (storage): -20 - 60 °C
- Relative humidity: 20 - 80 %
- MTBF: 50,000 hour(s)

## Sustainability

- Environmental and energy: EPEAT Silver, RoHS, EnergyStar 5.0

## Compliance and standards

- Regulatory Approvals: CE Mark, FCC, Class B, UL/cUL

## Cabinet

- Color: Black
- Finish: Glossy



Issue date 2011-06-07

Version: 3.0.6

12 NC: 8670 000 51437  
EAN: 87 12581 47647 2

© 2011 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)