



Philips Moda
LCD monitor with
Ambiglow Plus Base

Moda
27" (68.6 cm)
1920 x 1080 (Full HD)



275C5QHGSW

The magic of light

for an immersive experience

Fill your space-and your life-with the wonder of Ambiglow Plus. The iconic Philips Moda display with Ambiglow Plus Base, offers brilliant visuals and an immersive lighting experience.

Immersive design

- Ambiglow Plus Base provides an immersive lighting experience
- Narrow border display for seamless appearance

Brilliant performance

- AH-IPS display for brilliant images with vivid colors
- 16:9 Full HD display for crisp detailed images
- LED technology for natural colors
- Less eye fatigue with Flicker-free technology
- SmartContrast for rich black details

Easy to experience

- SmartImage presets for easy optimized image settings
- MHL technology for enjoying mobile content on big screen
- HDMI ensures universal digital connectivity



PHILIPS


Highlights

AmbiGlow Plus Base



Ambiglow adds a new dimension to your viewing experience. Innovative Ambiglow technology enlarges your experience by creating a halo of light on and around the base. Its fast processor analyses the incoming image and adapts the color and brightness of the light to match the image. Additionally, the Ambiglow Plus lighted base can cycle through different hues, or allow the user to manually select the hue or timing of the light for ambient colored mood lighting experience. Color, vibrancy and excitement move beyond the screen, bringing a more thrilling, intense and immersive viewing experience.

AH-IPS technology

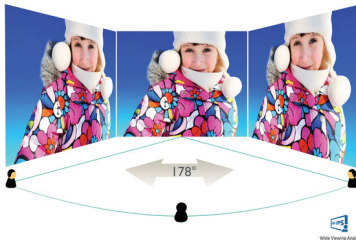

This latest Philips display uses advanced AH-IPS panels resulting in superior color reproduction, response time and power consumption. Unlike standard TN panels, AH-IPS panels show consistent color even at 178 degrees wide angles and in pivot mode. With remarkable performance, AH-IPS is best suited for applications demanding color accuracy and consistent brightness at all times like photo retouching, graphics applications and web browsing.

UltraNarrow Border



The new Philips displays feature ultra-narrow borders which allow for minimal distractions and maximum viewing size. Especially suited for multi-display or tiling setup like gaming, graphic design and professional applications, the ultra-narrow border display gives you the feeling of using one large display.

16:9 Full HD display



Picture quality matters. Regular displays deliver quality, but you expect more. This display features enhanced Full HD 1920 x 1080 resolution. With Full HD for crisp detail paired with high brightness, incredible contrast and realistic colors expect a true to life picture.

Flicker-free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-free Technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

MHL technology



Mobile High Definition Link (MHL) is a mobile audio/video interface for directly connecting mobile phones and other portable devices to high-definition displays. An optional MHL cable allows you to simply connect your MHL capable mobile device to this large Philips MHL display, and watch your HD videos come to life with full digital sound. Now not only you can enjoy your mobile games, photos, movies, or other apps on its big screen, you can simultaneously charge your mobile device so you never run out of power half way.

HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. A HDMI cable enables high-quality digital video and audio all transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).



Computex d&i awards 2015

Excellent product design
 Ambiglow Plus Base adds a glow of light for an immersive experience



Specifications

Picture/Display

- LCD panel type: AH-IPS LCD
- Backlight type: W-LED system
- Panel Size: 27 inch / 68.6 cm
- Effective viewing area: 597.88 (H) x 336.31 (V)
- Aspect ratio: 16:9
- Optimum resolution: 1920 x 1080 @ 60 Hz
- Response time (typical): 5 ms (Gray to Gray)*
- Brightness: 250 cd/m²
- Contrast ratio (typical): 1000:1
- SmartContrast: 20,000,000:1
- Pixel pitch: 0.3114 x 0.3114 mm
- Viewing angle: 178° (H) / 178° (V), @ C/R > 10
- Picture enhancement: SmartImage
- Display colors: 16.7 M
- Scanning Frequency: 30 - 83 kHz (H) / 56 -76 Hz (V)
- MHL: 1920 x 1080p @ 30Hz
- sRGB

Connectivity

- Signal Input: VGA (Analog), HDMI (digital, HDCP), MHL-HDMI (digital, HDCP)
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): HDMI audio out

Convenience

- User convenience: Ambiglow+, SmartImage, Input, Menu, Power On/Off
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 8.1 / 8 / 7

Stand

- Tilt: -5/20 degree degree

Power

- On mode: 20.84 W (typ.) (EnergyStar 6.0 test method)
- Standby mode: 0.5 W (typ.)
- Off mode: 0.3 W (typ.)

- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Power supply: External, 100-240VAC, 50-60Hz

Dimensions

- Product with stand (mm): 613 x 482 x 245 mm
- Product without stand (mm): 613 x 372 x 42 mm
- Packaging in mm (WxHxD): 730 x 573 x 297 mm

Weight

- Product with stand (kg): 5.74 kg
- Product without stand (kg): 4.37 kg
- Product with packaging (kg): 9.26 kg

Operating conditions

- Temperature range (operation): 0 to 40 °C
- Temperature range (storage): -20 to 60 °C
- Relative humidity: 20%-80 %
- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- MTBF: 50,000 (Excluding backlight) hour(s)

Sustainability

- Environmental and energy: EnergyStar 6.0, RoHS, Lead-free, Mercury Free
- Recyclable packaging material: 100 %

Compliance and standards

- Regulatory Approvals: CE Mark, FCC Class B, CU, cETLus, BSMI, TUV/ISO9241-307, CB, MEPS, SASO, KUCAS, EPA, WEEE

Cabinet

- Finish: Glossy
- Color: White

Ambiglow Plus Base

- Mode: On, Auto, User define, Off
- Timer: Timer for Ambiglow+ On/Off
- Brightness control: Dimmer, Default, Brighter

What's in the box?

- Monitor with stand
- Cables: VGA, HDMI, Power
- User Documentation



Issue date 2020-04-17

Version: 5.0.1

12 NC: 8670 001 29839
EAN: 87 12581 73563 0

© 2020 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* This Philips display is MHL certified. However, in case your MHL device does not connect or work correctly, check with your MHL device FAQ or vendor directly for direction. The policy of your device manufacturer may require you to purchase their brand specific MHL cable or adapter in order to work

* Requires optional MHL certified mobile device and MHL cable. (not included) Please check with your MHL device vendor for compatibility.

* Standby/Off energy saving of ErP is not applicable for the MHL charging functionality

* For complete list of MHL-enabled products refer to www.mhlconsortium.org

* "AH-IPS" word mark / trademark and related patents on technologies belong to their respective owners.

* HDMI cables vary depending on region and models.

* Response time value equal to SmartResponse