



Philips G600 Series
Wired mechanical gaming
keyboard

High-speed mechanical keys
6-color backlit keys
5 extra dedicated macro keys
Black alloy surface

SPK8601B

Lightning fast, ultra responsive, super durable

The new G600 series gaming keyboard features high speed mechanical keys for the dialed-in performance and 5 macro keys for custom control. 6-way backlit colors for a cool match to your system. Metal alloy surface offers rugged durability.

Performance to dominate

- Dialed-in mechanical cyan switches for fast reaction
- Full-key roll over anti-ghosting for complex fast inputs

Customize and dial-in for performance

- Five additional dedicated macro keys for customization

Cool looks to match your mod

- Six color LED-backlit keys

Designed for heavy use

- Water resistant design for cleaning and occasional spills
- 50 million keystroke lifespan
- Alloy surface for super durability


PHILIPS

Wired mechanical gaming keyboard
High-speed mechanical keys 6-color backlit keys, 5 extra dedicated macro keys, Black alloy surface

SPK8601B/89


Highlights

Full n-key rollover

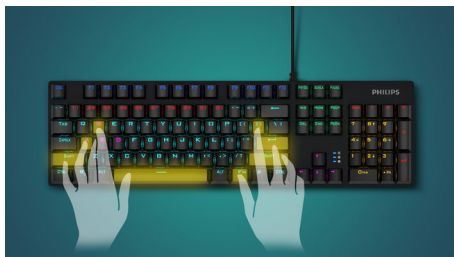

Fast complex gaming key strokes demand advanced performance. With full N-key rollover every key is registered independently without confusion so that each keystroke is correctly registered regardless of how many other keys are being pressed or held down at the time.

Six color LED-backlit keys

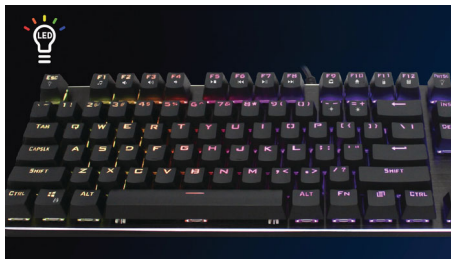


Six color LED-backlit keys

Water resistant keys



Life can be messy. With this water resistant keyboard, the occasional spill or spray off is no problem. These keyboards are built to last.

50 million keystroke lifespan

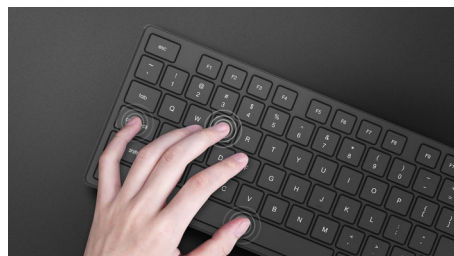

How long does it take to get to 50 million keystrokes? A long time. Familiar and reliable this keyboard is built to last for many years of fast action.

Alloy surface design



Everything about this keyboard is built to last for rugged high performance use, even down

to the keyboard surface. The Alloy surface is designed for high durability, superior rigidity and looks great too.

Fast mechanical switches



The most popular mechanical switches for gaming keyboards, Cyan mechanical switches offer gamers a light tactile clicky key for rapid activation and performance.

5 additional macro keys



Your keyboard is your control. You dial it in and customize for fast action. An additional five macro keys gives you the customization you need to gain an edge.

Specifications

Technical specifications

- Product Type: High performance mechanical gaming keyboard
- Design Type: Ergonomic design
- Connectivity: USB 2.0 wired
- Front Panel Material: Alloy front-panel
- Front Panel Color: Black
- Keys: 104 Keys
- Key Rollover Type: N-key rollover
- Macro Key Type: Five additional dedicated macro keys (Y,U,I,O,P)
- Key Lifespan: 50 million keystroke lifespan

- Travel Distance Type Of Key: Medium key travel
- Lighting Effect Type: Multiple color backlit (six types lighting effects)
- Water Resistant

Physical Dimensions

- Dimensions (LxVxH): 438 x 132 x 38.5 (mm)
- Weight: 896 (g)

OS/System Requirements

- System Requirements: Microsoft Windows 2000, ME, XP, Vista and above, Linux, IOS



Issue date 2021-12-09

Version: 1.0.1

12 NC: 8670 001 65465
EAN: 87 12581 76461 6

© 2021 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com