

Philips Signage Solutions  
Multi-Touch Display

10"

Powered by Android  
Multi-touch

**Signage**Solutions

10BDL3051T

## A new level of interaction

with an Android™ powered 10" touch display,

Enhance and personalise interactions with this user-friendly, 5 point touch screen

### Supreme audience interaction

- Engage clients with an interactive screen
- True multi touch with 5 simultaneous touch points

### Innovative solutions for any signage application

- Android: Run your own app or choose your favourite app to run
- Save and play content with internal memory
- LED bars for meeting-room applications
- Simplify installation with Power-over-Ethernet
- Built-in Wi-Fi and Bluetooth

### Maximising the impact of your message

- Simplify your installation with the built-in wall mount
- Connect and control your content via the cloud
- CMND: Take control of your displays

# PHILIPS

# Highlights

## Powered by Android

With Android OS integrated into the display, you can work with the most developed OS on the planet and save your own app directly into the display. Or, choose from the large library of Android apps and play content from there. With the built-in scheduler, you can daypart your apps and content based on your customer and time of day and with the auto-orientation feature, showing content in portrait or landscape is as simple as turning the display.

## Internal Memory



Save and play content with internal memory. Upload your media into the display and playback content immediately. Working in conjunction with the internal browser, it also serves as a memory cache when streaming online content. If the network ever fails, the internal memory keeps content running by playing a cached version of the content, ensuring that your media stays up even if the network goes down.

## LED Bars

With LED strips along the side of the display, you broadcast a halo of light to visitors passing by. This technology can be used to signify if the meeting room is available, or to simply add a colourful new signage dimension to your business.

## Power-over-Ethernet

Simplify installation with Power-over-Ethernet technology. Using this technology, power and connectivity can be delivered over a single ethernet line. This allows for a simplified installation, since there is no need for a power adapter. Displays can be installed in small, hard-to-reach areas, helping to ensure a more flexible and adaptable display environment. And for those who prefer not to use Power-over-Ethernet, a power adapter is included in the box.

## Built-in wall mount

Save time and money with the built-in wall mount. Install your display straight out of the box with the mount already built-in to the back of the display.

## Multi-touch interactivity

Using the power of touch, a brand new level of interactivity is possible. With projected capacitive touch technology, this 10" display offers a bezel-less front, complete with 5

simultaneous touch points, meaning users can interact with your business in new, dynamic ways.

## SmartBrowser




Connect and control your content via the cloud with the integrated HTML5 browser. Using the Chromium based browser, design your content online and connect a single display, or your complete network. Simply connect the display to the Internet using Wi-Fi or with an RJ45 cable, and enjoy your own created playlists.

## Wi-Fi and Bluetooth

Communicate wirelessly with integrated Wi-Fi and Bluetooth or simplify your content control by downloading content wirelessly.

## CMND



A robust display management platform, CMND puts the power back into your hands. From content management to settings, you can control it with CMND.

# Specifications

## Picture/Display

- Diagonal screen size: 10.1" inch / 25.6 cm
- Panel resolution: 1280 x 800
- Optimum resolution: 1280 x 800
- Brightness: 300 cd/m<sup>2</sup>
- Contrast ratio (typical): 800:1
- Aspect ratio: 16:9
- Response time (typical): 30 ms
- Viewing angle (H / V): 170 / 170 degree
- Display colours: 262,000

## Interactivity

- Multi-touch technology: Projected capacitive
- Touch points: 5 simultaneous touchpoints
- Protection glass: 0.7 mm tempered safety glass

## Connectivity

- Video output: HDMI
- Audio output: External speaker connector
- External control: RJ45
- Other connections: USB, micro SD

## Convenience

- Placement: Landscape (16/7), Portrait (16/7)
- Network controllable: RJ45, Wi-Fi
- Picture performance: Advanced colour control
- Screen-saving functions: Pixel Shift, Low Brightness
- Keyboard control: Hidden, Lockable
- Energy-saving functions: Smart Power
- Memory: 8 GB eMMC

## Dimensions

- Set dimensions (W x H x D):  
261 x 167.2 x 29 mm
- Product weight: 0.71 kg
- VESA Mount: 75 x 75
- Product weight (lb): 1.57 lb
- Set dimensions in inch (W x H x D):

- 10.28 x 6.58 x 1.14 inch
- Bezel width (L/R, T/B): 19.77 (L/R), 13.56 (T/B) mm

## Sound

- Built-in speakers: 2 x 2 W

## Operating conditions

- Temperature range (operation): 5 ~ 40 °C
- Relative humidity: 20 ~ 80 %
- MTBF: 50,000 hour(s)
- Altitude: 0 ~ 3000 m
- Temperature range (storage): -20 ~ 60 °C

## Power

- Mains power: DC12V +/- 5%, 1.5A, PoE=24W
- Standby power consumption: <0.5 W
- Consumption (Typical): 6 W

## Accessories


- Included accessories: Quick start guide, Tabletop stand, USB cable, DC power adapter, HDMI cable, Power plug, Silicone foot

## Miscellaneous

- On-Screen Display Languages: Arabic, English, French, German, Italian, Japanese, Polish, Spanish, Turkish, Russian, Simplified Chinese, Traditional Chinese, Danish, Dutch, Finnish, Norwegian, Portuguese, Swedish
- Regulatory approvals: CB, CE, RoHS, FCC, Class A, UL
- Warranty: 3-year warranty

## Multimedia Applications

- USB Playback Audio: AAC, M4A, MP2, MP3, WMA
- USB Playback Picture: BMP, GIF, JPEG, JPG, PNG
- USB Playback Video: 3GP, AVI, DAT, FLV, MKV, MOV, MP4, MPG, TS, VOB, WEBM

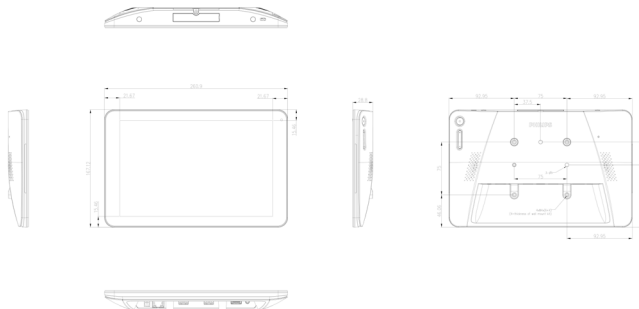

Issue date 2018-03-22

Version: 3.0.2

12 NC: 8670 001 40632  
EAN: 87 12581 74155 6

© 2018 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)