

PHILIPS

Full HD LCD monitor

E Line

27" (68.6 cm)

1920 x 1080 (Full HD)

272E2FA



Experience true colour, unconstrained visuals

The new Philips E line monitor with 4-sides narrow border and cable management design offers a stylish enhancement to your workspace. Experience crisp Full HD visuals, 1 ms and AMD FreeSync™ technology for smooth gaming action.

Features designed for you

- EasySelect menu toggle key for quick on-screen menu access
- Built-in stereo speakers for multimedia
- Less eye fatigue with Flicker-Free technology
- LowBlue Mode for easy-on-the-eyes productivity
- Cable management reduces cable clutter for a neat workspace

Good for Gaming

- 1 ms (MPRT) fast response for crisp images and smooth gameplay
- Effortlessly smooth gameplay with AMD FreeSync™ technology
- SmartImage game mode optimised for gamers

Superb Picture Quality

- SmartContrast for rich black details
- IPS LED wide view technology for image and colour accuracy
- 4-sided frameless display


Highlights

4-sided frameless




Extremely minimising 4 sided bezels on this virtually frameless display give a minimalist look and offer an expansive viewing experience. Expands your productivity and makes you focus on the vivid images with seamless visions. Significant wide view without distraction and even multi monitor set-up in pivot mode.

IPS technology

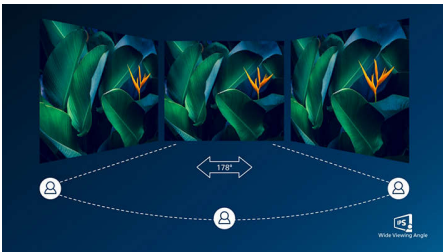

IPS displays use an advanced technology that gives you extra-wide viewing angles of 178/178 degrees, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS displays give you remarkably crisp images with vivid colours, making them ideal not only for Photos, movies and web browsing, but also for professional applications that demand colour accuracy and consistent brightness at all times.

Ultra-smooth gaming

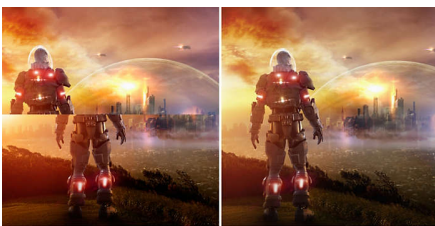

Gaming shouldn't be a choice between choppy gameplay or broken frames. With the new Philips monitor it doesn't have to be. Get fluid,

artefact-free performance at virtually any frame rate with AMD FreeSync™ technology, smooth, quick refresh and ultra-fast response time.

1 ms MPRT fast response



MPRT (motion picture response time) is a more intuitive way to describe response time, which directly refers to the duration between seeing blurry noise and clean, crisp images. The Philips monitor with 1 ms MPRT effectively eliminates smearing and motion blur and delivers sharper and more precise visuals to enhance your gaming experience. The best choice for playing thrilling and twitch-sensitive games.

SmartImage Game mode



The new Philips gaming display has quick-access OSD fine-tuned for gamers, offering you multiple options. "FPS" mode (First person shooting) improves dark themes in games, allowing you to see hidden objects in dark areas. "Racing" mode adapts the display with the fastest response time and high colour, along with image adjustments. "RTS" mode (Real-time strategy) has a special SmartFrame mode that enables highlighting of specific area and allows for size and image adjustments. Gamer 1 and Gamer 2 enable you to save personal customised settings based on different games, ensuring best performance.

Flicker-Free technology




Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-Free technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

LowBlue Mode



Studies have shown that just as ultra-violet rays can cause eye damage, shortwave-length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, the Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.

Cable management

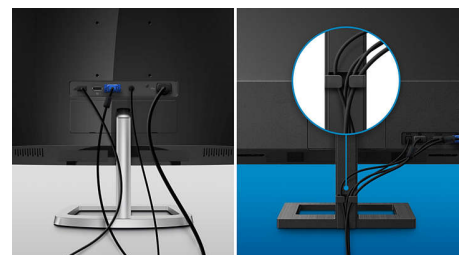

Cable management is an intimate design that maintains a tidy workspace by organising the cables and wires required for the operation of a display device.



4-sided
Frameless



Wide Viewing
Angle



AMD
FreeSync



Fast Response
1ms MPRT



SmartImage™
Game



Flicker-free



LowBlue Mode



EasySelect

Highlights

EasySelect Menu Toggle Key




The discreetly placed EasySelect Menu Toggle Key allows you to make quick and easy adjustments to monitor settings in the On-Screen Display menu.

Built-in stereo speakers



A pair of high-quality stereo speakers built into a display device. They may be visible front firing, or invisible down firing, top firing, rear firing etc. depending on model and design.

SmartContrast

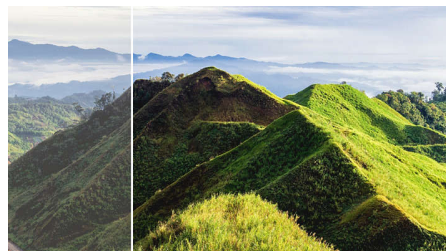

SmartContrast is a Philips technology that analyses the contents you are displaying, automatically adjusting colours and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.



4-sided
Frameless



Wide Viewing
Angle



Fast Response
1ms MPRT



SmartImage™
Game



Flicker-free

Specifications

Picture/Display

Panel Size: 27 inch/68.6 cm
Aspect ratio: 16:9
LCD panel type: IPS technology
Backlight type: W-LED system
Pixel pitch: 0.3114 x 0.3114 mm
Brightness: 350 cd/m²
Display colours: 16.7 M
Colour gamut (typical): NTSC 97.4%*, sRGB 113.1%*
Contrast ratio (typical): 1000:1
SmartContrast: Mega Infinity DCR
Response time (typical): 4 ms (Grey to Grey)*
Viewing angle: 178° (H)/178° (V), @ C/R > 10
Picture enhancement: SmartImage game
Maximum resolution: 1920 x 1080 @ 75 Hz*
Effective viewing area: 597.89 (H) x 336.31 (V) mm
Scanning Frequency: 30–85 kHz (H) / 48–75 Hz (V)
sRGB
Flicker-free
Pixel Density: 82 PPI
LowBlue Mode
Display Screen Coating: Anti-Glare, 3H, Haze 25%
MPRT: 1 ms
EasyRead
AMD FreeSync™ technology

Connectivity

Signal Input: VGA (Analogue), DisplayPort x 1, HDMI (digital, HDCP)
Sync Input: Separate Sync, Sync on Green
Audio (In/Out): PC audio-in, Headphone out

Convenience

Built-in Speakers: 3 W x 2
Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
User convenience: Power On/Off, Menu, Volume, Input, SmartImage Game
OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
Other convenience: Kensington lock, VESA mount (100 x 100 mm)

Stand

Tilt: -5/20 degree

Power

Power supply: External, 100–240 VAC, 50–60 Hz
Off mode: 0.3 W
On mode: 15.15 W (typ.) (EnergyStar test method)
Standby mode: 0.5 W
Power LED indicator: Operation - White, Standby mode - White (flashing)
Energy Label Class: E

Dimensions

Packaging in mm (W x H x D): 678 x 504 x 153 mm
Product without stand (mm): 614 x 354 x 38 mm
Product with stand (max height): 614 x 462 x 234 mm

Weight

Product with packaging (kg): 7.02 kg
Product with stand (kg): 4.76 kg
Product without stand (kg): 3.43 kg

Operating conditions

Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
Temperature range (operation): 0 to 40 °C
MTBF: 50,000 hrs (excluding backlight) hour(s)
Relative humidity: 20%-80 %
Temperature range (storage): -20 to 60 °C

Sustainability

Environmental and energy: EnergyStar 8.0, TCO Certified, RoHS, Mercury Free
Recyclable packaging material: 100 %

Compliance and standards

Regulatory Approvals: CB, EPA, CE Mark, CU-EAC, TUV/ISO9241-307, TUV-BAUART, EAEU RoHS, FCC Class B, ICES-003

Cabinet

Colour: Black
Finish: Textured

What's in the box?

Cables: HDMI cable, Power cable
Monitor with stand
User Documentation

