

Philips Signage Solutions
Q-Line Display

65"

Edge-lit LED
Full HD

BDL6520QL



Intensify your signage experience

with priceless smart performance

Deliver startlingly clear images in a more eco-friendly way with the Q-Line display. High on performance and reliability, yet low on power consumption, it is ideal for projects where no compromise is accepted.

Optimised for public viewing

- Full HD LED for brilliant images with incredible contrast

Innovative solutions for any signage application

- Connect your display and start sharing with DLNA
- Connect and control your content via the cloud with HTML5
- Schedule what you want, when you want with SmartPlayer
- Free and easy-to-use content management with SmartCMS

Maximising the impact of your message

- Manage and control your network remotely via SmartControl

Care about you, your business and your audience

- SmartPower for energy saving
- Keep your content up and running with FailOver

PHILIPS

Q-Line Display
65" Edge-lit LED, Full HD

Highlights

Full HD LED technology

Picture Quality matters. Standard displays deliver quality, but you expect more. Imagine crisp detail paired with high brightness, incredible contrast and realistic colours for a true-to-life picture.

SmartControl



SmartControl lets you remotely control and manage your network of displays via RJ45 and RS232C. Easily fine-tune all display settings including resolution, brightness, contrast and cloning of your settings over your complete network.

SmartBrowser



Connect and control your content via the cloud with the integrated HTML5 browser. Design your signage content online and connect it with a display or with your entire network. Simply plug in a RJ45 Internet cable for network connection and connect the


display with the dedicated URL address, and you are ready to play your cloud-based content.

SmartPlayer



Turn your USB into a true cost-effective digital signage device. Simply save your content (video, audio, pictures) on your USB and plug into your display. Create your playlist and schedule your content via the on-screen menu, and enjoy your own playlists anytime, anywhere.

SmartCMS

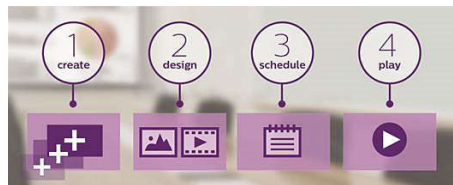

Free and easy-to-use content management system that works exclusively with Philips Signage Solutions displays to manage your digital signage content. With SmartCMS you can create and schedule your own content over 24 hours every day. Simply create your network, design your content and schedule your playlist, and you are ready to play!


Share and Stream with DLNA

Simply share and stream content from your mobile device or media player to your display

BDL6520QL/00

with all DLNA compliant media devices. Connect each display with an ethernet cable and manage your content in real time within your local network. Simply connect your display and start sharing.

SmartPower

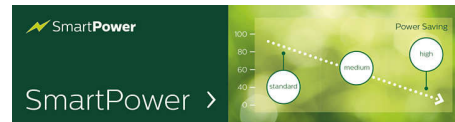

The backlight intensity can be controlled and pre-set by the system to reduce the power consumption by up to 50%, which saves substantially on energy costs.

FailOver



Keeping your content up and running is critical for demanding commercial applications. While it is unlikely you will face a content disaster, FailOver provides content protection with a revolutionary technology that plays back-up content on screen in the event of a media player failure. FailOver automatically kicks in when the primary input fails. Simply select a primary input connection and a FailOver connection and you're ready for instant protection.

1080p FullHD

SmartControl



SmartPlayer

SmartCMS



SmartPower

FailOver

Specifications

Connectivity

- Audio output: Audio Left/Right (RCA), External speaker connector
- Video input: DisplayPort, HDMI (x 2), DVI-D, VGA (Analogue D-Sub), Component (RCA), Composite (RCA), USB
- Audio input: 3.5 mm jack, Audio Left/Right (RCA)
- Video output: DisplayPort, DVI-I, VGA (via DVI-D)
- External control: RJ45, RS232C (in/out) 2.5 mm jack

Picture/Display

- Diagonal screen size (metric): 163.9 cm
- Diagonal screen size (inch): 65 inch
- Aspect ratio: 16:9
- Panel resolution: 1920 x 1080p
- Pixel pitch: 0.74 x 0.74 mm
- Optimum resolution: 1920 x 1080 @ 60 Hz
- Brightness: 350 cd/m²
- Display colours: 1.07 Billion
- Contrast ratio (typical): 5000:1
- Dynamic contrast ratio: 500,000:1
- Response time (typical): 6.5 ms
- Viewing angle (horizontal): 178 degree
- Viewing angle (vertical): 178 degree
- Picture enhancement: 3/2 - 2/2 motion pull down, 3D Combfilter, Motion compens. deinterlacing, Progressive scan, 3D MA deinterlacing, Dynamic contrast enhancement

Convenience

- Screen-saving functions: Pixel Shift, Low Brightness
- Keyboard control: Hidden, Lockable
- Signal loop through: DisplayPort, DVI, VGA, RS232
- Ease of installation: Smart Insert, AC Out
- Energy-saving functions: Smart Power
- Other convenience: Carrying handles
- Network controllable: LAN (RJ45), RS232, One Wire (HDMI-CEC)

Sound

- Built-in speakers: 2 x 10 W RMS

Power

- Mains power: 100 ~ 240 VAC, 50 ~ 60 Hz
- Consumption (On mode): 122.52 W
- Standby power consumption: <0.5 W

Supported Display Resolution

- Computer formats: 640 x 480, 60, 67, 72, 75 Hz, 800 x 600, 56, 60, 72, 75 Hz, 1024 x 768, 60 Hz, 1280 x 768, 60 Hz, 1280 x 800, 60 Hz, 1360 x 768, 60 Hz, 1366 x 768, 60 Hz, 1440 x 900, 60 Hz, 1600 x 1200, 60 Hz, 1920 x 1080, 60 Hz, 1920 x 1200, 60 Hz
- Video formats: 480i, 60 Hz, 480p, 60 Hz, 576p, 50 Hz, 576i, 50 Hz, 720p, 50, 60 Hz, 1080i, 50, 60 Hz, 1080p, 50, 60 Hz

Dimensions

- Set Width: 1450.5 mm
- Product weight: 36.2 kg
- Set Height: 828.5 mm
- Set Depth: 61.5 mm
- Wall Mount: 400 x 400 mm, M8
- Bezel width: 7.5 (Top/Left/Right) 10.5 (Bottom)

Operating conditions

- Altitude: 0 ~ 3000 m
- Temperature range (operation): 0 ~ 40 °C
- MTBF: 50,000 hour(s)
- Relative humidity: 20 ~ 80 %
- Temperature range (storage): -20 ~ 60 °C

Multimedia Applications


- USB Playback Video: M2TS, M4V, MK3D, MKV, MP4, MPEG, MPG, MTS, TS, TTS, VOB, WMV
- USB Playback Picture: BMP, GIF, JPEG, JPG
- USB Playback Audio: AAC, AIF, AIFF, ASF, M4A, LPCM, M3U, MP3, MP4, WAV, WMA

Accessories

- Included accessories: AC Power Cord, RS232 cable, VGA cable, Remote Control, Batteries for remote control, User manual on CD-ROM, Quick start guide

Miscellaneous

- On-Screen Display Languages: Arabic, Simplified Chinese, Traditional Chinese, English, French, German, Italian, Japanese, Polish, Russian, Spanish, Turkish
- Warranty: 3-year warranty
- Regulatory approvals: EPEAT, CE, FCC, Class B, UL/cUL, CB, GOST

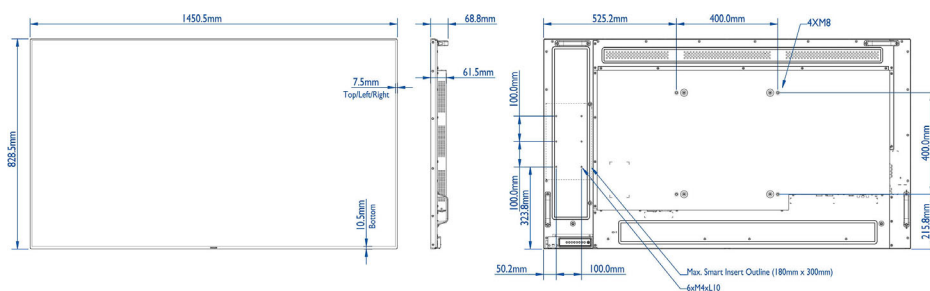

Issue date 2024-03-24

Version: 3.0.1

EAN: 87 12581 72806 9

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com