



# www.philips.com/welcome

# EN User manual 1 Customer care and warranty 20 Troubleshooting & FAQs 24

# **Table of Contents**

1.	Important
2.	Setting up the monitor
3.	Image Optimization103.1 SmartImage103.2 SmartContrast11
4.	AMD FreeSync™ Premium12
5.	HDR13
6.	Technical Specifications
7.	Power Management19
8.	Customer care and warranty20 8.1 Philips' Flat Panel Monitors Pixel Defect Policy20 8.2 Customer Care & Warranty23
9.	Troubleshooting & FAQs24 9.1 Troubleshooting24 9.2 General FAOs25

# 1. Important

This electronic user's guide is intended for anyone who uses the Philips monitor. Take time to read this user's manual before you use your monitor. It contains important information and notes regarding the operation of your monitor.

The Philips guarantee applies provided the product is handled properly for its intended use, in accordance with its operating instructions and upon presentation of the original invoice or cash receipt, indicating the date of purchase, dealer's name and model and production number of the product.

# 1.1 Safety precautions and maintenance

## Warnings

Use of controls, adjustments or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards and/or mechanical hazards.

Read and follow these instructions when connecting and using your computer monitor.

#### Operation

- Please Keep the monitor out of direct sunlight, very strong bright lights and away from any other heat source. Lengthy exposure to this type of environment may result in discoloration and damage to the monitor.
- Keep the display away from oil. Oil may damage the plastic cover of the display and void the warranty.
- Remove any object that could fall into ventilation holes or prevent

- proper cooling of the monitor's electronics.
- Do not block the ventilation holes on the cabinet.
- When positioning the monitor, make sure the power plug and outlet are easily accessible.
- If turning off the monitor by detaching the power cable or DC power cord, wait for 6 seconds before attaching the power cable or DC power cord for normal operation.
- Please use approved power cord provided by Philips all the time. If your power cord is missing, please contact with your local service center. (Please refer to Service contact information listed in Important information manual.)
- Operate under the specified power supply. Be sure to operate the monitor only with the specified power supply. Use of an incorrect voltage will cause malfunction and may cause fire or electric shock.
- Protect the cable. Do not pull or bend the power cable and signal cable. Do not place the monitor or any other heavy objects on the cables, if damaged, the cables may cause fire or electric shock.
- Do not subject the monitor to severe vibration or high impact conditions during operation.
- To avoid potential damage, for example the panel peeling from the bezel, ensure that the monitor does not tilt downward by more than -5 degrees. If the -5 degree downward tilt angle maximum is exceeded, the monitor damage will not be covered under warranty.
- Do not knock or drop the monitor during operation or transportation.

#### Important

- Excessive usage of monitor can cause eye discomfort, it's better to take shorter breaks more often at your workstation than longer breaks and less often; for example a 5-10 minute break after 50-60-minute continuous screen use is likely to be better than a 15-minute break every two hours. Try to keep your eyes from eye strain while using the screen for a constant period of time by:
  - Looking at something varying distances after a long period focusing on the screen.
  - Conscious Blinking often while you work.
  - Gently closing and rolling your eyes to relax.
  - Reposition your screen to appropriate height and angle according to your height.
  - Adjusting the brightness and contrast to appropriate level.
  - Adjusting the environment lighting similar to that of your screen brightness, avoid the fluorescent lighting, and surfaces that don't reflect too much light.
  - Seeing a doctor if your symptoms.

#### Maintenance

- To protect your monitor from possible damage, do not put excessive pressure on the monitor panel. When moving your monitor, grasp the frame to lift; do not lift the monitor by placing your hand or fingers on the monitor panel.
- Oil-based cleaning solutions may damage the plastic parts and void the warranty.
- Unplug the monitor if you are not going to use it for an extensive period of time.

- Unplug the monitor if you need to clean it with a slightly damp cloth.
   The screen may be wiped with a dry cloth when the power is off.
   However, never use organic solvent, such as, alcohol, or ammonia-based liquids to clean your monitor.
- To avoid the risk of shock or permanent damage to the set, do not expose the monitor to dust, rain, water, or excessive moisture environment.
- If your monitor gets wet, wipe it with dry cloth as soon as possible.
- If foreign substance or water gets in your monitor, please turn the power off immediately and disconnect the power cord. Then, remove the foreign substance or water, and send it to the maintenance center.
- Do not store or use the monitor in locations exposed to heat, direct sunlight or extreme cold.
- In order to maintain the best performance of your monitor and use it for a longer lifetime, please use the monitor in a location that falls within the following temperature and humidity ranges.
  - Temperature: 0-40°C 32-104°F
  - · Humidity: 20-80% RH

### Important information for Burn-in/ Ghost image

 Always activate a moving screen saver program when you leave your monitor unattended. Always activate a periodic screen refresh application if your monitor will display unchanging static content. Uninterrupted display of still or static images over an extended period may cause "burn in", also known as "after-imaging" or "ghost imaging", on your screen.

#### Important

 "Burn-in", "after-imaging", or "ghost imaging" is a well-known phenomenon in LCD panel technology. In most cases, the "Burn-in" or "after-imaging" or "ghost imaging" will disappear gradually over a period of time after the power has been switched off.

# Warning

Failure to activate a screen saver, or a periodic screen refresh application may result in severe "burn-in" or "afterimage" or "ghost image" symptoms that will not disappear and cannot be repaired. The damage mentioned above is not covered under your warranty.

#### Service

- The casing cover should be opened only by qualified service personnel.
- If there is any need for any document for repair or integration, please contact with your local service center. (please refer to Service contact information listed in Important information manual.)
- For transportation information, please refer to "Technical Specifications".
- Do not leave your monitor in a car/ trunk under direct sun light.

# Note

Consult a service technician if the monitor does not operate normally, or you are not sure what procedure to take when the operating instructions given in this manual have been followed.

# 1.2 Notational Descriptions

The following subsections describe notational conventions used in this document.

#### Notes, Cautions and Warnings

Throughout this guide, blocks of text may be accompanied by an icon and printed in bold or italic type. These blocks contain notes, cautions or warnings. They are used as follows:

## Note

This icon indicates important information and tips that help you make better use of your computer system.

## Caution

This icon indicates information that tells you how to avoid either potential damage to hardware or loss of data.

# Warning

This icon indicates the potential for bodily harm and tells you how to avoid the problem.

Some warnings may appear in alternate formats and may not be accompanied by an icon. In such cases, the specific presentation of the warning is mandated by the relevant regulatory authority.

# 1.3 Disposal of product and packing material

Waste Electrical and Electronic Equipment-WEEE



This marking on the product or on its packaging illustrates that, under European Directive 2012/19/EU governing used electrical and electronic appliances, this product may not be disposed of with normal household waste. You are responsible for disposal of this equipment through a designated waste electrical and electronic equipment collection. To determine the locations for dropping off such waste electrical and electronic, contact your local government office, the waste disposal organization that serves your household or the store at which you purchased the product.

Your new monitor contains materials that can be recycled and reused. Specialized companies can recycle your product to increase the amount of reusable materials and to minimize the amount to be disposed of.

All redundant packing material has been omitted. We have done our utmost to make the packaging easily separable into mono materials.

Please find out about the local regulations on how to dispose of your old monitor and packing from your sales representative.

# Taking back/Recycling Information for Customers

Philips establishes technically and economically viable objectives to optimize the environmental performance of the organization's product, service and activities.

From the planning, design and production stages, Philips emphasizes the important of making products that can easily be recycled. At Philips, end-of-life management primarily entails participation in national takeback initiatives and recycling programs whenever possible, preferably in cooperation with competitors, which recycle all materials (products and related packaging material) in accordance with all Environmental Laws and taking back program with the contractor company.

Your display is manufactured with high quality materials and components which can be recycled and reused.


To learn more about our recycling program please visit:

http://www.philips.com/a-w/about/sustainability.html

# 2. Setting up the monitor

# 2.1 Installation

Package contents












\* HDMI

\* Differences according to region.

Connecting to your computer

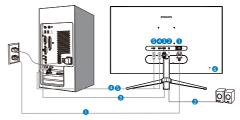


- 1 AC Power input
- 2 Audio out
- 3 DisplayPort input
- 4 HDMI2 input
- **5** HDMI1 input
- 6 Kensington anti-theft lock

#### Connect to PC

- 1. Connect the power cord to the back of the monitor firmly.
- 2. Turn off your computer and unplug its power cable.
- Connect the monitor signal cable to the video connector on the back of your computer.
- 4. Plug the power cord of your computer and your monitor into a nearby outlet.
- 5. Turn on your computer and monitor. If the monitor displays an image, installation is complete.

# 2.2 Operating the monitor


## Description of the control buttons

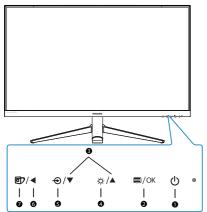

0	<b>D</b> Switch display's power or OFF.				
2	■/OK	Access the OSD menu. Confirm the OSD adjustment.			
3	$\blacktriangle$	Adjust the OSD menu.			
4	Ö	Adjust the brightness level.			
6	€	Change the signal input source.			
6	•	Return to previous OSD level.			
7	町	SmartImage: There are multiple selections: FPS, Racing, RTS, Gamer 1,Gamer 2, LowBlue Mode,Off.			

# Description of the On Screen Display What is On-Screen Display (OSD)?

On-Screen Display (OSD) is a feature in all Philips LCD monitors. It allows an end user to adjust screen performance or select functions of the monitors directly through an on-screen instruction window. A user friendly on screen display interface is shown as below:

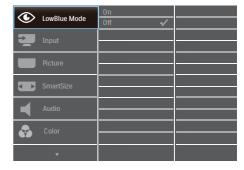

# Basic and simple instruction on the control keys

In the OSD shown above, you can press 
▼ ▲ buttons at the front bezel of the display to move the cursor, and press

■/OK button to confirm the choice or change.


#### The OSD Menu

Below is an overall view of the structure of the On-Screen Display. You can use this as a reference when you want to work your way around the different adjustments later on.

#### 325M8C:

#### Main menu Sub menu - 1, 2, 3,4 – On LowBlue \_ off — 1 HDMI 1.4 - 2 HDMI 1.4 - DisplayPort Picture - MPRT - On, Off - MPRT Level **—** 0~20 - Brightness - 0-100 Contrast \_\_ 0-100 \_\_ Sharpness \_\_ 0~100 \_\_\_ Off, Fast, Faster, Fastest SmartResponse SmartContrast \_\_\_ On, Off \_\_ SmartFrame On, Off - Size: 1, 2, 3, 4, 5, 6, 7 Brightness: 0-100 - Contrast: 0-100 V. position - Gamma **—** 1.8. 2.0. 2.2. 2.4. 2.6 - On, Off Pixel Orbiting Over Scan — On Off \_ SmartSize - Panel Size 17": (5:4) 19": (5:4) \_\_\_ 19"W: (16:10) 22"W: (16:10) \_\_ 18.5W": (16:9) - 19.5"W: (16:9) \_\_\_ 20"W: (16:9) \_\_\_ 21.5"W: (16:9) \_\_\_ 23"W: (16:9) - 24"W: (16:9) - 27"W: (16:9) = 31.5"W: (16:9) L Aspect - Audio - Volume - 0-100 - On, Off - Muto Color Temperature — Native, 5000K, 6500K, 7500K, 8200K, 9300K, 11500K - Color - sRGB User Define - Red: 0-100 - Green: 0-100 Blue: 0-100 English, Deutsch, Español, ЕМирикі, Français, Italiano, Magyar, Nederlands, Portugués, Portugués do Brasil, Polski, Русский, Svenska, Suomi, Türkçe, Čestina, Українська, 商体中文, 繁重中文, 日本語, 哲국어 Language - OSD Settings - Horizontal - 0-100 - 0-100 - Transparency - Off 1 2 3 4 OSD Time Out - 5s 10s 20s 30s 60s - Auto - Setup - H.Position - 0-100 V.Position - 0~100 - Phase — 0~100 - Clock - 0-100 Resolution - On, Off Notification - Roset - Yes No Information

#### 325M8C7:

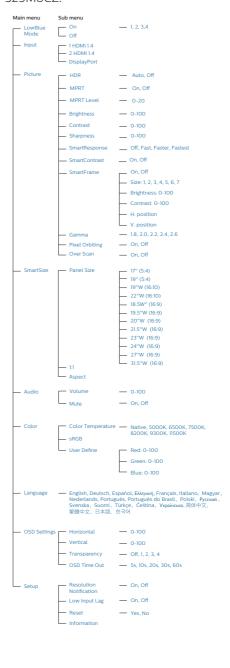

2. Setting up the monitor



MPRT (Moving Picture Response Time) provides 0-20 levels for user to reduce motion blur.

75Hz refresh rate or higher is required for MPRT.


#### Resolution notification

This monitor is designed for optimal performance at its native resolution, 2560 x 1440. When the monitor is powered on at a different resolution, an alert is displayed on screen: Use 2560 x 1440 for best results.

Display of the native resolution alert can be switched off from Setup in the OSD (On Screen Display) menu.

## 4 Physical Function

Tilt

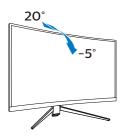


# Warning

- To avoid potential screen damage, such as panel peeling, ensure that the monitor does not tilt downward by more than -5 degrees.
- Do not press the screen while adjusting the angle of the monitor. Grasp only the bezel.


# 2.3 Remove the Base Assembly for VESA Mounting

Before you start disassembling the monitor base, please follow the instructions below to avoid any possible damage or injury.


1. Place the monitor face down on a smooth surface. Pay attention not to scratch or damage the screen.

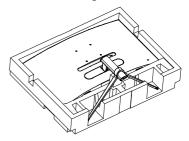

2. Remove the hinge cover from monitor body by using your fingers.

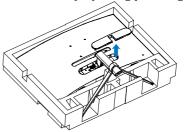


 Use a screwdriver to remove the screws on the arm, and then detach the arm/stand from the monitor.

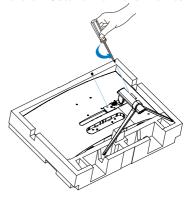

#### 2. Setting up the monitor

# Note

This monitor accepts a 100mm x 100mm VESA-Compliant mounting interface. VESA Mounting Screw M4. Always contact manufacturer for wall-mount installation

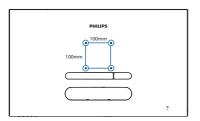


# **Marning:**

This product is curve design, when attach / detach the base, place the protective material under the monitor and do not press down the monitor to avoid the damage.

# ■ Note

Please purchase the appropriate wall mount; otherwise the distance between the back-plug-in signal cable and the wall would be too short.

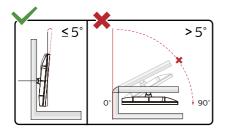

\* Display design may differ from those illustrated.

# Warning

 To avoid potential screen damage, such as panel peeling, ensure that the monitor does not tilt downward by more than -5 degrees.  Do not press the screen while adjusting the angle of the monitor. Grasp only the bezel.

# 3. Image Optimization

# 3.1 SmartImage

#### What is it?

SmartImage provides presets that optimize display for different types of content, dynamically adjusting brightness, contrast, color and sharpness in real time. Whether you're working with text applications, displaying images or watching a video, Philips SmartImage delivers great optimized monitor performance.


### 2 Why do I need it?

You want a monitor that delivers optimized display all your favorite types of content, SmartImage software dynamically adjust brightness, contrast, color and sharpness in real time to enhance your monitor viewing experience.

### 3 How does it work?

SmartImage is an exclusive, leading edge Philips technology that analyzes the content displayed on your screen. Based on a scenario you select, SmartImage dynamically enhances the contrast, color saturation and sharpness of images to enhance the contents being displayed – all in real time with the press of a single button.

## 4 How to enable SmartImage?

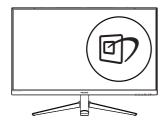

1. Toggle to the left to launch the

- SmartImage on screen display.
- Toggle to the up or down to select among FPS, Racing, RTS, Gamer1, Gamer2. LowBlue Mode and Off.
- The SmartImage on screen display will remain on screen for 5 seconds, or you can also toggle to the left to make confirmation.

There are multiple modes to select: FPS, Racing, RTS, Gamer1, Gamer2, LowBlue Mode and Off.



- FPS: For playing FPS (First Person Shooters) games. Improves dark theme black level details.
- Racing: For playing Racing games.
   Provides fastest response time and high color saturation.
- RTS: For playing RTS (Real Time Strategy) games, a user-selected portion can be highlighted for RTS games (through SmartFrame). The picture quality can be adjusted for the highlighted portion.
- Gamer 1: User's preference settings saved as Gamer 1.
- Gamer 2: User's preference settings saved as Gamer 2.
- LowBlue Mode: LowBlue Mode for easy on-the-eyes productivity Studies have shown that just as ultra-violet rays can cause eye

#### Image Optimization

damage, shortwave length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.

 Off: No optimization by SmartImage<sup>GAME</sup>.

# 3.2 SmartContrast

#### 1 What is it?

Unique technology that dynamically analyzes displayed content and automatically optimizes a Monitor's contrast ratio for maximum visual clarity and viewing enjoyment, stepping up backlighting for clearer, crisper and brighter images or dimming backlighting for clear display of images on dark backgrounds.

## Why do I need it?

You want the very best visual clarity and viewing comfort for every type of content. SmartContrast dynamically controls contrast and adjusts backlighting for clear, crisp, bright gaming and video images or displays clear, readable text for office work. By reducing your monitor's power consumption, you save on energy costs and extend the lifetime of your monitor.

## 3 How does it work?

When you activate SmartContrast, it will analyse the content you are displaying in real time to adjust colors and control backlight intensity. This function will dynamically enhance contrast for a great entertainment experience when viewing videos or playing games.

# 4. AMD FreeSync™ Premium AMD FreeSync Premium

PC gaming has long been an imperfect experience because GPUs and monitors update at different rates. Sometimes a GPU can render many new pictures during a single update of the monitor, and the monitor will show pieces of each picture as a single image. This is called "tearing." Gamers can fix tearing with a feature called "v-sync," but the image can become jerky as the GPU waits on the monitor to call for an update before delivering new pictures.

The responsiveness of mouse input and overall frames per second are reduced with v-sync, too. AMD FreeSync™ Premium technology eliminates all of these problems by letting the GPU update the monitor the moment a new picture is ready, leaving gamers with unbelievably smooth, responsive, tearing-free games.

Followed by the graphic card that are compatible.

- Operating system
  - Windows 10/8.1/8/7
- Graphic Card: R9 290/300 Series & R7 260 Series
  - AMD Radeon R9 300 Series
  - AMD Radeon R9 Fury X
  - AMD Radeon R9 360
  - AMD Radeon R7 360
  - AMD Radeon R9 295X2

- AMD Radeon R9 290X
- AMD Radeon R9 290
- AMD Radeon R9 285
- AMD Radeon R7 260X
- AMD Radeon R7 260
- Processor A-Series Desktop and Mobility APUs
  - AMD A10-7890K
  - AMD A10-7870K
  - AMD A10-7850K
  - AMD A10-7800
  - AMD A10-7700K
  - AMD A8-7670K
  - AMD A8-7650K
  - AMD A8-7600
  - AMD A6-7400K



# 5. HDR

#### (325M8CZ)

HDR Settings in Windows10 system.

#### Steps


- Right click on the desktop, enter to Display settings.
- 2. Select the display/monitor.
- 3. Select an HDR-capable display under Rearrange your displays.
- 4. Select Windows HD Color settings.
- 5. Adjust Brightness for SDR content.


### Note

website.

Windows10 edition is required; always upgrade to the most updated version. Below linkage is for the further more information from microsoft official

https://support.microsoft.com/en-au/help/4040263/windows-10-hdr-advanced-color-settings

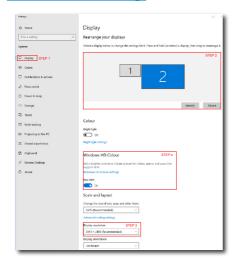

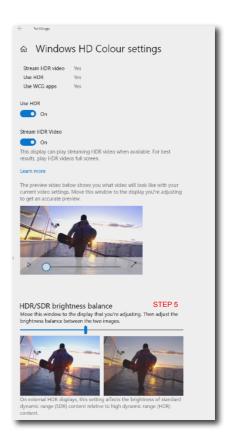

# Note

To switch off HDR function, please disable from Input device and its content. Inconsistent HDR settings between input device and monitor may cause unsatisfying images.

# 6. Technical Specifications

Monitor Panel Type	Picture/Display					
Panel Size         31.5" (80 cm)           Aspect Ratio         16:9           Pixel Pitch         0.2724 x 0.2724 mm           Contrast ratio (typical)         3000:1           MPRT         Ims           Optimum Resolution         2560 x 1440 @ 60Hz           Viewing Angle         178" (H) / 178" (V) @ C/R > 10 (typ.)           Picture Enhancement         SmartImage           Vertical Refresh Rate         325M8C: 48 - 144HZ           325M8C: 30kHz - 230kHz         165Hz(DP)           325M8C: 30kHz - 230kHz         250kHz(DP)           SRGB         YES           LowBlue Mode         YES           LowBlue Mode         YES           LowBlue Mode         YES           Jisplay colors         16,7M           Color gamut         YES           HDR         YES (325M8CZ)           Flicker free         YES           AMD FreeSync® Premium         YES           Connectivity         Signal Input         DisplayPort x 1, HDMII.4 x 2           Input Signal         Separate Sync           Audio In/Out         Audio out           Convenience         Image: All Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian, Simplified Chinese, Traditional Chinese, Japanese, Korean	Monitor Panel Type	VA				
Aspect Ratio   16:9	Backlight	W-LED				
Pixel Pitch  Contrast ratio (typical)  MPRT  Ims Optimum Resolution  2560 x 1440 @ 60Hz  Viewing Angle  178" (H) / 178" (V) @ C/R > 10 (typ.)  Picture Enhancement  SmartImage  325M8C: 48 - 144HZ 325M8C: 48 - 144HZ 325M8C: 30kHz - 230kHz 325M8C: 30kHz - 230kHz(HDMI), 30kHz - 250kHz(DP)  SRGB  YES  LowBlue Mode  YES  Display colors  16.7M  Color gamut  YES  HDR  YES (325M8CZ)  Flicker free  AMD FreeSync™ Premium  Connectivity  Signal Input  DisplayPort x 1, HDMI1.4 x 2  Input Signal  Audio In/Out  Audio out  Convenience  User Convenience  User Convenience  User Convenience  User Convenience  User Convenience  VESA mount(100 * 100 mm), Kensington Lock  Plug & Play Compatibility  Stand  Tilt  -5" / +20"  Power (325M8C)  AC Input  Voltage at  100VAC , 50Hz  115VAC , 60Hz  230VAC , 50Hz  100 Tityp.  Vesa (144 (Vep.)  Audio (Vesa (Vep.)	Panel Size	31.5" (80 cm)				
Contrast ratio (typical)  MPRT    Ims	Aspect Ratio	16:9				
MPRT Optimum Resolution  2560 x 1440 @ 60Hz Viewing Angle Picture Enhancement  SmartImage  325M8C: 48 - 144HZ 325M8C: 30kHz - 230kHz 325M8C: 30kHz - 230kHz 325M8C: 30kHz - 230kHz 325M8C: 30kHz - 230kHz Horizontal Frequency SRGB YES LowBlue Mode YES Display colors I6.7M Color gamut YES AMD FreeSync™ Premium Connectivity Signal Input Input Signal Audio In/Out Audio out Convenience User Convenience  User Convenience  □SP/◀ ●/▼ ※/▲ □/○K ⓒ Hungarian, Dutch, Portuguese, Brazil Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian, Simplified Chinese, Traditional Chinese, Japanese, Korean Other Convenience  Plug & Play Compatibility  Stand Tilt  -5° / +20°  Power (325M8C)  Normal Operation  48.1 W (typ.)  48.2 W (typ.)  48.3 W (typ.)	Pixel Pitch	0.2724 x 0.2724 mm				
Optimum Resolution       2560 x 1440 @ 60Hz         Viewing Angle       178° (H) / 178° (V) @ C/R > 10 (typ.)         Picture Enhancement       SmartImage         Vertical Refresh Rate       325M8C: 48 - 144HZ         325M8CZ: 30kHz - 230kHz       165Hz(DP)         325M8CZ: 30kHz - 230kHz(HDMI), 30kHz - 250kHz(DP)         SRGB       YES         LowBlue Mode       YES         Display colors       16.7M         Color gamut       YES         HDR       YES (325M8CZ)         Flicker free       YES         AMD FreeSync™ Premium       YES         Connectivity       Signal Input       DisplayPort x 1, HDMII.4 x 2         Input Signal       Separate Sync         Audio In/Out       Audio out         Convenience       By/	Contrast ratio (typical)	3000:1				
Picture Enhancement  Picture Enhancement  SmartImage  325M8C: 48 - 144HZ 325M8CZ: 48Hz - 144HZ 325M8CZ: 30kHz - 230kHz 325M8CZ - 230kHz - 230kHz 325M8CZ - 230kHz 325M8CZ - 230kHz - 230kHz 325M8CZ - 230kHz 325M8CZ - 230kHz - 230kHz 325M8CZ - 230kHz - 230kHz 325M8CZ - 230kHz 325M8CZ - 230kHz - 230kHz - 250kHz 325M8CZ - 230kHz - 230kHz - 250kHz 325M8CZ - 330kHz - 230kHz - 165Hz 325M8CZ - 330kHz - 230kHz - 165Hz 325M8CZ - 330kHz - 230kHz - 165Hz 325M8CZ - 330kHz - 230kHz 325M8CZ - 330kC, 50Hz 325M8CZ - 330kHz - 230kHz 325M8CZ - 330kC, 50Hz 325M8CZ - 330kHz - 230kHz 325M8CZ - 330kC, 50Hz 325M8CZ - 330kC, 50Hz 325M8CZ - 330kC, 50Hz	MPRT	1ms				
Picture Enhancement  Vertical Refresh Rate  325M8C: 48 - 144HZ 325M8C: 30kHz - 230kHz 325M8CZ: 30kHz - 230kHz(HDMI), 30kHz - 250kHz(DP)  SRGB  YES LowBlue Mode YES Display colors 16.7M Color gamut YES HDR YES (325M8CZ) Flicker free YES AMD FreeSync™ Premium YES  Connectivity Signal Input DisplayPort x 1, HDMI1.4 x 2 Input Signal Audio In/Out Convenience User Convenience User Convenience  User Convenience User Convenience  Plug & Play Compatibility Stand Tilt  -5° / +20°  Power (325M8C)  AC Input Voltage at 100VAC , 50Hz 115VAC , 60Hz 230VAC, 50Hz Au Wityp.) 48.3 W (typ.)	Optimum Resolution	2560 x 1440 @ 60Hz				
Vertical Refresh Rate  325M8C: 48 - 144HZ 325M8CZ: 48Hz - 144Hz(HDMI), 48Hz - 165Hz(DP)  Horizontal Frequency 325M8C: 30kHz - 230kHz 325M8CZ: 30kHz - 230kHz(HDMI), 30kHz - 250kHz(DP)  SRGB YES LowBlue Mode YES Display colors 16.7M Color gamut YES HDR YES (325M8CZ) Flicker free YES AMD FreeSync™ Premium YES  Connectivity Signal Input DisplayPort x 1, HDMI1.4 x 2 Input Signal Separate Sync Audio In/Out Audio out  Convenience User Convenience User Convenience  User Convenience User Convenience VESA mount(100 × 100 mm), Kensington Lock Plug & Play Compatibility DDC/CI, sRGB, Windows 10/8.1/8/7, Mac OSX  Stand Tilt  -5° / +20°  Power (325M8C)  AC Input Voltage at 100VAC, 50Hz 115VAC, 60Hz 230VAC, 50Hz Normal Operation 48.1 W (typ.) 48.2 W (typ.) 48.3 W (typ.)	Viewing Angle	178° (H) / 178° (V) @ (	C/R > 10 (typ.)			
Separate Sync   Separate Sync   Audio out	Picture Enhancement	SmartImage				
Audio In/Out  Convenience  User Convenience  User Convenience  User Convenience  OSD Languages  Other Convenience  Plug & Play Compatibility  Stand  Other Convenience  Plug & Play Compatibility  Stand  Tilt  Consumption  AC Input  Voltage at 100VAC , 50Hz  Normal Operation  YES  325M8CZ: 30kHz - 230kHz(HDMI), 30kHz - 250kHz(DP)  YES  16.7M  YES  YES  48.1   YES  49.7   AVI  AVI  AVI  AVI  AVI  AVI  AVI  AV	Vertical Refresh Rate			- 165Hz(DP)		
Display colors  Display colors  Color gamut  YES  HDR  YES (325M8CZ)  Flicker free  YES  AMD FreeSync™ Premium  Connectivity  Signal Input  Input Signal  Audio In/Out  Audio out  Convenience  User Convenience  DisplayPort x 1, HDMI1.4 x 2  Input Signal  Audio out  Convenience  User Convenience  User Convenience  User Convenience  DisplayPort x 1, HDMI1.4 x 2  Input Signal  Audio out  Convenience  User Convenience  User Convenience  User Convenience  User Convenience  User Convenience  DD/ ◆ ②/▼ ※/▲ 圖/OK ⑥  English, German, Spanish, Greek, French, Italian, Hungarian, Dutch, Portuguese, Brazil Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian, Simplified Chinese, Traditional Chinese, Japanese, Korean  Other Convenience  VESA mount(100 × 100 mm), Kensington Lock  Plug & Play Compatibility  DDC/CI, sRGB, Windows 10/8.1/8/7, Mac OSX  Stand  Tilt  -5° / +20°  Power (325M8C)  AC Input  Voltage at  100VAC , 50Hz  Normal Operation  48.1 W (typ.)  48.2 W (typ.)  48.3 W (typ.)	Horizontal Frequency			Hz - 250kHz(DP)		
Display colors Color gamut YES HDR YES (325M8CZ) Flicker free YES AMD FreeSync™ Premium Connectivity Signal Input DisplayPort x 1, HDMI1.4 x 2 Input Signal Audio In/Out Audio out Convenience User Convenience User Convenience  User Convenience User Convenience VESA mount(I00 × 100 mm), Kensington Lock Plug & Play Compatibility  Stand Tilt  -5° / +20°  Power (325M8C)  Normal Operation  16.7M YES YES  YES  AMD YES  YES  AMD FreeSync™ Premium YES  Separate Sync  Audio 11.4 x 2  Input \$\frac{1}{2}\frac{1}	sRGB	YES				
Telicker free YES  AMD FreeSync™ Premium YES  AMD FreeSync™ Premium YES  Connectivity  Signal Input DisplayPort x 1, HDMI1.4 x 2  Input Signal Separate Sync  Audio In/Out Audio out  Convenience  User Convenience  D/ ◆ ◆/▼ ❖/▲ 圖/OK ◆ English, German, Spanish, Greek, French, Italian, Hungarian, Dutch, Portuguese, Brazil Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian, Simplified Chinese, Traditional Chinese, Japanese, Korean  Other Convenience  VESA mount(100 × 100 mm), Kensington Lock  Plug & Play Compatibility  DDC/CI, sRGB, Windows 10/8.1/8/7, Mac OSX  Stand  Tilt  -5° / +20°  Power (325M8C)  AC Input Voltage at 100VAC, 50Hz  Normal Operation  48.1 W (typ.)  48.2 W (typ.)  48.3 W (typ.)	LowBlue Mode	YES				
HDR YES (325M8CZ)  Flicker free YES  AMD FreeSync™ Premium YES  Connectivity  Signal Input DisplayPort x 1, HDMI1.4 x 2  Input Signal Separate Sync  Audio In/Out Audio out  Convenience  User Convenience  User Convenience  User Convenience  OSD Languages  English, German, Spanish, Greek, French, Italian, Hungarian, Dutch, Portuguese, Brazil Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian, Simplified Chinese, Traditional Chinese, Japanese, Korean  Other Convenience  VESA mount(100 × 100 mm), Kensington Lock  Plug & Play Compatibility  DDC/CI, sRGB, Windows 10/8.1/8/7, Mac OSX  Stand  Tilt  −5° / +20°  Power (325M8C)  AC Input Voltage at 100VAC, 50Hz 115VAC, 60Hz 230VAC, 50Hz  Normal Operation  48.1 W (typ.) 48.2 W (typ.) 48.3 W (typ.)	Display colors	16.7M				
Flicker free YES  AMD FreeSync™ Premium YES  Connectivity  Signal Input DisplayPort x 1, HDMI1.4 x 2  Input Signal Separate Sync  Audio In/Out Audio out  Convenience  User Convenience  English, German, Spanish, Greek, French, Italian, Hungarian, Dutch, Portuguese, Brazil Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian, Simplified Chinese, Traditional Chinese, Japanese, Korean  Other Convenience  Plug & Play Compatibility  DDC/CI, sRGB, Windows 10/8.1/8/7, Mac OSX  Stand  Tilt  -5° / +20°  Power (325M8C)  AC Input  Voltage at  100VAC, 50Hz  115VAC, 60Hz  230VAC, 50Hz  Normal Operation  48.1 W (typ.)  48.2 W (typ.)	Color gamut	YES				
AMD FreeSync™ Premium YES   Connectivity DisplayPort x 1, HDMI1.4 x 2   Input Signal Separate Sync   Audio In/Out Audio out   Convenience D/ ◆ /▼ */ ▲ ■/ok	HDR	YES (325M8CZ)				
ConnectivitySignal InputDisplayPort x 1, HDMI1.4 x 2Input SignalSeparate SyncAudio In/OutAudio outConvenienceUser ConvenienceImage: Image: Imag	Flicker free	YES				
DisplayPort x 1, HDMI1.4 x 2						
Input Signal  Audio In/Out  Convenience  User Convenience  User Convenience  OSD Languages  OSD Languages  Other Convenience  Plug & Play Compatibility  Tilt  Consumption  AC Input  Voltage at 100VAC , 50Hz  Normal Operation  Audio out  Audi						
Audio In/Out  Convenience  User Convenience  User Convenience  □/◀ ④/▼ ◊/▲ □/OK ὑ  English, German, Spanish, Greek, French, Italian, Hungarian, Dutch, Portuguese, Brazil Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian, Simplified Chinese, Traditional Chinese, Japanese, Korean  Other Convenience  Plug & Play Compatibility  DDC/CI, sRGB, Windows 10/8.1/8/7, Mac OSX  Stand  Tilt  -5° / +20°  Power (325M8C)  AC Input Voltage at 100VAC , 50Hz  Normal Operation  Audio out  Allow  Allow  Allow  Allow  AC Input Voltage at 100VAC , 50Hz  Allow  Al	Signal Input	DisplayPort x 1, HDMI1.4 x 2				
Convenience  User Convenience  □/ ◆ →/▼	Input Signal	Separate Sync				
User Convenience  □/ ◆/▼  □/ □/ □/ □/ □/ □/ □/ □/ □/ □/ □/ □/ □/ □		Audio out				
English, German, Spanish, Greek, French, Italian, Hungarian, Dutch, Portuguese, Brazil Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian, Simplified Chinese, Traditional Chinese, Japanese, Korean  Other Convenience VESA mount(100 × 100 mm), Kensington Lock Plug & Play Compatibility DDC/CI, sRGB, Windows 10/8.1/8/7, Mac OSX  Stand Tilt -5° / +20°  Power (325M8C) AC Input Voltage at 100VAC, 50Hz Normal Operation 48.1 W (typ.) 48.2 W (typ.) 48.3 W (typ.)	Convenience					
OSD Languages  Hungarian, Dutch, Portuguese, Brazil Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian, Simplified Chinese, Traditional Chinese, Japanese, Korean  Other Convenience  VESA mount(100 × 100 mm), Kensington Lock  Plug & Play Compatibility  DDC/CI, sRGB, Windows 10/8.1/8/7, Mac OSX  Stand  Tilt  -5° / +20°  Power (325M8C)  AC Input Voltage at 100VAC , 50Hz  Normal Operation  Hungarian, Dutch, Portuguese, Brazil Portuguese, Polish, Russian, Dutch, Polish, Pazili Portuguese, Pazili Portuguese, Pazili Portuguese, Polish, Pazili Portuguese, Pazili P	User Convenience					
Plug & Play Compatibility  DDC/CI, sRGB, Windows 10/8.1/8/7, Mac OSX  Stand  Tilt  -5° / +20°  Power (325M8C)  AC Input Voltage at 100VAC, 50Hz  Normal Operation  AC Input Voltage at 115VAC, 60Hz 230VAC, 50Hz  A8.1 W (typ.)  48.2 W (typ.)		Hungarian, Dutch, Po Russian, Swedish, Fi Simplified Chinese,	ortuguese, Brazil Po Innish, Turkish, Czec Traditional Chinese,	rtuguese, Polish, h, Ukranian, Japanese, Korean		
Stand           Tilt         -5° / +20°           Power (325M8C)           AC Input         AC Input           Voltage at         Voltage at           100VAC , 50Hz         115VAC , 60Hz           230VAC , 50Hz           Normal Operation         48.1 W (typ.)           48.2 W (typ.)         48.3 W (typ.)						
Tilt -5° / +20°  Power (325M8C)  AC Input AC Input Voltage at Voltage at 100VAC, 50Hz 115VAC, 60Hz 230VAC, 50Hz  Normal Operation 48.1 W (typ.) 48.2 W (typ.) 48.3 W (typ.)		DDC/CI, sRGB, Wind	lows 10/8.1/8/7, Mac	OSX		
Power (325M8C)           AC Input         AC Input         AC Input         AC Input           Consumption         Voltage at 100VAC, 50Hz         Voltage at 230VAC, 50Hz         Voltage at 230VAC, 50Hz           Normal Operation         48.1 W (typ.)         48.2 W (typ.)         48.3 W (typ.)						
AC Input AC Input Voltage at Voltage at 100VAC , 50Hz AS W (typ.)  AC Input Voltage at Voltage at 230VAC, 50Hz  AC Input Voltage at Voltage at 48.1 W (typ.) 48.2 W (typ.) 48.3 W (typ.)	Tilt	-5° / +20°				
ConsumptionVoltage at 100VAC, 50HzVoltage at 115VAC, 60HzVoltage at 230VAC, 50HzNormal Operation48.1 W (typ.)48.2 W (typ.)48.3 W (typ.)	Power (325M8C)					
	Consumption	Voltage at	Voltage at 115VAC , 60Hz	Voltage at		
	Normal Operation	48.1 W (typ.)	48.2 W (typ.)	48.3 W (typ.)		
	Sleep (Standby mode)					

6. Technical Specifications					
Off mode	0.3 W (typ.)	0.3 W (typ.)	0.3 W (typ.)		
Heat Dissipation*	AC Input Voltage at 100VAC , 50Hz	AC Input Voltage at 115VAC , 60Hz	AC Input Voltage at 230VAC, 50Hz		
Normal Operation	164.16 BTU/hr (typ.)	164.51 BTU/hr (typ.)	164.85 BTU/hr (typ.)		
Sleep (Standby mode)	1.71 BTU/hr (typ.)	1.71 BTU/hr (typ.)	1.71 BTU/hr (typ.)		
Off mode	1.02 BTU/hr (typ.)	1.02 BTU/hr (typ.)	1.02 BTU/hr (typ.)		
Power LED indicator	On mode: White, (blinking)	Standby/Sleep mo	ode: White		
Power Supply	Built-in, 100-240	VAC, 50-60Hz			
Power (325M8CZ)					
Consumption	AC Input Voltage at 100VAC , 50Hz	AC Input Voltage at 115VAC , 60Hz	AC Input Voltage at 230VAC, 50Hz		
Normal Operation	47.0 W (typ.)	46.3 W (typ.)	45.6 W (typ.)		
Sleep (Standby mode)	0.5 W (typ.)	0.5 W (typ.)	0.5 W (typ.)		
Off mode	0.3 W (typ.)	0.3 W (typ.)	0.3 W (typ.)		
Heat Dissipation*	AC Input Voltage at 100VAC , 50Hz	AC Input Voltage at 115VAC , 60Hz	AC Input Voltage at 230VAC, 50Hz		
Normal Operation	160.41 BTU/hr (typ.)	158.02 BTU/hr (typ.)	155.63 BTU/hr (typ.)		
Sleep (Standby mode)	1.71 BTU/hr (typ.)	1.71 BTU/hr (typ.)	1.71 BTU/hr (typ.)		
Off mode	1.02 BTU/hr (typ.)	1.02 BTU/hr (typ.)	1.02 BTU/hr (typ.)		
Power LED indicator	On mode: White, Standby/Sleep mode: White (blinking)				
Power Supply	Built-in, 100-240	Built-in, 100-240VAC, 50-60Hz			
Dimension					
Product with stand (WxHxD)	709 x 526 x 245 mm				
Product without stand	700 425 00				

Dimension	
Product with stand (WxHxD)	709 x 526 x 245 mm
Product without stand (WxHxD)	709 x 425 x 88 mm
Product with packaging (WxHxD)	790 x 619 x 297 mm
Weight	
Product with stand	7.52 kg
Product without stand	6.61 kg
Product with packaging	10.61 kg

# 6. Technical Specifications

Operating Condition			
Temperature range	0°C to 40 °C		
(operation)	0 0 10 40 0		
Relative humidity	20% to 80%		
(operation)	20% to 00%		
Atmospheric pressure	700 to 1060hPa		
(operation)	70010100011110		
Temperature range	-20°C to 60°C		
(Non-operation)	20 € 10 00 €		
Relative humidity	10% to 90%		
(Non-operation)	1070 60 3070		
Atmospheric pressure	500 to 1060hPa		
(Non-operation)	300 to 1000111 ti		
Environmental			
ROHS	YES		
Packaging	100 % recyclable		
Specific Substances	100 % PVC BFR free housing		
Cabinet			
Color	Black		
Finish	Glossy		

# **⊜** Note

This data is subject to change without notice. Go to www.philips.com/support to download the latest version of leaflet.

## 6.1 Resolution & Preset Modes

## Maximum Resolution

#### 325M8C:

2560 x 1440 @ 144Hz (HDMI 1.4/DP1.2)

#### 325M8CZ:

2560 x 1440 @ 144Hz (HDMI 1.4) 2560 x 1440 @ 165Hz (DP1.2)

# 2 Recommended Resolution 2560 x 1440 @ 60Hz

#### 325M8C:

H. freq (kHz)	Resolution	V. freq (Hz)
31.47	720 x 400	70.09
31.47	640 x 480	59.94
35.00	640 x 480	66.67
37.86	640 x 480	72.81
37.50	640 x 480	75.00
50.90	640 x 480	100.00
35.16	800 x 600	56.00
37.88	800 x 600	60.32
48.08	800 x 600	72.00
46.88	800 x 600	75.00
63.60	800 x 600	100.00
47.73	832 x 624	75.00
48.36	1024 x 768	60.00
56.48	1024 x 768	70.00
60.02	1024 x 768	75.03
81.40	1024 x 768	100.00
44.77	1280 x 720	59.86
63.89	1280 x 1024	60.02
79.98	1280 x 1024	75.03
55.94	1440 x 900	59.89
65.29	1680 x 1050	59.95
67.50	1920 x 1080	60.00
88.79	2560 x 1440	60.00
222.06	2560 x 1440	144.00

#### Technical Specifications

#### 325M8CZ:

H. freq (kHz)	Resolution	V. freq (Hz)
31.47	720 x 400	70.09
31.47	640 x 480	59.94
35.00	640 x 480	66.67
37.86	640 x 480	72.81
37.50	640 x 480	75.00
50.90	640 x 480	100.00
35.16	800 x 600	56.00
37.88	800 x 600	60.32
48.08	800 x 600	72.00
46.88	800 x 600	75.00
63.60	800 x 600	100.00
47.73	832 x 624	75.00
48.36	1024 x 768	60.00
56.48	1024 x 768	70.00
60.02	1024 x 768	75.03
81.40	1024 x 768	100.00
44.77	1280 x 720	59.86
63.89	1280 x 1024	60.02
79.98	1280 x 1024	75.03
55.94	1440 x 900	59.89
65.29	1680 x 1050	59.95
67.50	1920 x 1080	60.00
88.79	2560 x 1440	60.00
222.06	2560 x 1440	144.00
250	2560 x 1440	165 (DP)

## Note

- Please notice that your display works best at native resolution of 2560 x 1440. For best display quality, please follow this resolution recommendation.
- The highest supporting screen resolution on HDMI is 2560 x 1440
   a 144Hz, but it always depends on your capability of graphics card and BluRay/video players.

# 7. Power Management

If you have VESA DPM compliance display card or software installed in your PC, the monitor can automatically reduce its power consumption when not in use. If an input from a keyboard, mouse or other input device is detected, the monitor will 'wake up' automatically. The following table shows the power consumption and signaling of this automatic power saving feature:

#### 325M8C:

Power Management Definition								
VESA Mode	Video	H-sync	V-sync	Power Used	LED Color			
Active	ON	Yes	Yes	48.2 W (typ.), 62.4 W (max.)	White			
Sleep (Standby mode)	OFF	No	No	0.5 W (typ.)	White (blink)			
Off mode	OFF	-	-	0.3 W (typ.)	OFF			

#### 325M8CZ:

Ро	Power Management Definition							
VESA Mode	Video	H-sync	V-sync	Power Used	LED Color			
Active	ON	Yes	Yes	46.3 W (typ.), 60.5 W (max.)	White			
Sleep (Standby mode)	OFF	No	No	0.5 W (typ.)	White (blink)			
Off mode	OFF	-	-	0.3 W (typ.)	OFF			

The following setup is used to measure power consumption on this monitor.

· Native resolution: 2560 x 1440

Contrast: 50%Brightness: 90%

 Color temperature: 6500k with full white pattern




This data is subject to change without notice.

# 8. Customer care and warranty

# 8.1 Philips' Flat Panel Monitors Pixel Defect Policy

Philips strives to deliver the highest quality products. We use some of the industry's most advanced manufacturing processes and practice stringent quality control. However, pixel or sub pixel defects on the TFT Monitor panels used in flat panel monitors are sometimes unavoidable. No manufacturer can guarantee that all panels will be free from pixel defects, but Philips guarantees that any monitor with an unacceptable number of defects will be repaired or replaced under warranty. This notice explains the different types of pixel defects and defines acceptable defect levels for each type. In order to qualify for repair or replacement under warranty, the number of pixel defects on a TFT Monitor panel must exceed these acceptable levels. For example. no more than 0.0004% of the sub pixels on a monitor may be defective. Furthermore, Philips sets even higher quality standards for certain types or combinations of pixel defects that are more noticeable than others. This policy is valid worldwide



#### Pixels and Sub pixels

A pixel, or picture element, is composed of three sub pixels in the primary colors


of red, green and blue. Many pixels together form an image. When all sub pixels of a pixel are lit, the three colored sub pixels together appear as a single white pixel. When all are dark, the three colored sub pixels together appear as a single black pixel. Other combinations of lit and dark sub pixels appear as single pixels of other colors.

#### Types of Pixel Defects


Pixel and sub pixel defects appear on the screen in different ways. There are two categories of pixel defects and several types of sub pixel defects within each category.

#### **Bright Dot Defects**

Bright dot defects appear as pixels or sub pixels that are always lit or 'on'. That is, a bright dot is a sub-pixel that stands out on the screen when the monitor displays a dark pattern. There are the types of bright dot defects.

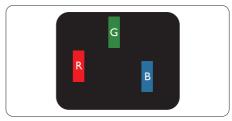

One lit red, green or blue sub pixel.



Two adjacent lit sub pixels:

- Red + Blue = Purple
- Red + Green = Yellow
- Green + Blue = Cyan (Light Blue)

#### 8. Customer care and warranty



Three adjacent lit sub pixels (one white pixel).

# Note

A red or blue bright dot must be more than 50 percent brighter than neighboring dots while a green bright dot is 30 percent brighter than neighboring dots.


#### **Black Dot Defects**

Black dot defects appear as pixels or sub pixels that are always dark or 'off'. That is, a dark dot is a sub-pixel that stands out on the screen when the monitor displays a light pattern. These are the types of black dot defects.



#### **Proximity of Pixel Defects**

Because pixel and sub pixels defects of the same type that are near to one another may be more noticeable, Philips also specifies tolerances for the proximity of pixel defects.

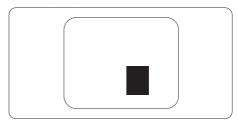

#### Pixel Defect Tolerances

In order to qualify for repair or replacement due to pixel defects during the warranty period, a TFT Monitor panel in a Philips flat panel monitor must have pixel or sub pixel defects exceeding the tolerances listed in the following tables.

BRIGHT DOT DEFECTS	ACCEPTABLE LEVEL
1 lit subpixel	2
2 adjacent lit subpixels	1
3 adjacent lit subpixels (one white pixel)	0
Distance between two bright dot defects*	≥15mm
Total bright dot defects of all types	3
BLACK DOT DEFECTS	ACCEPTABLE LEVEL
1 dark subpixel	5 or fewer
2 adjacent dark subpixels	2 or fewer
3 adjacent dark subpixels	1
Distance between two black dot defects*	≥15mm
Total black dot defects of all types	5 or fewer
TOTAL DOT DEFECTS	ACCEPTABLE LEVEL
Total bright or black dot defects of all types	5 or fewer



♠ Note
1 or 2 adjacent sub pixel defects = 1 dot defect

## 8.2 Customer Care & Warranty

For warranty coverage information and additional support requirements valid for your region, please visit www.philips.com/support website for details or contact your local Philips Customer Care Center.

For Warranty Period please refer to Warranty Statement in Important Information Manual.

For extended warranty, if you would like to extend your general warranty period, an Out of Warranty service package is offered via our Certified Service Center.

If you wish to make use of this service, please be sure to purchase the service within 30 calendar days of your original purchase date. During the extended warranty period, the service includes pickup, repair and return service, however the user will be responsible for all costs accrued.

If the Certified Service Partner cannot perform the required repairs under the offered extended warranty package, we will find alternative solutions for you, if possible, up to the extended warranty period you have purchased.

Please contact our Philips Customer Service Representative or local contact center (by Consumer care number) for more details.

Philips Customer Care Center number listed below.

•	Local Standard Warranty Period	•	Extended Warranty Period	•	Total Warranty Period
•	Depend on different Regions	•	+ 1 Year	•	Local Standard warranty period +1
			+ 2 Years	•	Local Standard warranty period +2
			+ 3 Years	•	Local Standard warranty period +3

<sup>\*\*</sup>Proof of original purchase and extended warranty purchase required.

## Note

Please refer to important information manual for regional service hotline, which is available on the Philips website support page.

# 9. Troubleshooting & FAOs

# 9.1 Troubleshooting

This page deals with problems that can be corrected by a user. If the problem still persists after you have tried these solutions, contact Philips customer service representative.

#### 1 Common Problems

#### No Picture (Power LED not lit)

- Make sure the power cord is plugged into the power outlet and into the back of the monitor.
- First, ensure that the power button on the front of the monitor is in the OFF position, then press it to the ON position.

#### No Picture (Power LED is White)

- Make sure the computer is turned on.
- Make sure the signal cable is properly connected to your computer.
- Make sure the monitor cable has no bent pins on the connect side. If yes, repair or replace the cable.
- The Energy Saving feature may be activated

#### Screen says

Check cable connection

- Make sure the monitor cable is properly connected to your computer. (Also refer to the Quick Start Guide)
- Check to see if the monitor cable has bent pins.

 Make sure the computer is turned on.

#### Visible signs of smoke or sparks

- Do not perform any troubleshooting steps
- Disconnect the monitor from mains power source immediately for safety
- Contact with Philips customer service representative immediately.

#### 2 Imaging Problems

#### Image vibrates on the screen

 Check that the signal cable is properly securely connected to the graphics board or PC.

# Image appears blurred, indistinct or too dark

 Adjust the contrast and brightness on On-Screen Display.

# An "after-image", "burn-in" or "ghost image" remains after the power has been turned off.

- Uninterrupted display of still or static images over an extended period may cause "burn in", also known as "after-imaging " or "ghost imaging", on your screen. "Burn-in", "after-imaging", or "ghost imaging" is a well-known phenomenon in monitor panel technology. In most cases, the "Burn-in" or "afterimaging" or "ghost imaging" will disappear gradually over a period of time after the power has been switched off.
- Always activate a moving screen saver program when you leave your monitor unattended.
- Always activate a periodic screen refresh application if your monitor will display unchanging static content.
- Failure to activate a screen saver, or a periodic screen refresh application

#### Troubleshooting & FAQs

may result in severe "burn-in" or "after-image" or "ghost image" symptoms that will not disappear and cannot be repaired. The damage mentioned above is not covered under your warranty.

# Image appears distorted. Text is fuzzy or blurred.

 Set the PC's display resolution to the same mode as monitor's recommended screen native resolution.

# Green, red, blue, dark, and white dots appears on the screen

 The remaining dots are normal characteristic of the liquid crystal used in today's technology, Please refer the pixel policy for more detail.

### 3 Audio problem

#### No sound

- Check if audio cable is connected to PC and monitor correctly.
- Ensure audio is not muted. Press OSD "Menu", select "Audio" then "Mute". Check it on "Off" position.
- Press "Volume" in OSD main control to adjust the volume.

# 9.2 General FAQs

Q1: When I install my monitor what should I do if the screen shows 'Cannot display this video mode'?

**Ans.:** Recommended resolution for this monitor: 2560 x 1440 @ 60 Hz.

- Unplug all cables, then connect your PC to the monitor that you used previously.
- In the Windows Start Menu, select Settings/Control Panel. In the Control Panel Window, select the Display icon. Inside the Display

- Control Panel, select the 'Settings' tab. Under the setting tab, in box labelled 'desktop area', move the sidebar to 2560 x 1440 pixels.
- Open 'Advanced Properties' and set the Refresh Rate to 60 Hz, then click OK.
- Restart your computer and repeat step 2 and 3 to verify that your PC is set at 2560 x 1440 @ 60 Hz.
- Shut down your computer, disconnect your old monitor and reconnect your Philips monitor.
- Turn on your monitor and then turn on your PC.

# Q2: What is the recommended refresh rate for monitor?

Ans.: Recommended refresh rate in monitors is 60 Hz, In case of any disturbance on screen, you can set it up to 75 Hz to see if that removes the disturbance.

Q3: What are the .inf and .icm files? How do I install the drivers (.inf and .icm)?

Ans.: These are the driver files for your monitor. Your computer may ask you for monitor drivers (.inf and .icm files) when you first install your monitor. Follow the instructions in your user manual, monitor drivers (.inf and .icm files) will be installed automatically.

Q4: How do I adjust the resolution?

Ans.: Your video card/graphic driver and monitor together determine the available resolutions. You can select the desired resolution under Windows® Control Panel with the "Display properties".

Q5: What if I get lost when I am making monitor adjustments via OSD?

#### Troubleshooting & FAQs

Ans.: Simply press the (a)/OK button, then select 'Setup' > 'Reset' to recall all the original factory settings.

Q6: Is the monitor screen resistant to scratches?

Ans.: In general it is recommended that the panel surface is not subjected to excessive shocks and is protected from sharp or blunt objects. When handling the monitor, make sure that there is no pressure or force applied to the panel surface side. This may affect your warranty conditions.

Q7: How should I clean the monitor surface?

Ans.: For normal cleaning, use a clean, soft cloth. For extensive cleaning, please use isopropyl alcohol. Do not use other solvents such as ethyl alcohol, ethanol, acetone, hexane, etc.

Q8: Can I change the color setting of my monitor?

**Ans.:** Yes, you can change your color setting through OSD control as the following procedures:

- Press "

  OK" to show the OSD (On Screen Display) menu
- Press "▲ ▼" to select the option "Color" then press "圖/OK" to enter color setting, there are three settings as below.
  - 1. Color Temperature: Native, 5000K, 6500K, 7500K, 8200K, 9300K and 11500K. With settings in the 5000K range the panel appears "warm, with a redwhite color tone", while a 11500K temperature yields "cool, bluewhite toning".

- 2. sRGB: This is a standard setting for ensuring correct exchange of colors between different device (e.g. digital cameras, monitors, printers, scanners, etc).
- 3. User Define: The user can choose his/her preference color setting by adjusting red, green, blue color

### Note

A measurement of the color of light radiated by an object while it is being heated. This measurement is expressed in terms of absolute scale, (degrees Kelvin). Lower Kevin temperatures such as 2004K are red; higher temperatures such as 9300K are blue. Neutral temperature is white, at 6504K.

Q9: Can I connect my monitor to any PC, workstation or Mac?

Ans.: Yes. All Philips monitors are fully compatible with standard PCs, Macs and workstations. You may need a cable adapter to connect the monitor to your Mac system. Please contact your Philips sales representative for more information

Q10: Are Philips monitors Plug-and-Play?

Ans.: Yes, the monitors are Plugand-Play compatible with Windows10/8.1/8/7, Mac OSX

Q11: What is Image Sticking, or Image Burn-in, or After Image, or Ghost Image in monitor panels?

Ans.: Uninterrupted display of still or static images over an extended period may cause "burn in", also known as "after-imaging" or "ghost imaging", on your screen. "Burn-in", "after-imaging", or "ghost imaging" is a well-known

#### Troubleshooting & FAQs

phenomenon in monitor panel technology. In most cases, the "Burn-in" or "after-imaging" or "ghost imaging" will disappear gradually over a period of time after the power has been switched off.

Always activate a moving screen saver program when you leave your monitor unattended.

Always activate a periodic screen refresh application if your monitor will display unchanging static content.

# Warning

Failure to activate a screen saver, or a periodic screen refresh application may result in severe "burn-in" or "afterimage" or "ghost image" symptoms that will not disappear and cannot be repaired. The damage mentioned above is not covered under your warranty.

Q12: Why is my Display not showing sharp text, and is displaying jagged characters?

**Ans.:** Your monitor works best at its native resolution of 2560 x 1440. For best display, please use this resolution

Q13: How to unlock/lock my hot key?

Ans.: To lock the OSD, press and hold the ■/OK button while the monitor is off and then press ひ button to turn the monitor on. To un-lock the OSD, press and hold the ■/OK button while the monitor is off and then press ひ button to turn the monitor on.

Monitor controls unlocked

#### Monitor controls locked

Q14: Where can I find Important Information manual mentioned in FDFU?

**Ans.:** Important Information manual can be download on the Philips website support page.



2020 © TOP Victory Investment Ltd. All rights reserved.

This product has been manufactured by and is sold under the responsibility of Top Victory Investments Ltd., and Top Victory Investments Ltd. is the warrantor in relation to this product. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

Specifications are subject to change without notice.

Version: 325M8CE1T