

Philips Brilliance
4K LCD monitor with
Ultra Wide-Color

P Line

32 (viewable 31.5" / 80 cm)
3840 x 2160 (4K UHD)

Brilliance

328P6VJEB



UltraClear 4K resolution, ultra-vivid color

for when it matters

The expansive 32" Ultra HD professional Philips display gives you the room to spread out, see the big picture and all the details in Ultra High Definition.

Brilliant performance

- UltraClear 4K UHD (3840x2160) resolution for precision
- Ultra Wide-Color wider range of colors for a vivid picture
- VA display delivers awesome images with wide viewing angles
- 1.074 billion colors for smooth color gradations and detail
- Less eye fatigue with Flicker-free technology

Designed for the way you work

- MultiView enables simultaneous dual connection and view
- SmartErgoBase enables people-friendly ergonomic adjustments
- Built-in stereo speakers for multimedia

Easy to connect and enjoy

- SmartConnect with DisplayPort, HDMI and VGA connections
- HDMI for quick digital connection
- MHL technology for enjoying mobile content on big screen
- DisplayPort connection for maximum visuals


PHILIPS

4K LCD monitor with Ultra Wide-Color
P Line 32 (viewable 31.5" / 80 cm), 3840 x 2160 (4K UHD)

328P6VJEB/69

Highlights

UltraClear 4K UHD Resolution

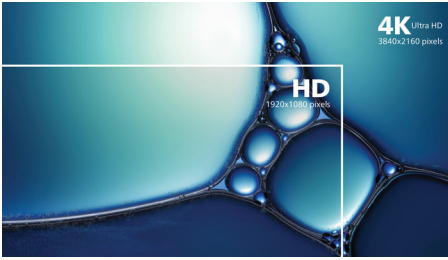


These Philips displays utilize high performance panels to deliver UltraClear, 4K UHD (3840 x 2160) resolution images. Whether you are demanding professional requiring extremely detailed images for CAD solutions, using 3D graphics applications or a financial wizard working on huge spreadsheets, Philips displays will make your images and graphics come alive.

Ultra Wide-Color Technology



Ultra Wide-Color Technology delivers a wider spectrum of colors for a more brilliant picture. Ultra Wide-Color wider "color gamut" produces more natural-looking greens, vivid reds and deeper blues. Bring, media entertainment, images, and even productivity more alive and vivid colors from Ultra Wide-Color Technology.


VA display

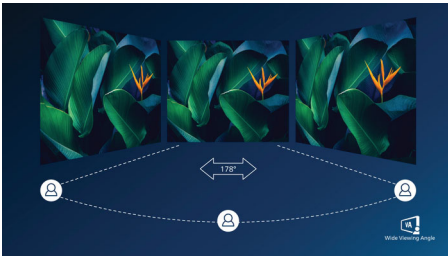

Philips VA LED display uses an advanced multi-domain vertical alignment technology which gives you super-high static contrast ratios for extra vivid and bright images. While standard

office applications are handled with ease, it is especially suitable for photos, web-browsing, movies, gaming, and demanding graphical applications. It's optimized pixel management technology gives you 178/178 degree extra wide viewing angle, resulting in crisp images.

10-bit colors

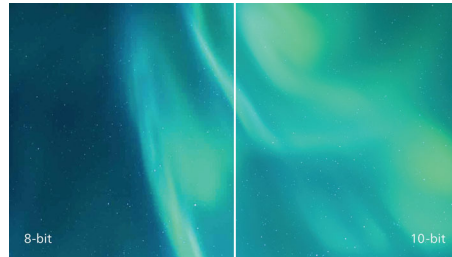

The 10-bit display delivers rich color depth with 1.074 billion colors and 12-bit internal processing for re-creating smooth, natural colors without gradations and color banding.

Flicker-free technology




Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-free Technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

MultiView technology

With the ultra-high resolution Philips MultiView display you can now experience a world of connectivity. MultiView enables active dual connect and view so that you can work with multiple devices like a PC and notebook simultaneously, for complex multi-tasking.

SmartErgoBase

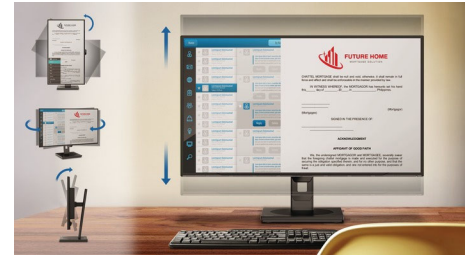

The SmartErgoBase is a monitor base that delivers ergonomic display comfort and provides cable management. The base can swivel, tilt and rotate to various angles to ensure maximum comfort. The height adjustable stand guarantees the optimal viewing level, reducing the physical strains of a long workday, while cable management reduces cable clutter and keeps the workspace neat and professional.

Built-in stereo speakers



A pair of high quality stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.

SmartConnect for 4K

These Philips displays come equipped with the most advanced multi connections like VGA, Display Port, universal HDMI connector, enabling you to enjoy high resolution uncompressed video and audio content. New DisplayPort and HDMI 2.0 connection now enables full 4K resolution at 60Hz for smooth visuals. USB connections ensures that you can have super speed data transfers while having global connectivity. Regardless of what source you use, you can rest assured that this Philips display will ensure your investment is not made obsolete any time soon!

4K
Ultra HD


Ultra Wide Color


Wide Viewing Angle


Flicker-free


MultiView


SmartErgo Base


Built-in Speaker


SmartConnect


USB 3.0

Specifications

Picture/Display

- LCD panel type: VA LCD
- Backlight type: W-LED system
- Panel Size: 31.5 inch / 80.1 cm
- Effective viewing area: 698.4 (H) x 392.85 (V)
- Display Screen Coating: Anti-Glare, 3H, Haze 25%
- Aspect ratio: 16:9
- Optimum resolution: 3840 x 2160 @ 60Hz
- Response time (typical): 4 ms (Gray to Gray)*
- Brightness: 300 cd/m²
- Contrast ratio (typical): 3,000:1
- SmartContrast: 50,000,000 :1
- Pixel pitch: 0.181 x 0.181 mm
- Viewing angle: 178° (H) / 178° (V), @ C/R > 10
- Flicker-free
- Picture enhancement: SmartImage
- Display colors: Color support 1.07 billion colors
- Color gamut (typical): NTSC 95%
- Scanning Frequency: 30 - 83 kHz (H) / 56 - 76 Hz (V)
- MHL: 1080P @ 60Hz
- Brightness uniformity: 93 ~ 105%
- sRGB

Connectivity

- Signal Input: VGA (Analog), DVI-Dual Link (digital, HDCP), DisplayPort x 1, HDMI (2.0) - MHL x 1
- USB: USB 3.0x4 (1 w/fast charging)*
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): PC audio-in, Headphone out

Convenience

- Built-in Speakers: 3 W x 2
- MultiView: PIP/PBP mode, 2x devices
- User convenience: SmartImage, Multiview, User, Menu, Power On/Off
- Control software: SmartControl
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (100x100mm)
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7

Stand

- Height adjustment: 180 mm
- Pivot: 90 degree

- Swivel: -170/+170 degree
- Tilt: -5/20 degree

Power

- ECO mode: 28 W (typ.)
- On mode: 31.71 W (EnergyStar test method)
- Standby mode: <0.5 W (typ.)
- Off mode: Zero watts with Zero switch
- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Power supply: Built-in, 100-240VAC, 50-60Hz

Dimensions

- Product with stand(max height): 742 x 657 x 270 mm
- Product without stand (mm): 742 x 438 x 63 mm
- Packaging in mm (WxHxD): 970 x 526 x 224 mm

Weight

- Product with stand (kg): 9.23 kg
- Product without stand (kg): 6.27 kg
- Product with packaging (kg): 13.39 kg

Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- Temperature range (storage): -20°C to 60°C °C
- Relative humidity: 20%-80 %
- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- MTBF (demonstrated): 70,000 hrs (excluded backlight)

Sustainability

- Environmental and energy: EnergyStar 8.0, EPEAT*, TCO Certified Edge, RoHS
- Recyclable packaging material: 100 %
- Post consumer recycled plastic: 65%
- Specific Substances: PVC / BFR free housing, Mercury free

Compliance and standards

- Regulatory Approvals: CE Mark, FCC Class B, ICES-003, cETLus, EPA, PSB, CU-EAC, SEMKO, KUCAS, UKRAINIAN, WEEE, TUV Ergo, TUV/ GS, CB

Cabinet

- Front bezel: Black
- Rear cover: Black
- Foot: Black
- Finish: Texture



Issue date 2022-06-22

Version: 5.0.2

12 NC: 8670 001 38077
EAN: 87 12581 74030 6

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* This Philips display is MHL certified. However, in case your MHL device does not connect or work correctly, check with your MHL device FAQ or vendor directly for direction. The policy of your device manufacturer may require you to purchase their brand specific MHL cable or adapter in order to work

* Requires optional MHL certified mobile device and MHL cable. (not included) Please check with your MHL device vendor for compatibility.

* Standby/Off energy saving of ErP is not applicable for the MHL charging functionality

* For complete list of MHL-enabled products refer to www.mhlconsortium.org

* EPEAT rating is valid only where Philips registers the product. Please visit <https://www.epeat.net/> for registration status in your country.

* Fast charging complies with USB BC 1.2 standard

* Response time value equal to SmartResponse