

Philips  
LCD monitor

### V Line

22 (21.5" / 54.6 cm diag.)  
1920 x 1080 (Full HD)

226V6QSB6



## Great LED images in vivid colors

Enjoy crisp vivid images slim Philips display. Equipped with SmartContrast that ensures rich bright images makes it a great choice!

#### **Vivid pictures every time**

- AH-IPS display gives awesome images with wide viewing angles
- 16:9 Full HD display for crisp detailed images
- SmartContrast for rich black details
- Less eye fatigue with Flicker-free technology

#### **Great choice**

- Narrow border display for seamless appearance
- Compact design saves space
- Mercury Free eco-friendly display
- VESA mount allows for flexibility
- Low power consumption saves energy bills


# PHILIPS

LCD monitor  
V Line 22 (21.5" / 54.6 cm diag.), 1920 x 1080 (Full HD)

226V6QSB6/69


# Highlights

## AH-IPS technology

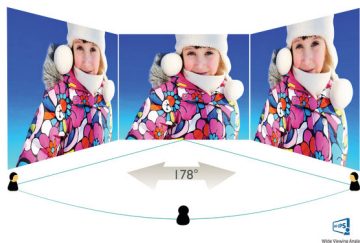

AH-IPS displays use an advanced technology which gives you extra wide viewing angles of 178/178 degree, making it possible to view the display from almost any angle. Unlike standard TN panels, AH-IPS displays gives you remarkably crisp images with vivid colors, making it ideal not only for Photos, movies and web browsing, but also for professional applications which demand color accuracy and consistent brightness at all times.


## 16:9 Full HD display

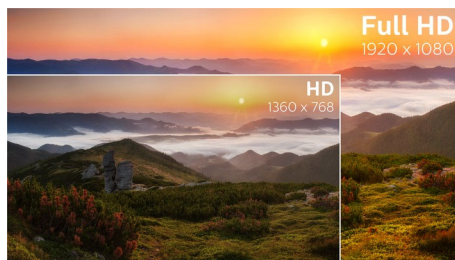

Picture quality matters. Regular displays deliver quality, but you expect more. This display features enhanced Full HD 1920 x 1080 resolution. With Full HD for crisp detail paired

with high brightness, incredible contrast and realistic colors expect a true to life picture.

## SmartContrast

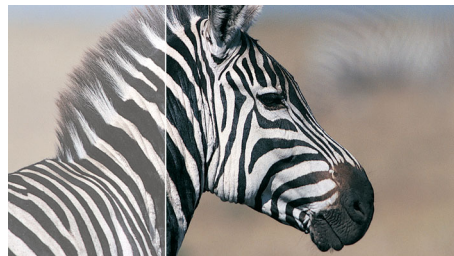

SmartContrast is a Philips technology that analyzes the contents you are displaying, automatically adjusting colors and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.


## Flicker-free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience

flicker on their screen which causes eye fatigue. Philips Flicker-free Technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

## UltraNarrow Border

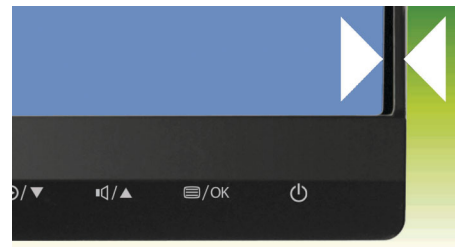

The new Philips displays feature ultra-narrow borders which allow for minimal distractions and maximum viewing size. Especially suited for multi-display or tiling setup like gaming, graphic design and professional applications, the ultra-narrow border display gives you the feeling of using one large display.

## Mercury Free

Philips monitors with LED backlighting are free of Mercury content, one of the most toxic natural substances, which affects humans and animals. This reduces the environmental impact of the display throughout its life-cycle, from manufacturing to disposal.



# Specifications

## Picture/Display

- LCD panel type: AH-IPS LCD
- Backlight type: W-LED system
- Panel Size: 21.5 inch / 54.6 cm
- Effective viewing area: 476.06 (H) x 267.79 (V)
- Aspect ratio: 16:9
- Optimum resolution: 1920 x 1080 @ 60 Hz
- Response time (typical): 8 Gray to Gray (BW) ms
- Brightness: 250 cd/m<sup>2</sup>
- SmartContrast: 10,000,000:1
- Contrast ratio (typical): 1000:1
- Pixel pitch: 0.248x 0.248 mm
- Viewing angle: 178° (H) / 178° (V), @ C/R > 10
- Display colors: 16.7 M
- Scanning Frequency: 30 -83 kHz (H) / 56 -76 Hz (V)
- sRGB

## Connectivity

- Signal Input: VGA (Analog), DVI-D (digital, HDCP)
- Sync Input: Separate Sync, Sync on Green

## Convenience

- User convenience: Power On/Off, Menu/OK, Brightness/Back, 4:3 Wide/Up, Auto/Down
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (100x100mm)
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 8.1 / 8 / 7

## Stand

- Tilt: -5/20 degree

## Power

- On mode: 25.20 W (typ.) / 25.56 W (max.)
- Standby mode: 0.5 W
- Off mode: 0.5 W
- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Power supply: 100-240VAC, 50-60Hz, External

## Dimensions

- Product with stand (mm): 500 x 372 x 200 mm
- Product without stand (mm): 500 x 306 x 39 mm
- Packaging in mm (WxHxD): 560 x 438 x 110 mm

## Weight

- Product with stand (kg): 2.50 kg
- Product without stand (kg): 2.20 kg
- Product with packaging (kg): 3.79 kg

## Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- Temperature range (storage): -20°C to 60°C °C
- Relative humidity: 20%-80 %
- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- MTBF: 50,000 (excluded backlight) hour(s)

## Sustainability

- Environmental and energy: RoHS, Mercury Free
- Recyclable packaging material: 100 %

## Compliance and standards

- Regulatory Approvals: CE Mark, FCC Class B, WEEE, CCC, CECF

## Cabinet

- Color: Black
- Finish: Glossy / Textured



Issue date 2022-04-21

Version: 1.0.1

12 NC: 8670 001 27143  
EAN: 87 12581 73460 2

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)