


未注公差参照 / UNSPECIFIED TOLERANCE TO FOLLOW GB/T11804-2000 精密F级/Grade F	>	0	6	30	120	400	1000
	≡	6	30	120	400	1000	2000
	公差/TOL. ±	0.05	0.10	0.15	0.20	0.30	0.50

版本/Rev	修订描述/REVISION DESCRIPTION	修订/REVISED BY	日期/DATE
A1	第一次发行		
	第二次发行	陈成	2019-06-19




PHILIPS
User manual

SPK9304
Wired gaming mouse with colorful backlight
有線遊戲滑鼠
유선 게이밍 마우스

User manual
產品手冊
사용자 매뉴얼

Functional overview / 功能概述 / 기능

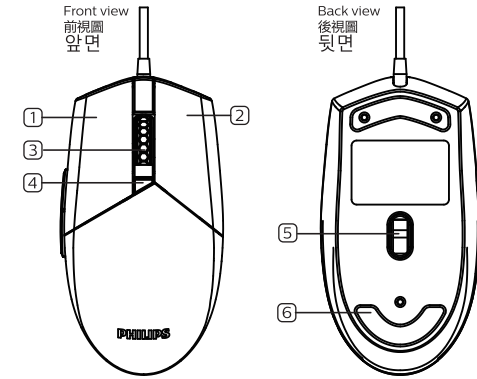


- ① Left key
左鍵
왼쪽 버튼
- ② Right key
右鍵
오른쪽 버튼
- ③ 3D wheel
3D滾輪
휠
- ④ DPI switch button
DPI 切換鍵
DPI버튼
- ⑤ Optical sensor
光學傳感器
옵티컬 센서
- ⑥ Teflon feet
鐵氟龍腳墊
테프론피트

Product description / 產品描述 / 제품 설명

- The maximum resolution: 6400DPI
- 6returnable DPI: The 800-1600-2400-3200-4800-6400.
- High end optical engine, accurate positioning.
- The ergonomic design makes the hand feel comfortable and reduces hand fatigue.
- Default return rate:125Hz.

- 最高解析度：6400DPI
- 6檔可循環切換DPI：800-1600-2400-3200-4800-6400.
- 高端光學引擎，定位精準
- 人體工學外型設計，手感舒適，減少手部疲勞
- 回報率默認為125Hz

- 최대 해상도 : 6400DPI, 6가지 변환 가능한 DPI : 800-1600-2400-3200-4800-6400.
- 하이엔드 옵티컬 엔진, 정확한 포지셔닝 가능.
- 손의 피로감을 덜어주는 인체공학적 디자인.
- 기본 변환 비율 :125Hz



2019 © Top Victory Investments Limited. All rights reserved.
Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.
This product has been manufactured by and is sold under the responsibility of Top Victory Investments Limited, and Top Victory Investments Limited is the warrantor in relation to this product.

Made in China.
Through the following website, register your product in order to get support.
www.philips.com/welcome

Execution Standard: GB/T26245-2010
Manufacturer: Dongguan Soai Electronics Co., Ltd.
Address: No.3 Huayu Street, Changlong Village Huangjiang Town, Dongguan City, Guangdong, China

Install / 安裝 / 설치

Plug and play
The mouse supports plug and play, and after the USB connection, the computer will automatically detect the mouse, without driving or CD.

Note: You can adjust the DPI value according to your personal preference, which can be adjusted by 800-6400dpi, which is better with professional mouse pad.

即插即用
有線滑鼠支持即插即用，與USB連接之後，電腦會自動偵測到滑鼠，無需驅動或者CD。

注意：您可以根據個人的喜好來調節DPI值，800-6400DPI可調節，搭配專業滑鼠墊使用性能更佳。

플러그 앤 플레이

마우스는 플러그 앤 플레이를 지원하며 USB 연결 후 컴퓨터는 드라이브, CD 없이 마우스를 자동으로 감지 합니다.
참고 : 사용자의 개인 취향에 따라 DPI값을 조절할수 있습니다. 800-6400DPI로 변경 가능합니다. 마우스패드에서 사용 권장 드립니다.

Specification / 規格 / 사양

- Transmission mode: red light
- DPI: 800-1600-2400-3200-4800-6400
- Number of button: 6
- Key force: 75+/-5g
- Key life: 1 million times
- Rated voltage/current: DC 5V /≤100mA
- System requirements:Windows2000/XP/Vista/7/ 8/10
- Product size: 116.5(L)x63.3(W)x37.7(H)±0.2mm
- Product weight: 99±5g

- 傳輸方式：有線USB
- 循跡系統：紅光
- 按鍵數：6
- 按鍵壽命：100万次
- 按鍵力度：75+/-5g
- DPI: 800-1600-2400-3200-4800-6400
- 產品尺寸：116.5(L)x63.3(W)x37.7(H)±0.2mm
- 額定電壓電流：DC 5V /≤100mA
- 操作平台：Windows2000/ XP/ Vista/7/ 8/10
- 產品重量：99±5g (含線材、配重塊)

- 전송 모드 : 적색 광학
- DPI : 800-1600-2400-3200-4800-6400
- 버튼 수 : 6
- 키 압력 : 75+/-5g
- 버튼 수명 : 1백만회
- 정격 전압/전류 : DC 5V /≤100mA
- 시스템 호환 : Windows2000/XP/Vista/7/ 8/10
- 제품 사이즈 : 116.5(L)x63.3(W)x37.7(H)±0.2mm
- 제품 무게 : 99±5g


Package contents / 包裝內容 / 패키지 구성품

- Wired gaming mouse
- Instruction book
- Warranty card
- 有線遊戲滑鼠
- 說明書
- 保修卡
- 유선 게이밍 마우스
- 설명서
- 제품 보증서

技术要求:

- 1) 成品尺寸: 80*95mm
- 2) 材质: 100g书写纸
- 3) 工艺: 4C印刷,折风琴页
- 4) 公差: +/-0.5mm

控制复印

核准 APPVE BY		图纸名称 DWG NAME	说明书	客户 CLIENT	飞利浦
审核 CHECKED BY		机 型 MODEL NO.		绘图视角 PROJECTION	版 本 VER. A1
设计 DRAWN BY	颜立红	2019/05/20	零件料号 PART NO.		单 位 METRIC MM
SOAI ELECTRONIC			材 质 MATERIAL		比 例 SCALE 1:1
			表面处理 FINISHING		图 面 SIZE
<p>■ PEACH ■ RoHs □ Ca65 □ CFR1303 □ PFOS □ PAHs □ FORMALDEHYDE / 甲醛 < ***PPM □ HALOGEN FREE / 无卤</p> <p>THIS DRAWING, AND IT'S INHERANT DESIGN CONCEPTS, ARE THE PROPERTY OF SOAI AND AS SUCH MAY NOT BE COPIED, REPRODUCED, OR GIVEN TO THIRD PARTIES WITHOUT THE WRITTEN CONSENT OF SOAI.</p>					