

Philips
LCD monitor with
SmoothTouch

B Line

22 (21.5"/54.6 cm diag.)
1920 x 1080 (Full HD)

222B1TC



Brilliant interactive display with SmoothTouch

A durable, anti-glare touchscreen for flexible use, with articulating stand to angle as you need. Advanced In-Cell Touch (AIT) offers a slimmer look, superior touch sensitivity for quick response, outstanding and clearer visibility.

Brilliant interactive display

- SmoothTouch display for natural, fluid touch response
- 16:9 Full HD display for crisp, detailed images
- EasyRead mode for a paper-like reading experience
- Less eye fatigue with Flicker-Free technology
- LowBlue Mode for easy-on-the-eyes productivity
- SmartContrast for rich black details

Easy to experience

- HDMI ensures universal digital connectivity
- DisplayPort connection for maximum visuals
- VESA mount allows for flexibility
- SmartStand with adjustable angles, boosts productivity

PHILIPS

Highlights

SmoothTouch



This Philips display uses Projected capacitive 10-point touch technology for fluid response. You can fully utilise the new capabilities of touch-based applications and bring your older applications to life. Touch-type with 10 fingers or play exciting interactive games with your friends. Collaborate with colleagues interactively at work or school environment and increase your productivity and efficiency.

16:9 Full HD display



Picture quality matters. Regular displays deliver quality, but you expect more. This display features enhanced Full HD 1920 x 1080 resolution. With Full HD for crisp detail paired with high brightness, incredible contrast and realistic colours, expect a true-to-life picture.


SmartContrast



SmartContrast is a Philips technology that analyses the contents you are displaying,

automatically adjusting colours and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.

LowBlue Mode

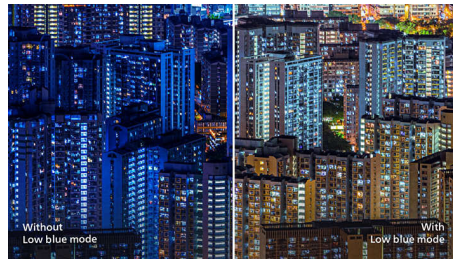


Studies have shown that just as ultra-violet rays can cause eye damage, shortwave-length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, the Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.

Flicker-Free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-Free technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

EasyRead mode

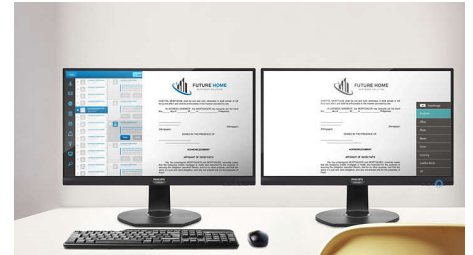

EasyRead mode for a paper-like reading experience

SmartStand

Philips SmartStand allows for flexible adjustment of the screen. Its Z-type structure with smooth tilt, height adjustment and folding capabilities enables you to use it in various ergonomic positions. You can set the stand in upright position for better touch control or recline it backwards, making it easy for you to draw or annotate. It even allows you to put the screen almost flat on the table for some applications when required.

HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. An HDMI cable enables high-quality digital video and audio to be transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).



Specifications

Connectivity

- Signal Input: VGA (Analogue), DisplayPort 1.2, HDMI 1.4
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): PC audio-in, Headphone out
- USB: USB 3.2 x 1 (Upstream); USB 3.2 x 3 (Downstream with 1 fast charge B.C 1.2)

Picture/Display

- Panel Size: 21.5 inch/54.6 cm
- Aspect ratio: 16:9
- LCD panel type: IPS technology
- Backlight type: W-LED system
- Pixel pitch: 0.24795 x 0.24795 mm
- Brightness: 250 cd/m²
- Display colours: 16.7 M
- Colour gamut (typical): NTSC 85%*, sRGB 102%*, Adobe RGB 84%*
- Contrast ratio (typical): 1000:1
- SmartContrast: 50,000,000:1
- Response time (typical): 4 ms (Grey to Grey)*
- Viewing angle: 178° (H)/178° (V), @ C/R > 10
- Picture enhancement: SmartImage
- Maximum resolution: 1920 x 1080 @ 75 Hz*
- Effective viewing area: 476.06 (H) x 267.79 (V)
- Scanning Frequency: VGA: 30 - 85 kHz (H)/48 - 60 Hz (V); HDMI/DP: 30 - 85 kHz (H)/48 - 75 Hz (V)
- sRGB
- Flicker-free
- Pixel Density: 102 PPI
- LowBlue Mode
- Display Screen Coating: Anti-glare, 3H, Haze 25%
- EasyRead
- Adaptive sync

Touch

- Operating system: Windows 10
- Touch active area: 476.06 mm (H) x 267.79 mm (V)
- Touch interface: USB
- Touch method: Finger
- Touch points: 10 points
- Touch technology: Self capacitive
- Palm rejection area: >= 30 x 30 mm

Convenience

- Built-in Speakers: 2 W x 2
- Plug and Play Compatibility: DDC/CI, sRGB, Windows 10 / 8.1 / 8 / 7
- User convenience: SmartImage, Input, Brightness, Menu, Power On/Off
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (100 x 100 mm)
- Control software: SmartControl

Stand

- Height adjustment: 184 (Horizontal), 85 (Vertical) mm
- Tilt: -5-90 degree
- Folding angle: 0-70 degrees

Power

- ECO mode: 10.5 W (typ.)
- Power supply: Internal, 100-240 VAC, 50-60 Hz
- Off mode: Zero watts with Zero switch
- On mode: 13.1 W (typ.) (EnergyStar test method)
- Standby mode: 0.3 W (typ.)
- Power LED indicator: Operation - White, Standby mode - White (flashing)
- Energy Label Class: E

Dimensions

- Packaging in mm (W x H x D): 585 x 400 x 138 mm
- Product without stand (mm): 489 x 294 x 52 mm
- Product with stand (max height): 489 x 384 x 227 mm

Weight

- Product with packaging (kg): 8.27 kg
- Product with stand (kg): 6.13 kg
- Product without stand (kg): 2.79 kg

Operating conditions

- Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
- Temperature range (operation): 0°C to 40°C °C
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C
- MTBF (demonstrated): 70,000 hrs (excluded backlight)

Sustainability

- Environmental and energy: EnergyStar 8.0, EPEAT*, TCO Certified Edge, RoHS
- Recyclable packaging material: 100 %
- Specific Substances: PVC/BFR free housing, Mercury free

Compliance and standards

- Regulatory Approvals: CB, SEMKO, TUV/GS, TUV Ergo, CU-EAC, EAEU RoHS, CE Mark, ICES-003, FCC Class B, TUV Eye Comfort certified

Cabinet

- Finish: Texture
- Foot: Black
- Front bezel: Black
- Rear cover: Black

What's in the box?

- Cables: HDMI cable, DP cable, USB-A to B cable, Power cable
- Monitor with stand
- User Documentation



Issue date 2024-04-29

Version: 1.0.1

EAN: 87 12581 77677 0

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* "IPS" word mark / trademark and related patents on technologies belong to their respective owners.
* The maximum resolution works for either HDMI input or DP input.
* Response time value equal to SmartResponse
* NTSC Area based on CIE 1976
* sRGB Area based on CIE1931
* Adobe RGB Coverage based on CIE 1976
* Please refer to "SmoothTouch" in the user manual for more details on operating system support when using the touch function.
* Fast charging complies with USB BC 1.2 standard
* EPEAT rating is valid only where Philips registers the product. Please visit <https://www.epeat.net/> for registration status in your country.
* The monitor may look different from feature images.