



Philips  
LED monitor with Touch  
Control

18.5"w (47 cm) E-line  
HD

192EL2SB

## Elegant LED display with Natural colors

With elegant design, Touch control, SmartContrast and SmartImage lite, the 192E2 LED display is a great choice for all your needs

### Great picture quality

- LED technology ensures natural colors
- Ready to display HD content
- 16:9 display for best widescreen gaming and video
- SmartContrast 20000000:1 for incredible rich black details

### Design that complements any interior

- Sleek, elegant design complements your home decor
- Glossy finish to enhance your decor
- Modern Touch controls

### Environmentally friendly green design

- Energy Star for energy efficiency and low power consumption
- Eco-friendly materials that meet international standards

### Great convenience

- Easy display performance tuning with SmartControl Lite
- Easy picture format control switching in wide and 4:3 format

**PHILIPS**  
sense and simplicity

# Highlights

## LED technology

White LED's are solid state devices which light up to full, consistent brightness faster saving startup time. LED's are free from mercury content which allows for eco-friendly recycling and disposal process. LED's allow for better dimming control of LCD backlight, resulting in super high contrast ratio. It also gives superior color reproduction thanks to consistent brightness across the screen.

## Sleek, elegant design

A sleek, elegant design look that complements home furnishings in any room.

## High definition monitor

A high definition monitor is a display device designed to deliver the exceptional picture quality of high definition pictures, one fully prepared for HD sources like HD set top boxes. A HD monitor offers picture quality beyond that of progressive scan, conforming to strict standards for HD screens that display high resolution, top picture quality signals through a universal connection for either analog VGA or uncompressed DVI digital connections and supports HDCP. It displays 720p (1280x720p @ 50 and 60 Hz progressive) and 1080i (1920x1080i @ 50 and 60 Hz interlaced) signals.

## 16:9 widescreen aspect ratio

An aspect ratio is an expression of a video image's width compared to its height. The 16:9 widescreen aspect ratio is standard for universal to high-definition television and European digital television. A native 16:9 aspect ratio means outstanding game and video display without bars at top and bottom of the picture and without the quality loss than comes from scaling, altering an image to fit on a different screen size.

## SmartContrast ratio 20000000:1



You want the LCD flat display with the highest contrast and most vibrant images. Philips advanced video processing combined with unique extreme dimming and backlight boosting technology results in vibrant images. SmartContrast will increase the contrast with excellent blacklevel and accurate rendition of dark shades and colors. It gives a bright, lifelike picture with high contrast and vibrant colors.

## SmartControl Lite

SmartControl Lite is the next generation 3D icon based GUI monitor control software. This allows user to fine-tune most parameters of the monitor like Color, Brightness, screen calibration, Multi-media, ID management, etc with the mouse.

## Touch controls


Touch controls are intelligent, touch sensitive icons that replace protruding buttons that lets the user adjust the monitor to their requirement. Responding to your lightest touch, Touch control gives the monitor a modern feel

## Energy Star 5.0

Energy Star is a US EPA sponsored energy efficiency program also adopted by many other countries. Energy Star certification ensures that you are buying a product which meets the latest power efficiency standards which operates with maximum power efficiency at all

operational levels. New Philips monitors are certified for Energy Star 5.0 specifications and meet or exceed the standard. For example, in sleep mode Energy Star 5.0 requires less than 1 watt power consumption, whereas Philips monitors consume less than 0.5 watts. Further details can be obtained from [www.energystar.gov](http://www.energystar.gov)

## Easy picture format control

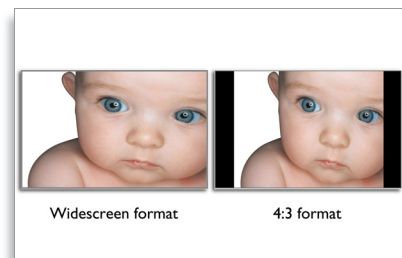

Philips easy picture format control on OSD is to switch from the 4:3 aspect ratio to the widescreen mode and back again to match the display's aspect ratio with your content for working with wide documents without scrolling or viewing widescreen media in the widescreen mode and distortion-free, native mode display of 4:3 ratio content.

## Eco-friendly materials

"Philips is committed to use sustainable, eco-friendly materials across its monitor range. All body plastic parts, metal chassis parts and packing materials use 100% recyclable materials. In some selected models we utilize upto 65% post consumer recycled plastics. Strict adherence to RoHS standards ensure substantial reduction or elimination of toxic substances like Lead, for example. Mercury content in monitors with CCFL backlight has been reduced significantly, while eliminated in monitors with LED backlight completely. Visit Philips @ <http://www.asimpleswitch.com/global/> to learn more.



# Specifications

## Picture/Display

- LCD panel type: TFT-LCD
- Backlight type: W-LED system
- Panel Size: 18.5 inch/ 47 cm
- Aspect ratio: 16:9
- Optimum resolution: 1366 x 768 @ 60 Hz
- Response time (typical): 5 ms
- Brightness: 250 cd/m<sup>2</sup>
- SmartContrast: 20,000,000:1
- Pixel pitch: 0.30 x 0.30 mm
- Viewing angle: 176° (H) / 170° (V), @ C/R > 5
- Picture enhancement: SmartImage Lite
- Display colors: 16.7 M
- Scanning Frequency: 30 -83 kHz (H) / 56 -75 Hz (V)
- sRGB

## Connectivity

- Signal Input: VGA (Analog ), DVI-D (digital, HDCP)
- Sync Input: Separate Sync, Sync on Green

## Convenience

- User convenience: SmartImage lite, SmartControl lite, Menu, Input, Power On/Off
- OSD Languages: English, French, German, Spanish, Italian, Russian, Simplified Chinese, Portuguese, Turkish
- Other convenience: VESA mount (100x100mm), Kensington lock
- Plug & Play Compatibility: DDC/CI, Windows 7/ Vista/XP, Mac OS X

## Stand

- Tilt: -5/+20 degree degree

## Power

- On mode: 10.4 W (EnergyStar 5.0 test method)

- Standby mode: 0.5 W
- Off mode: 0.5 W
- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Power supply: Built-in, 100-240VAC, 50/60Hz

## Dimensions

- Product with stand (mm): 457 x 363 x 180 mm
- Product without stand (mm): 457 x 293 x 49 mm
- Packaging in mm (WxHxD): 503 x 416 x 141 mm

## Weight

- Product with stand (kg): 3.41 kg
- Product without stand (kg): 3.17 kg
- Product with packaging (kg): 5.00 kg

## Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- Temperature Range (storage): -20°C to 60°C °C
- Relative humidity: 20%-80 %
- MTBF: 30,000 hour(s)

## Sustainability

- Environmental and energy: RoHS, EPEAT Silver, EnergyStar 5.0
- Recyclable packaging material: 100 %

## Compliance and standards

- Regulatory Approvals: CE Mark, FCC, Class B, BSMI, UL/cUL, TCO 5.0

## Cabinet

- Color: Black/Black
- Finish: Glossy



Issue date 2011-11-26

Version: 3.0.1

12 NC: 8670 000 67616  
EAN: 87 12581 56251 9

© 2011 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)