

Philips Monitor  
LCD monitor with  
Windows Hello Webcam

**5000 series**  
27" (68.6 cm)  
2560 x 1440 (QHD)

**27E1N5600HE**



# Collaboration simplified

with built-in webcam

This Philips monitor is designed for the remote work environment. The integrated 5MP webcam delivers sharp images, and noise cancelling mic helps people hear you loud and clear. Windows Hello Webcam for quick access and strong security.

## Features designed for you

- EasySelect menu toggle key for quick on-screen menu access
- Built-in stereo speakers for multimedia
- Cable management reduces cable clutter for neat workspace
- LowBlue mode and Flicker-free easy-on-the eyes viewing
- Tilt, pivot and height-adjust for an ideal viewing position
- Webcam with noise cancelling microphone for collaboration
- Connect your notebook with one USB-C cable

## Superb Picture Quality

- IPS LED wide view technology for image and color accuracy
- Crystalclear images with Quad HD 2560 x 1440 pixels

# PHILIPS

LCD monitor with Windows Hello Webcam  
5000 series 27" (68.6 cm), 2560 x 1440 (QHD)

27E1N5600HE/75


# Highlights

## USB-C connection



This Philips display features a USB type-C connector with power delivery. With intelligent and flexible power management, you can power charge your compatible device directly. Its slim, reversible USB-C allows for easy, one-cable connection. You can watch high resolution video and transfer data at a super-speed, while powering up and re-charging your compatible device at the same time.

## IPS technology

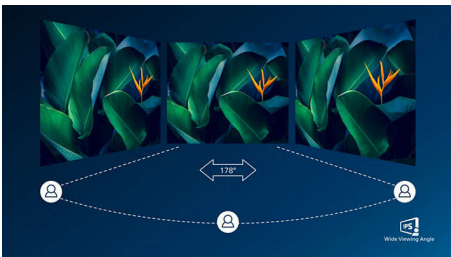

IPS displays use an advanced technology which gives you extra wide viewing angles of 178/178 degree, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid colors, making it ideal not only for Photos, movies and web browsing, but also for professional applications which demand color accuracy and consistent brightness at all times.

## Crystalclear images



These Philips screens deliver Crystalclear, Quad HD 2560x1440 or 2560x1080 pixel images. Utilizing high performance panels with high density pixel count, enabled by high bandwidth sources like USB-C, Displayport, HDMI, these new displays will make your images and graphics come alive. Whether you are demanding professional requiring extremely detailed information for CAD-CAM solutions, using 3D graphic applications or a financial wizard working on huge spreadsheets, Philips displays will give you Crystalclear images.

## Webcam & noise cancelling mic



This Philips monitor comes with built-in 5MP webcam, noise cancelling microphone, and speakers. Making it perfect for working from home and collaborating remotely. The webcam is certified for Windows Hello. Equipped with advanced sensors for Windows Hello™ facial recognition, which conveniently logs you into your Windows devices in less than 2 seconds. The physical camera switch offers extra privacy when not in use. The noise-cancelling

microphone and dual 5-watt integrated speakers deliver clear communications.

## Built-in stereo speakers




A pair of high quality stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.

## LowBlue Mode & Flicker-free



Our LowBlue Mode and Flicker-free technology have been developed to reduce eye strain and fatigue often caused by long hours in front of a monitor.

## Compact Ergo Base

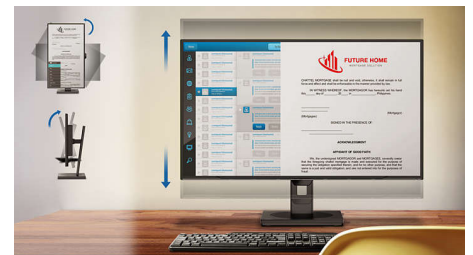

The Compact Ergo Base is a people-friendly Philips monitor base that tilts, pivot and height-adjusts so each user can position the monitor for maximum viewing comfort and efficiency.



# Specifications

## Connectivity

- Signal Input: HDMI 1.4 x 1, DisplayPort 1.2 x 1, USB-C 3.2 Gen 1 x 1 (upstream, Power Delivery up to 65W)
- Sync Input: Separate Sync
- Audio (In/Out): Audio out
- USB: USB 3.2 x 4 (downstream with 1 fast charge B.C 1.2)
- HDCP: HDCP 1.4 (HDMI / DisplayPort / USB-C)

## Picture/Display

- Panel Size: 27 inch / 68.6 cm
- Aspect ratio: 16:9
- LCD panel type: IPS technology
- Backlight type: W-LED system
- Pixel pitch: 0.2331 x 0.2331 mm
- Brightness: 300 cd/m<sup>2</sup>
- Display colors: 16.7 M
- Color gamut (typical): NTSC 102.02%\*, sRGB 114.18%\*
- Contrast ratio (typical): 1000:1
- SmartContrast: Mega Infinity DCR
- Response time (typical): 4 ms (Gray to Gray)\*
- Viewing angle: 178° (H) / 178° (V), @ C/R &gt; 10
- Picture enhancement: SmartImage game
- Maximum resolution: 2560 x 1440 @ 75 Hz\*
- Effective viewing area: 596.736 (H) x 335.664 (V)
- Scanning Frequency: 30 - 114 kHz (H) / 48 - 75 Hz (V)
- sRGB
- Flicker-free
- Pixel Density: 108.79 PPI
- LowBlue Mode
- Display Screen Coating: Anti-Glare, 3H, Haze 25%
- MPRT: 1 ms
- EasyRead
- Adaptive sync

## USB

- Power delivery: USB PD version 3.0
- Super speed: Data and Video transfer
- DP: Built-in Display Port Alt mode
- USB-C max. power delivery: Up to 65W (5V/3A, 9V/3A, 10V/3A, 12V/3A, 15V/3A, 20V/3.25A)
- USB-C: Reversible plug connector

## Convenience

- Built-in Speakers: 5 W x 2
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
- User convenience: Power On/Off, Menu, Volume, Input, SmartImage Game
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish,

- Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (100x100mm)
- Built-in webcam: 5.0 megapixel camera with microphone and LED indicator (for Windows Hello)
- Noise cancellation

## Stand

- Height adjustment: 130 mm
- Pivot: +/- 90 degree
- Tilt: -5/20 degree

## Power

- Power supply: Internal, 100-240VAC, 50-60Hz
- Off mode: 0.3 W (typ.)
- On mode: 29.6 W (typ.)
- Standby mode: 0.5 W (typ.)
- Power LED indicator: Operation - White, Standby mode- White (blinking)

## Dimensions

- Packaging in mm (WxHxD): 780 x 525 x 186 mm
- Product without stand (mm): 614 x 379 x 52 mm
- Product with stand(max height): 614 x 524 x 212 mm

## Weight

- Product with packaging (kg): 10.65 kg
- Product with stand (kg): 6.57 kg
- Product without stand (kg): 4.70 kg

## Operating conditions

- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- Temperature range (operation): 0 to 40 °C
- MTBF: 50,000 hrs (excluding backlight) hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20 to 60 °C

## Sustainability

- Environmental and energy: RoHS
- Recyclable packaging material: 100 %
- Specific Substances: Mercury free, PVC / BFR free housing

## Compliance and standards

- Regulatory Approvals: CB, CE Mark, CU-EAC, EAEU RoHS, FCC Class B, ICES-003, TUV/ISO9241-307, TUV-BAUART, MEPS, RCM

## Cabinet

- Color: Black
- Finish: Textured



Issue date 2024-03-23

Version: 2.0.1

EAN: 87 12581 80017 8

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

[www.philips.com](http://www.philips.com)

- \* "IPS" word mark / trademark and related patents on technologies belong to their respective owners.
- \* The maximum resolution works for either HDMI input or DP input.
- \* For best output performance, please always ensure that your graphic card is capable of achieving the maximum resolution and refresh rate of this Philips display.
- \* Response time value equal to SmartResponse
- \* MPRT is to adjust brightness for blur reduction, so cannot adjust brightness while MPRT is turned on. To reduce motion blur, LED backlight will strobe synchronously with screen refresh, which may cause noticeable brightness change.
- \* MPRT is gaming-optimized mode. Turn on MPRT may cause noticeable screen flickering. It is recommended to turn off when you are not using the gaming function.
- \* NTSC Area based on CIE1976
- \* sRGB Area based on CIE1931
- \* For Video transmission via USB-C, your Notebook/device must support USB-C DP Alt mode
- \* For USB-C power and charging function, your Notebook/device must support USB-C standard Power Delivery specifications. Please check with your Notebook user manual or manufacturer for more details.
- \* The monitor may look different from feature images.