



Philips  
LCD monitor

**V Line**  
19" (48.3 cm)

**190V3SB5**

## Enjoy great pictures in vivid colors

Enjoy vivid LCD pictures with this attractive, glossy design display.

### **Great picture quality**

- SmartContrast 10000000:1 for incredible rich black details

### **Design that complements any interior**

- Attractive slim, glossy design
- Small footprint to blend into any lifestyle

### **Greener everyday**

- Energy Star for energy efficiency and low power consumption


### **Great convenience**

- Easy display performance tuning with SmartControl Lite

# PHILIPS

# Highlights

## SmartContrast ratio 10000000:1

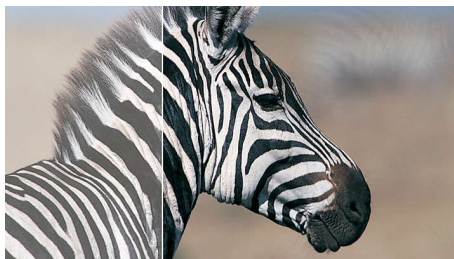

You want the LCD flat display with the highest contrast and most vibrant images. Philips advanced video processing combined with unique extreme dimming and backlight boosting technology results in vibrant images. SmartContrast will increase the contrast with excellent blacklevel and accurate rendition of

dark shades and colors. It gives a bright, lifelike picture with high contrast and vibrant colors.

## SmartControl Lite

SmartControl Lite is the next generation 3D icon based GUI monitor control software. This allows user to fine-tune most parameters of the monitor like Color, Brightness, screen calibration, Multi-media, ID management, etc with the mouse.

## Attractive slim, glossy design


Attractive slim, glossy design

## Small footprint

Small footprint to blend into any lifestyle

## Energy Star 5.0

Energy Star is a US EPA sponsored energy efficiency program also adopted by many other countries. Energy Star certification ensures that you are buying a product which meets the latest power efficiency standards which operates with maximum power efficiency at all operational levels. New Philips monitors are certified for Energy Star 5.0 specifications and meet or exceed the standard. For example, in sleep mode Energy Star 5.0 requires less than 1watt power consumption, whereas Philips monitors consume less than 0.5watts. Further details can be obtained from [www.energystar.gov](http://www.energystar.gov)



# Specifications

## Connectivity

- Signal Input: VGA (Analog ), DVI-D (digital, HDCP)
- Sync Input: Separate Sync, Sync on Green

## Picture/Display

- Panel Size: 19 inch / 48.3 cm
- Aspect ratio: 16:10
- LCD panel type: TFT-LCD
- Backlight type: CCFL system
- Pixel pitch: 0.2835x 0.2835 mm
- Optimum resolution: 1440 x 900 @ 60 Hz
- Brightness: 250 cd/m<sup>2</sup>
- Display colors: 16.7 M
- Contrast ratio (typical): 1000:1
- SmartContrast: 10,000,000:1
- Response time (typical): 5 ms
- Viewing angle: 170° (H) / 160° (V), @ C/R &gt; 10
- Effective viewing area: 408.24 (H) x 255.15 (V)
- Scanning Frequency: 30 -83 kHz (H) / 56 -75 Hz (V)
- sRGB

## Convenience

- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 7
- User convenience: Auto/Down, 4:3 Wide/Up, Brightness/Back, Menu/OK, Power On/Off
- OSD Languages: English, French, German, Spanish, Italian, Russian, Simplified Chinese, Portuguese, Turkish
- Other convenience: Kensington lock, VESA mount (100x100mm)

## Stand

- Tilt: -5/+20 degree

## Power

- Power supply: Built-in, 100-240VAC, 50/60Hz

- Off mode: 0.5 W
- On mode: 19.3W (EnergyStar 5.0 test method)
- Standby mode: 0.5 W
- Power LED indicator: Operation - White, Standby mode- White (blinking)

## Dimensions

- Product with stand (mm): 462 x 382 x 204 mm
- Packaging in mm (WxHxD): 503 x 396 x 125 mm
- Product without stand (mm): 462 x 319 x 54 mm

## Weight

- Product with packaging (kg): 4.68 kg
- Product with stand (kg): 3.57 kg
- Product without stand (kg): 3.28 kg

## Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- MTBF: 50,000 hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C

## Sustainability

- Environmental and energy: EnergyStar 5.0, EPEAT Silver, RoHS
- Recyclable packaging material: 100 %

## Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC Class B, GOST, PSB, SASO, SEMKO, TUV Ergo, TUV/ GS, UL/cUL, WEEE

## Cabinet

- Color: Black
- Finish: Glossy (front bezel) /Texture (rear cover)



Issue date 2024-03-24

Version: 1.0.1

EAN: 87 12581 63395 0

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)