



Philips  
4K Ultra HD LCD monitor

**E Line**  
27" (68.6 cm)  
3840 x 2160 (4K UHD)

**278E1A**

## Simply stunning

The 27" E Line monitor features stunning visuals and elegant design for a stylish enhancement to your workspace. Ultra-clear 4K UHD with wide-view delivers same ultimate clarity and life-like visuals from any front angle view.

### Features designed for you

- DisplayPort connection for maximum visuals
- HDMI ensures universal digital connectivity
- Built-in stereo speakers for multimedia
- Less eye fatigue with Flicker-free technology
- LowBlue Mode for easy on-the-eyes productivity
- Cable management reduces cable clutter for neat workspace

### Greener everyday

- Low power consumption saves energy bills
- Eco-friendly materials meet major international standards

### Superb Picture Quality


- SmartContrast for rich black details
- IPS LED wide view technology for image and color accuracy
- UltraClear 4K UHD (3840x2160) resolution for precision
- SmartImage game mode optimized for gamers

# PHILIPS

4K Ultra HD LCD monitor  
E Line 27" (68.6 cm), 3840 x 2160 (4K UHD)


# Highlights

## IPS technology

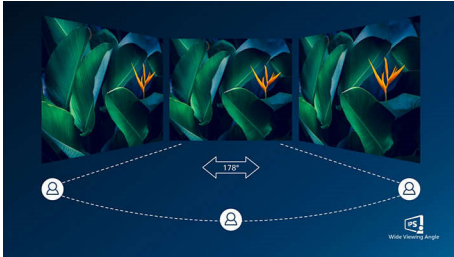

IPS displays use an advanced technology which gives you extra wide viewing angles of 178/178 degree, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid colors, making it ideal not only for Photos, movies and web browsing, but also for professional applications which demand color accuracy and consistent brightness at all times.

## UltraClear 4K UHD Resolution

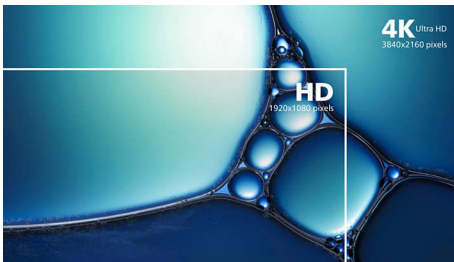

These Philips displays utilize high performance panels to deliver UltraClear, 4K UHD (3840 x 2160) resolution images. Whether you are demanding professional requiring extremely detailed images for CAD solutions, using 3D graphics applications or a financial wizard working on huge spreadsheets, Philips displays will make your images and graphics come alive.

## SmartContrast



SmartContrast is a Philips technology that analyzes the contents you are displaying, automatically adjusting colors and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.

## SmartImage Game mode



The new Philips gaming display has quick access OSD fine tuned for gamers, offering you multiple options. "FPS" mode (First person shooting) improves dark themes in games, allowing you to see hidden objects in dark areas. "Racing" mode adapts display with fastest response time, high color, along with image adjustments. "RTS" mode (Real time strategy) has a special SmartFrame mode which enables highlighting of

278E1A/27

specific area and allows for size and image adjustments. Gamer 1 and Gamer 2 enable you to save personal customized settings based on different games, ensuring best performance.

## Concealed cables



For a cleaner workspace, this monitor features an elegant solution for cable management. No need to bundle cables with extra ties. An elongated slot provides a hidden storage for cables. It conceals cables and looks great in most environments, especially for a small space or the desk that faces a wall or a window. This design cleans up messy cables, for a more organized desk.

## Flicker-free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-free Technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.



# Specifications

## Connectivity

- Signal Input: DisplayPort x 1, HDMI x 2
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): PC audio-in, Earphone out

## Picture/Display

- Panel Size: 27 inch / 68.6 cm
- Aspect ratio: 16:9
- LCD panel type: IPS technology
- Backlight type: W-LED system
- Pixel pitch: 0.155 x 0.155 mm
- Brightness: 350 cd/m<sup>2</sup>
- Display colors: Color support 1.07 billion colors
- Color gamut (typical): NTSC 91%\*, sRGB 109%\*
- Contrast ratio (typical): 1000:1
- SmartContrast: Mega Infinity DCR
- Response time (typical): 4 ms (Gray to Gray)\*
- Viewing angle: 178° (H) / 178° (V), @ C/R &gt; 10
- Picture enhancement: SmartImage game
- Maximum resolution: 3840 x 2160 @ 60 Hz\*
- Effective viewing area: 596.74 (H) x 335.66 (V)
- Scanning Frequency: 30 - 83 kHz (H) / 59 - 61 Hz (V)
- sRGB
- Delta E: < 2
- Flicker-free
- Pixel Density: 163 PPI
- LowBlue Mode
- Display Screen Coating: Anti-Glare, 3H, Haze 25%
- SmartUniformity: 97 ~ 102%

## Convenience

- Built-in Speakers: 3 W x 2
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
- User convenience: Power On/Off, Menu, Volume, Input, SmartImage Game
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (100x100mm)

## Stand

- Tilt: -5/20 degree

## Power

- Power supply: External, 100-240VAC, 50-60Hz

- Off mode: < 0.3 W (typ.)
- On mode: 20.3 W (typ.) (EnergyStar test method)
- Standby mode: < 0.5 W (typ.)
- Power LED indicator: Operation - White, Standby mode- White (blinking)

## Dimensions

- Product with stand (mm): 613 x 461 x 192 mm
- Product with stand in inch: 24.1 x 18.1 x 7.6 inch
- Packaging in mm (WxHxD): 663 x 519 x 152 mm
- Product without stand (mm): 613 x 368 x 45 mm
- Packaging in inch (WxHxD): 26.1 x 20.4 x 6.0 inch
- Product without stand in inch: 24.1 x 15.5 x 1.8 inch

## Weight

- Product with packaging (kg): 6.84 kg
- Product with stand (kg): 4.78 kg
- Product with packaging (lb): 15.04 lb
- Product with stand (lb): 10.52 lb
- Product without stand (kg): 4.18 kg
- Product without stand (lb): 9.20 lb

## Operating conditions

- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- Temperature range (operation): 0 to 40 °C
- MTBF: 50,000 hrs (excluding backlight) hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20 to 60 °C

## Sustainability

- Environmental and energy: EnergyStar 8.0, RoHS, Mercury Free
- Recyclable packaging material: 100 %

## Compliance and standards

- Regulatory Approvals: CU-EAC, TUV/ISO9241-307, cETLus, CE Mark, FCC Class B, ICES-003, CCC, CECP, TUV-BAUART

## Cabinet

- Color: Black
- Finish: Textured

## What's in the box?

- Cables: HDMI cable, Audio cable, Power cable
- Monitor with stand
- User Documentation



Issue date 2024-03-25

Version: 7.0.1

UPC: 6 09585 25289 9

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* "IPS" word mark / trademark and related patents on technologies belong to their respective owners.  
\* The maximum resolution works for either HDMI input or DP input.  
\* Response time value equal to SmartResponse  
\* NTSC Area based on CIE1976  
\* sRGB Area based on CIE1931  
\* The monitor may look different from feature images.