

Philips Signage Solutions
Video Wall Display

55"

Direct LED Backlight
Full HD
500cd/m²

SignageSolutions

55BDL2005X

Go big

Versatile videowall display.

Command attention with a Philips X-Line Professional Videowall Display. Crisp contrast and narrow bezels enable clear, distraction-free imaging. Whether you're running an airport or hosting a conference.

Brilliant images. Endless possibilities.

- Full HD monitors. Brilliant images. Clear contrast
- IPS panel: rich color consistency from every angle
- Ultra-narrow (3.5 mm) bezels. For distraction-free images

Effortless setup. Total control.

- Add Android processing power with an optional CRD50 module
- Operate, monitor and maintain with CMND & Control

Powerful system solution

- Tiling mode. Create tiled 4K videowalls of any size
- OPS slot allows for PC embedding without cabling
- Energy-saving automatic backlight control

Cost-effective system solution

- FailOver ensures content is always playing

PHILIPS

Video Wall Display
55" Direct LED Backlight, Full HD, 500cd/m²

Highlights

Tiling mode

Connect two or more Philips professional displays to create a tiled videowall-without the need for external devices. A single player takes care of content, whether you have four screens or 40. 4K content is fully supported, and if you're showing that content on four screens you get the best possible dot-by-dot resolution.

Optional CRD50 module

Embed an Android System-on-Chip (SoC) in your Philips Professional Display. The optional CRD50 module is an OPS device that enables

Android processing power without the need for cables. Simply slide into the OPS slot, which contains all the connections needed to run the module (including power supply).

CMND & Control




Run your display network over a local (LAN) connection. CMND & Control allows you to perform vital functions like controlling inputs

55BDL2005X/00

and monitoring display status. Whether you're in charge of one screen or 100.

OPS slot



Integrate a full-power PC or Android-powered CRD50 module directly into your Philips Professional Display. The OPS slot contains all the connections you need to run your slot-in solution, including a power supply.

Specifications

Picture/Display

- Diagonal screen size: 54.6 inch / 138.7 cm
- Panel resolution: 1920x1080p
- Optimum resolution: 1920 x 1080 @ 60 Hz
- Brightness: 500 cd/m²
- Contrast ratio (typical): 1200 : 1
- Dynamic contrast ratio: 500,000 : 1
- Response time (typical): 8 ms
- Aspect ratio: 16:9
- Viewing angle (H / V): 178 / 178 degree
- Pixel pitch: 0.63 x 0.63 mm
- Display colors: 16.7 M
- Picture enhancement: 3/2 - 2/2 motion pull down, Motion compens. deinterlacing, Progressive scan, Dynamic contrast enhancement
- Haze: 25%

Supported Display Resolution

Computer formats

Resolution	Refresh rate
1024 x 768	60, 75Hz
1280 x 1024	60Hz
1280 x 768	60Hz
1280 x 800	60Hz
1280 x 960	60Hz
1360 x 768	60Hz
1366 x 768	60Hz
1600 x 1200	60Hz
1920 x 1080	60Hz
3840 X 2160	30Hz (Tiling)
640 x 480	60, 72, 75Hz
720 x 400	70Hz
800 x 600	60, 75Hz

Video formats

Resolution	Refresh rate
1080i	25, 30Hz
1080p	50, 60Hz
720p	50, 60Hz

Connectivity

- Video input: Component (BNC x3), Composite (Share component Y), Display Port 1.2 (x1), DVI-D, HDMI 1.4 (x2), USB 2.0 (x1), VGA (Analog D-Sub)
- Video output: DisplayPort 1.2 (x1), DVI-I (x1)
- Audio input: 3.5 mm jack, Audio Left/Right (RCA)
- Audio output: 3.5mm jack, External speaker connection
- External control: RJ45, RS232C (in/out) 2.5 mm

- jack, IR (in/out) 3.5 mm jack
- Other connections: OPS

Convenience

- Signal loop through: RS232, IR Loopthrough, DisplayPort, DVI Loopthrough
- Ease of installation: Carrying Handles, Smart Insert
- Energy saving functions: Smart Power
- Network controllable: RS232, RJ45
- Placement: Portrait, Landscape
- Screen saving functions: Pixel Shift, Low Bright
- Tiled Matrix: Up to 10 x 10
- Control software: SICP / CMND&Control

Dimensions

- Set dimensions (W x H x D): 1213.5 x 684.3 x 97.8 mm
- Product weight: 28.8 kg
- Wall Mount: 400 x 400 mm, M6
- Product weight (lb): 63.49 lb
- Set dimensions in inch (W x H x D): 47.78 x 26.9 x 3.85 inch
- Bezel thickness: 3.5 mm (B-B)
- Bezel width: Top/Left: 2.3mm, Bottom/Right: 1.2mm
- Smart Insert mount: 100 x 100mm, 6 x M4 L6

Operating conditions

- Temperature range (operation): 0 ~ 40 °C
- Temperature range (storage): -20 ~ 60 °C
- Altitude: 0 ~ 3000 m
- MTBF: 50,000 hour(s)
- Humidity range (operation)[RH]: 20 ~ 80% RH (No condensation)
- Humidity range (storage) [RH]: 5 ~ 95% RH (No condensation)

Power

- Mains power: Universal (AC 100 - 240V), 60 Hz
- Standby power consumption: <0.5W
- Consumption (Max): 250 W
- Consumption (Typical): 200 W
- Energy Label Class: G

Sound

- Built-in speakers: 2 x 10W (RMS)

Accessories

- Included accessories: AC Power Cord, Batteries

for remote control, DVI-D cable, Edge alignment pins, Quick start guide, Remote Control, RS232 cable

- Included Accessories: IR cable, IR sensor cable (1.8 m) (x1), Kit-1 (x1), Kit-2 (x2), RS232 daisy chain cable, Thumb Screw (x8)
- Optional accessories: Color calibration kit, CRD41, Edge finishing kit


Miscellaneous

- On-Screen Display Languages: Arabic, Simplified Chinese, Traditional Chinese, English, French, German, Italian, Japanese, Polish, Russian, Spanish, Turkish
- Regulatory approvals: CE, CB, BSMI, CU, ETL, FCC, Class A, PSB, RoHS
- Warranty: 3 year warranty

Multimedia Applications

- USB Playback Audio: AAC, AIF, AIFF, ASF, M3U, M4A, MP3, MP4, PLS, WAV, WMA
- USB Playback Picture: BMP, GIF, JPEG, JPG, PNG
- USB Playback Video: ISM, M4V, MK3D, MKV, MP4, MPD, MPEG, MPG, MT2, MTS, TS, TTS, VOB

Philips 55BDL2005X
Version: L2
Release Date: 2020/08/14

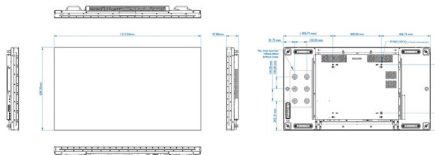

Issue date 2022-07-14

Version: 2.0.1

12 NC: 8670 001 69165
EAN: 87 12581 76964 2

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com