



Philips Brilliance
LCD monitor, LED
backlight

S Line
22" (55.9 cm)
1680 x 1050

220S4LCB

Sustainable productivity

with energy efficient ergonomic LED display

The Philips ergonomic LED display using 25% recycled materials and PVC-BFR free housing is ideal for eco-friendly productivity

Designed for people

- Low bezel-to-table height for maximum reading comfort
- SmartErgoBase enables user-friendly ergonomic adjustments

Great performance

- LED technology ensures natural colours
- TrueVision ensures lab quality images

Sustainable Eco-design

- PVC-BFR free housing
- 100% recyclable packaging
- Zero mercury content

Easy to experience

- SmartControl for easy performance tuning
- Modern Touch controls
- SmartImage pre-sets for easy optimised image settings

PHILIPS

LCD monitor, LED backlight
S Line 22" (55.9 cm), 1680 x 1050


220S4LCB/00

Highlights

LED technology

White LED's are solid state devices which light up to full, consistent brightness faster saving startup time. LED's are free from mercury content, which allows for eco-friendly recycling and disposal process. LED's allow for better dimming control of the LCD backlight, resulting in a super high contrast ratio. It also gives superior colour reproduction thanks to consistent brightness across the screen.

SmartErgoBase

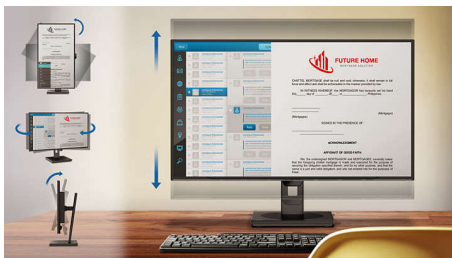

The SmartErgoBase is a monitor base that delivers ergonomic display comfort and provides cable management. The user-friendly height, swivel, tilt and rotation angle adjustments of the base allow the monitor to be positioned for maximum comfort to help ease the physical strains of a long workday. In addition, cable management reduces cable clutter and keeps the workspace neat and professional.

Low bezel-to-table height




Thanks to its advanced SmartErgoBase, the Philips monitor can be lowered down almost to desk level for a comfortable viewing angle. Low bezel-to-table height is the perfect solution if you use bifocals, trifocals or progressive lens glasses for your computing work. Additionally, it allows users of different heights to use the monitor at their preferred angle and height settings, helping them to reduce fatigue and strain.

SmartImage



SmartImage is an exclusive leading edge Philips technology that analyses the content displayed on your screen and optimises your display performance. This user-friendly interface allows you to select various modes, like Office, Photo, Movie, Game, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimises the contrast, colour saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time at the touch of a single button!

TrueVision

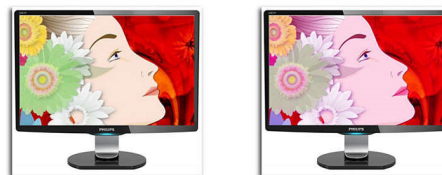

TrueVision is a proprietary Philips technology that uses an advanced algorithm for testing and aligning monitor display, which gives you the ultimate display performance. Philips ensures that TrueVision monitors leave the factory fine-tuned with this process giving you consistent colour and picture quality.

Zero mercury content

Philips monitors with LED backlighting are free from Mercury, one of the most toxic natural substances, which affects humans and animals. This reduces the environmental impact of the display throughout its lifecycle, from manufacturing to disposal.

PVC-BFR free housing

This Philips monitor housing is free from brominated flame retardant and polyvinyl chloride (PVC-BFR free)

Sustainability

Philips is committed to using sustainable, eco-friendly materials across its monitor range. All body plastic parts, metal chassis parts and packing materials use 100% recyclable materials. In selected models, we utilise $\geq 65\%$ Post-Consumer Recycled plastics, ensuring reduction in waste. Strict adherence to RoHS standards ensures substantial reduction or elimination of toxic substances like Lead and Mercury. Our display housing is made up of PVC/BFR-free material. For more information, please visit Philips @ <http://www.asimpleswitch.com/global/> to learn more.

SmartControl for easy tuning

PC software for fine tuning display performance and settings. Philips offers users two choices for display setting adjustment. Either navigate the multi-level On-Screen Display menu through buttons on the display itself or use the Philips SmartControl software to easily adjust the various display settings in a familiar way

Touch controls



Touch controls are intelligent, touch-sensitive icons that replace protruding buttons to allow users to adjust the monitor to their requirements. Responding to the lightest touch, Touch control gives the monitor a modern feel.



Specifications

Connectivity

- Signal Input: DVI-D (digital, HDCP), VGA (Analogue)
- Sync Input: Separate Sync, Sync on Green

Picture/Display

- Panel Size: 22 inch/55.9 cm
- Aspect ratio: 16:10
- LCD panel type: TFT-LCD
- Backlight type: W-LED system
- Pixel pitch: 0.282 x 0.282 mm
- Optimum resolution: 1680 x 1050 @ 60 Hz
- Brightness: 250 cd/m²
- Display colours: 16.7 M
- Contrast ratio (typical): 1000:1
- SmartContrast: 20,000,000:1
- Response time (typical): 5 ms
- Viewing angle: 170° (H)/160° (V), @ C/R >= 10
- Picture enhancement: SmartImage
- Effective viewing area: 473.76 (H) x 296.1 (V)
- Scanning Frequency: 30–83 kHz (H)/56–75 Hz (V)
- sRGB

Convenience

- Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 7/Vista/XP
- User convenience: SmartImage, Brightness, SmartPower, Menu, Power On/Off
- OSD Languages: English, French, German, Italian, Portuguese, Russian, Simplified Chinese, Spanish
- Other convenience: Kensington lock, VESA mount (100 x 100 mm)
- Control software: SmartControl Premium

Stand

- Height adjustment: 110 mm
- Pivot: 90 degree
- Swivel: -65/65 degree
- Tilt: -5/20 degree

Power

- ECO mode: 12.6 W (typ.)
- Power supply: Built-in, 100–240 VAC, 50–60 Hz
- Off mode: 0.1 W
- On mode: 15.09 W (typ.) (EnergyStar 7.0 test method)

- Standby mode: 0.1 W
- Power LED indicator: Operation - White, Standby mode - White (flashing)

Dimensions

- Product with stand (mm): 504 x 509 x 227 mm
- Packaging in mm (W x H x D): 565 x 391 x 186 mm
- Product without stand (mm): 504 x 349 x 59 mm

Weight

- Product with packaging (kg): 7.05 kg
- Product with stand (kg): 5.2 kg
- Product without stand (kg): 3.38 kg

Operating conditions

- Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
- Temperature range (operation): 0°C to 40°C °C
- MTBF: 30,000 hour(s)
- Relative humidity: 20% to 80% %
- Temperature range (storage): -20°C to 60°C °C

Sustainability

- Environmental and energy: EnergyStar 7.0, TCO Certified, WEEE, RoHS
- Recyclable packaging material: 100 %
- Specific Substances: PVC/BFR free housing, Mercury free
- Recycled material: 25%

Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC Class B, GOST, SASO, SEMKO, TUV Ergo, TUV/GS, UL/cUL

Cabinet

- Finish: Texture
- Foot: Black
- Front bezel: Black
- Rear cover: Black

What's in the box?

- Cables: VGA, Power
- Monitor with stand
- User Documentation



Issue date 2024-03-24

Version: 6.0.1

EAN: 87 12581 64147 4

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com