




Philips  
LCD monitor

V Line  
19" (48.3 cm)

190V3AB5

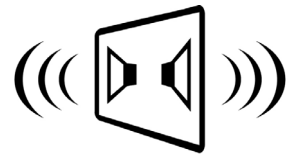

**Built-in** Speakers

## Enjoy great pictures in vivid colors

with stereo audio

Enjoy vivid LCD pictures with this attractive, glossy design display. Equipped with stereo speaker. It's a great choice!

### **Great picture quality**

- SmartContrast 10000000:1 for incredible rich black details

### **Design that complements any interior**

- Attractive slim, glossy design
- Small footprint to blend into any lifestyle

### **Greener everyday**

- Energy Star for energy efficiency and low power consumption

### **Experience true multimedia**

- Built-in speakers for audio without desktop clutter

### **Great convenience**

- Easy display performance tuning with SmartControl Lite

# PHILIPS

# Specifications

# Highlights

## Picture/Display

- LCD panel type: TFT-LCD
- Backlight type: CCFL system
- Panel Size: 19 inch / 48.3 cm
- Effective viewing area: 408.24 (H) x 255.15 (V)
- Aspect ratio: 16:10
- Optimum resolution: 1440 x 900 @ 60 Hz
- Response time (typical): 5 ms
- Brightness: 250 cd/m<sup>2</sup>
- SmartContrast: 10,000,000:1
- Contrast ratio (typical): 1000:1
- Pixel pitch: 0.2835x0.2835 mm
- Viewing angle: 170° (H) / 160° (V), @ C/R > 10
- Display colors: 16.7 M
- Scanning Frequency: 30 -83 kHz (H) / 56 -75 Hz (V)
- sRGB

## Connectivity

- Signal Input: VGA (Analog), DVI-D (digital, HDCP)
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): PC audio-in

## Convenience

- Built-in Audio: 1.5Wx2
- User convenience: Volume/Up, Brightness/Back, Menu/OK, Auto/Down, Power On/Off
- OSD Languages: English, French, German, Spanish, Italian, Russian, Simplified Chinese, Portuguese, Turkish
- Other convenience: Kensington lock, VESA mount (100x100mm)
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 7

## Stand

- Tilt: -5/+20 degree

## Power

- On mode: 18.18 W (EnergyStar 5.0 test method)
- Standby mode: 0.5 W
- Off mode: 0.5 W
- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Power supply: Built-in, 100-240VAC, 50/60Hz

## Dimensions

- Product with stand (mm): 462 x 382 x 204 mm
- Product without stand (mm): 462 x 319 x 54 mm
- Packaging in mm (WxHxD): 503 x 396 x 125 mm

## Weight

- Product with stand (kg): 3.57 kg
- Product without stand (kg): 3.28 kg
- Product with packaging (kg): 4.68 kg

## Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- Temperature range (storage): -20°C to 60°C °C
- Relative humidity: 20%-80 %
- MTBF: 50,000 hour(s)

## Sustainability

- Environmental and energy: EnergyStar 5.0, EPEAT Silver, RoHS
- Recyclable packaging material: 100 %

## Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC Class B, GOST, PSB, SASO, SEMKO, TUV Ergo, TUV/GS, UL/cUL, WEEE

## Cabinet

- Color: Black
- Finish: Glossy (front bezel) /Texture (rear cover)

## Built-in speakers

A pair of stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.

## SmartContrast ratio 10000000:1



You want the LCD flat display with the highest contrast and most vibrant images. Philips advanced video processing combined with unique extreme dimming and backlight boosting technology results in vibrant images. SmartContrast will increase the contrast with excellent blacklevel and accurate rendition of dark shades and colors. It gives a bright, lifelike picture with high contrast and vibrant colors.

## SmartControl Lite

SmartControl Lite is the next generation 3D icon based GUI monitor control software. This allows user to fine-tune most parameters of the monitor like Color, Brightness, screen calibration, Multimedia, ID management, etc with the mouse.

## Energy Star 5.0

Energy Star is a US EPA sponsored energy efficiency program also adopted by many other countries. Energy Star certification ensures that you are buying a product which meets the latest power efficiency standards which operates with maximum power efficiency at all operational levels. New Philips monitors are certified for Energy Star 5.0 specifications and meet or exceed the standard. For example, in sleep mode Energy Star 5.0 requires less than 1 watt power consumption, whereas Philips monitors consume less than 0.5watts. Further details can be obtained from [www.energystar.gov](http://www.energystar.gov)



Issue date 2022-04-21

Version: 1.0.1

12 NC: 8670 000 86909  
EAN: 87 12581 63399 8

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)