BDL5588XH V2.01



www.philips.com/welcome User Manual (English)



Safety Instructions

Safety precautions and maintenance



WARNING: Use of controls, adjustments or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards and/or mechanical hazards.

Read and follow these instructions when connecting and using your display:

Operation:

- Keep the display out of direct sunlight and away from stoves or any other heat sources.
- · Remove any object that could fall into ventilation holes or prevent proper cooling of the display's electronics.
- Do not block the ventilation holes on the cabinet.
- When positioning the display, make sure the power plug and outlet are easily accessible.
- When turning off the display by detaching the power cord, wait 6 seconds before re-attaching the power cord for normal operation.
- Ensure the use of an approved power cord provided by Philips at all times. If your power cord is missing, please contact your local service center.
- Do not subject the display to severe vibration or high impact conditions during operation.
- Do not knock or drop the display during operation or transportation.

Maintenance:

- To protect your display from possible damage, do not put excessive pressure on the LCD panel. When moving your display, grasp the frame to lift; do not lift the display by placing your hand or fingers on the LCD panel.
- Unplug the display if you are not going to use it for an extensive period of time.
- Unplug the display if you need to clean it with a slightly damp cloth. The screen may be wiped with a dry cloth when the power is off. However, never use organic solvent, such as, alcohol, or ammonia-based liquids to clean your display.
- To avoid the risk of shock or permanent damage to the set, do not expose the display to dust, rain, water or an excessively moist environment.
- If your display becomes wet, wipe it with dry cloth as soon as possible.
- If a foreign substance or water gets in your display, turn the power off immediately and disconnect the power cord. Then remove the foreign substance or water, and send the unit to the maintenance center.
- Do not store or use the display in locations exposed to heat, direct sunlight or extreme cold.
- In order to maintain the best performance of your display and ensure a longer lifetime, we strongly recommend using the display in a location that falls within the following temperature and humidity ranges.
 - Temperature: 0-40°C 32-104°F
 - Humidity: 20-80% RH

IMPORTANT: Always activate a moving screen saver program when you leave your display unattended. Always activate a periodic screen refresh application if the unit will display unchanging static content. Uninterrupted display of still or static images over an extended period may cause "burn in", also known as "after-imaging" or "ghost imaging", on your screen. This is a well-known phenomenon in LCD panel technology. In most cases, the "burned in" or "after-imaging" or "ghost imaging" will disappear gradually over a period of time after the power has been switched off.

WARNING: Severe "burn-in" or "after-image" or "ghost image" symptoms will not disappear and cannot be repaired. This is also not covered under the terms of your warranty.

Service:

- The casing cover should be opened only by qualified service personnel.
- If there is any need for repair or integration, please contact your local service center.
- Do not leave your display under direct sunlight.



If your display does not operate normally, having followed the instructions set out in this document, please contact a technician or your local service center.

Read and follow these instructions when connecting and using your display:

- Unplug the display if you are not going to use it for an extensive period of time.
- Unplug the display if you need to clean it with a slightly damp cloth. The screen many be wiped with a dry cloth when the power is off. However, never use alcohol, solvents or ammonia-based liquids.
- Consult a service technician if the display does not operate normally when you have followed the instructions in this manual.
- The casing cover should be opened only by qualified service personnel.
- Keep the display out of direct sunlight and away from stoves or any other heat sources.
- Remove any object that could fall into the vents or prevent proper cooling of the display's electronics.
- Do not block the ventilation holes on the cabinet.
- Keep the display dry. To avoid electric shock, do not expose it to rain or excessive moisture.
- When turning off the display by detaching the power cable or DC power cord, wait for 6 seconds before re-attaching the power cable or DC power cord for normal operation..
- To avoid the risk of shock or permanent damage to the set do not expose the display to rain or excessive moisture.
- When positioning the display, make sure the power plug and outlet are easily accessible.
- IMPORTANT: Always activate a screen saver program during your application. If a still image in high contrast remains on the screen for an extended period of time, it may leave an 'after-image' or 'ghost image' on the front of the screen. This is a well-known phenomenon that is caused by the shortcomings inherent in LCD technology. In most cases the afterimage will disappear gradually over a period of time after the power has been switched off. Be aware that the after-image symptom cannot be repaired and is not covered under warranty.

CE Declaration of Conformity

This device complies with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (2014/30/EU), Low-voltage Directive (2014/35/EU) and RoHS directive (2011/65/EU).

This product has been tested and found to comply with the harmonized standards for Information Technology Equipment, these harmonized standards published under Directives of Official Journal of the European Union.

Warning:

This equipment is compliant with Class A of EN55032/CISPR 32. In a residential environment this equipment may cause radio interference.

Federal Communications Commission (FCC) Notice (U.S. Only)



NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Use only an RF shielded cable that was supplied with the display when connecting this display to a computer device.

To prevent damage which may result in fire or shock hazard, do not expose this appliance to rain or excessive moisture.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Envision Peripherals Inc. 47409 Seabridge Drive Fremont, CA 94538 Tel. 510-770-9988

Polish Center for Testing and Certification Notice

The equipment should draw power from a socket with an attached protection circuit (a three-prong socket). All equipment that works together (computer, display, printer, and so on) should have the same power supply source.

The phasing conductor of the room's electrical installation should have a reserve short-circuit protection device in the form of a fuse with a nominal value no larger than 16 amperes (A).

To completely switch off the equipment, the power supply cable must be removed from the power supply socket, which should be located near the equipment and easily accessible.

A protection mark "B" confirms that the equipment is in compliance with the protection usage requirements of standards PN-93/T-42107 and PN-89/ E-06251.

Wymagania Polskiego Centrum Badań i Certyfikacji

Urządzenie powinno być zasilane z gniazda z przyłączonym obwodem ochronnym (gniazdo z kołkiem). Współpracujące ze sobą urządzenia (komputer, monitor, drukarka) powinny być zasilane z tego samego źródła.

Instalacja elektryczna pomieszczenia powinna zawierać w przewodzie fazowym rezerwową ochronę przed zwarciami, w postaci bezpiecznika o wartości znamionowej nie większej niż 16A (amperów).

W celu całkowitego wyłączenia urządzenia z sieci zasilania, należy wyjąć wtyczkę kabla zasilającego z gniazdka, które powinno znajdować się w pobliżu urządzenia i być łatwo dostępne.

Znak bezpieczeństwa "B" potwierdza zgodność urządzenia z wymaganiami bezpieczeństwa użytkowania zawartymi w PN-93/T-42107 i PN-89/E-06251.


Pozostałe instrukcje bezpieczeństwa

- Nie należy używać wtyczek adapterowych lub usuwać kołka obwodu ochronnego z wtyczki. Jeżeli konieczne jest użycie przedłużacza to należy użyć przedłużacza 3-żyłowego z prawidłowo połączonym przewodem ochronnym.
- System komputerowy należy zabezpieczyć przed nagłymi, chwilowymi wzrostami lub spadkami napięcia, używając eliminatora przepięć, urządzenia dopasowującego lub bezzakłóceniowego źródła zasilania.
- Należy upewnić się, aby nic nie leżało na kablach systemu komputerowego, oraz aby kable nie były umieszczone w miejscu, gdzie można byłoby na nie nadeptywać lub potykać się o nie.
- Nie należy rozlewać napojów ani innych płynów na system komputerowy.
- Nie należy wpychać żadnych przedmiotów do otworów systemu komputerowego, gdyż może to spowodować pożar lub porażenie prądem, poprzez zwarcie elementów wewnętrznych.
- System komputerowy powinien znajdować się z dala od grzejników i źródeł ciepła. Ponadto, nie należy blokować otworów wentylacyjnych. Należy unikać kładzenia lużnych papierów pod komputer oraz umieszczania komputera w ciasnym miejscu bez możliwości cyrkulacji powietrza wokół niego.

Electric, Magnetic and Electromagnetic Fields ("EMF")

- 1. We manufacture and sell many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.
- 2. One of our leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.
- 3. We are committed to develop, produce and market products that cause no adverse health effects.
- 4. We confirm that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.
- 5. We play an active role in the development of international EMF and safety standards, enabling us to anticipate further developments in standardization for early integration in its products.

Information for U.K. only

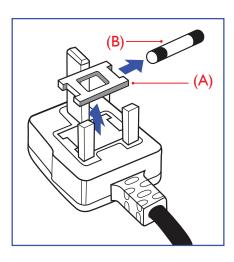

WARNING - THIS APPLIANCE MUST BE EARTHED.

Important:

This apparatus is supplied with an approved moulded 13A plug. To change a fuse in this type of plug proceed as follows:+

- 1. Remove fuse cover and fuse.
- 2. Fit new fuse which should be a BS 1362 5A,A.S.T.A. or BSI approved type.
- 3. Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate 3-pin plug fitted in its place.

If the mains plug contains a fuse, this should have a value of 5A. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5A.

NOTE: The severed plug must be destroyed to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere.

How to connect a plug

The wires in the mains lead are coloured in accordance with the following code:

BLUE - "NEUTRAL" ("N") BROWN - "LIVE" ("L")

GREEN & YELLOW - "EARTH" ("E")

- 1. The GREEN & YELLOW wire must be connected to the terminal in the plug which is marked with the letter "E" or by the Earth symbol or coloured GREEN or GREEN & YELLOW.
- 2. The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
- 3. The BROWN wire must be connected to the terminal which marked with the letter "L" or coloured RED.

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the three wires.

North Europe (Nordic Countries) Information

Placering/Ventilation

VARNING:

FÖRSÄKRA DIG OM ATT HUVUDBRYTARE OCH UTTAG ÄR LÄTÅTKOMLIGA, NÄR DU STÄLLER DIN UTRUSTNING PÅPLATS.

Placering/Ventilation

ADVARSEL:

SØRG VED PLACERINGEN FOR, AT NETLEDNINGENS STIK OG STIKKONTAKT ER NEMT TILGÆNGELIGE.

Paikka/Ilmankierto

VAROITUS:

SIJOITA LAITE SITEN, ETTÄ VERKKOJOHTO VOIDAAN TARVITTAESSA HELPOSTI IRROTTAA PISTORASIASTA.

Plassering/Ventilasjon

ADVARSEL:

NÅR DETTE UTSTYRET PLASSERES, MÅ DU PASSE PÅ AT KONTAKTENE FOR STØMTILFØRSEL ER LETTE Å NÅ.

中国大陆RoHS

根据中国大陆《电子电气产品有害物质限制使用标识要求》,以下部分列出了产品中可能包含的有害物质的名称和含量。

产品中有害物质的名称及含量

零部件名称		有害物质					
		铅(Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
塑胶外壳		0	0	0	0	0	0
后	后壳		0	0	0	0	0
	CCFL	×	×	0	0	0	0
LCD panel	LED	×	0	0	0	0	0
电路板组件		×	0	0	0	0	0
底座		0	0	0	0	0	0
电源线		×	0	0	0	0	0
其它线材		×	0	0	0	0	0
遥控器		×	0	0	0	0	0
*: 电路板组件包括印刷电路板及其构成的零部件, 如电阻、电容、集成电路、连接器等。							
本表格依据SJ/T 11364的规定标志。 O: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572规定的限量要求以下。							
	有害物质至少 RoHS法规要:			料中的含量;	超出 GB/T26572	规定的限量要	要求,但是符

备注: 上表仅做为范例,实际标示时应依照各产品的实际部件及所含有害物质进行标示。



此标识指期限(十年),电子信息产品中含有的有害物质在正常使用的条件下不会发生外泄或突变, 电子信息产品用户使用该电子信息产品不会对环境造成严重污染或对其人身、财产造成严重损害的期限。

《废弃电器电子产品回收处理管理条例》提示性说明

为了更好地关爱及保护地球,当用户不再需要此产品或产品寿命终止时,请遵守国家废弃电器电子产品回收处理相关法律法规,将其交给当地具有国家认可的回收处理资质的厂商进行回收处理。

警告

此为A级产品。在生活环境中,该产品可能会造成无线电干扰。在这种情况下,可能需要用户 对干扰采取切实可行的措施。

	限用物質及其化學符號						
單元	鉛	汞	鎘	六價鉻	多溴聯苯	多溴二苯醚	
	(Pb)	(Hg)	(Cd)	(Cr^{+6})	(PBB)	(PBDE)	
塑料外框	\bigcirc	\bigcirc	\bigcirc	\bigcirc	\bigcirc	\bigcirc	
後殼	\bigcirc	\bigcirc	\bigcirc	\bigcirc	\bigcirc	\bigcirc	
液晶面板	—	\bigcirc	\bigcirc	\bigcirc	\bigcirc	\bigcirc	
電路板組件	—	\bigcirc	\bigcirc	\bigcirc	\bigcirc	\bigcirc	
底座	\bigcirc	\bigcirc	\bigcirc	\bigcirc	\bigcirc	\bigcirc	
電源線	—	\bigcirc	\bigcirc	\bigcirc	\bigcirc	\bigcirc	
其他線材	—	\bigcirc	\bigcirc	\bigcirc	\bigcirc	\bigcirc	
遙控器		\bigcirc	\bigcirc	\bigcirc	\bigcirc	0	
備考1. "○" 係指該項限用物質之百分比含量未超出百分比含量基準值。							
備考2. ~-"	係指該項鬥	限用物質為排	除項目。				

警語: 使用過度恐傷害視力。

注意事項:

- (1) 使用30分鐘請休息10分鐘。
- (2) 未滿2歲幼兒不看螢幕,2歲以上每天看螢幕不要超過1小時。

警告使用者:

此為甲類資訊技術設備,於居住環境中使用時,可能會造成射頻擾動,在此種情況下,使用者會被 要求採取某些適當的對策。

Turkey RoHS:

Türkiye Cumhuriyeti: EEE Yönetmeliğine Uygundur.

Ukraine RoHS:

Обладнання відповідає вимогам Технічного регламенту щодо обмеження використання деяких небезпечних речовин в електричному та електронному обладнанні, затвердженого постановою Кабінету Міністрів України від 3 грудня 2008 № 1057.

End-of-Life Disposal

Your new Public Information Display contains materials that can be recycled and reused. Specialized companies can recycle your product to increase the amount of reusable materials and to minimize the amount to be disposed of.

Please find out about the local regulations on how to dispose of your old display from your local Philips dealer.

(For customers in Canada and U.S.A.)

This product may contain lead and/or mercury. Dispose of in accordance to local-state and federal regulations. For additional information on recycling contact www.eia.org (Consumer Education Initiative)

Waste Electrical and Electronic Equipment-WEEE

Attention users in European Union private households



This marking on the product or on its packaging illustrates that, under European Directive 2012/19/EU governing used electrical and electronic appliances, this product may not be disposed of with normal household waste. You are responsible for disposal of this equipment through a designated waste electrical and electronic equipment collection. To determine the locations for dropping off such waste electrical and electronic, contact your local government office, the waste disposal organization that serves your household or the store at which you purchased the product.

Attention users in United States:

Please dispose of according to all Local, State and Federal Laws. For the disposal or recycling information, contact: www.mygreenelectronics.com or www. eiae.org.

End of Life Directives-Recycling



Your new Public Information Display contains several materials that can be recycled for new users.

Please dispose of according to all Local, State, and Federal laws.

Restriction on Hazardous Substances statement (India)

This product complies with the "E-Waste (Management) Rules, 2016" CHAPTERV, rule 16, sub-rule (1) .Whereas New Electrical and Electronic Equipment and their components or consumables or parts or spares do not contain Lead, Mercury, Cadmium, Hexavalent Chromium, polybrominated biphenyls and polybrominated diphenyl ethers beyond a maximum concentration value of 0.1% by weight in homogenous materials for lead, mercury, hexavalent chromium, polybrominated biphenyls and polybrominated diphenyl ethers and of 0.01% by weight in homogenous materials for cadmium. except of exemptions set in Schedule 2 of the Rule.

E-Waste Declaration for India



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment .The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about E -waste please visit <u>http://www.india.philips.com/about/sustainability/recycling/index.page</u> and to know where you can drop off your waste equipment for recycling in India please contact on below given contact details.

Helpline number: 1800-425-6396 (Monday to Saturday, 9 a.m. to 5:30 pm)

Centralized E-waste collection center Address: TPV Technology India Private Limited,

59, Maheswari Nagar, 1st Main Road, Mahadevapura Post, Whitefield Road

Bangalore, Karnataka, PIN: 560048,Tel: 080-3023-1000

E-mail: india.callcentre@tpv-tech.com

Batteries



For EU: The crossed-out wheeled bin implies that used batteries should not be put to the general household waste! There is a separate collection system for used batteries, to allow proper treatment and recycling in accordance with legislation.

Please contact your local authority for details on the collection and recycling schemes.

For Switzerland: The used battery is to be returned to the selling point.

For other non-EU countries: Please contact your local authority for correct method of disposal of the used battery.

According to EU directive 2006/66/EC, the battery can't be disposed improperly. The battery shall be separated to collect by local service.



Após o uso, as pilhas e/ou baterias deverão ser entregues ao estabelecimento comercial ou rede de assistência técnica autorizada.

Information for EAC	ERC
Month and year of manufacturing	please refer information in Rating label.
Name and location of manufacturer	ООО "Профтехника" Адрес: 3-й Проезд Марьиной рощи, 40/1 офис 1. Москва, 127018, Россия
Importer and information	Наименование организации: ООО "Профтехника" Адрес: 3-й Проезд Марьиной рощи, 40/1 офис 1. Москва, 127018, Россия Контактное лицо: Наталья Астафьева, +7 495 640 20 20 nat@profdisplays.ru

Table Of Contents

1.	Unpa	cking and	d Installation	1		
	1.1.	Unpack	king	1		
	1.2.	Package Contents				
	1.3.	Installation Notes1				
	1.4.	Installing and Removing Table Stands (optional)2				
	1.5.	Mounti	ing on a Wall	3		
		1.5.1.	VESA Grid	3		
	1.6.	Mounti	ing in Portrait Position	4		
	1.7.	Operat	ting Instructions of Edge Alignment Kit	5		
		1.7.1.	Installing Edge Alignment Kit	5		
	1.8.	Using c	of Edge Finishing Kit (Optional)	6		
		1.8.1.	Installing Edge Finishing Kit	6		
2.	Parts	and Fun	ctions	7		
	2.1.		ol Panel			
	2.2.		Dutput Terminals			
	2.3.		e Control			
	2.5.	2.3.1.	General functions			
		2.3.2.	ID Remote Control			
		2.3.3.	Inserting the batteries in the remote			
		2.3.3.	control	11		
		2.3.4.	Handling the remote control	11		
		2.3.5.	Operating range of the remote contro	ol11		
3	Conn	octing E	vtornal Equipment	12		
3.			xternal Equipment	12		
3.	Conn 3.1.	Conne	cting External Equipment (DVD/VCR/			
3.		Conne	cting External Equipment (DVD/VCR/	12		
3.		Conne VCD).	cting External Equipment (DVD/VCR/ Using COMPONENT video input	12 12		
3.		Conne VCD). 3.1.1.	cting External Equipment (DVD/VCR/ Using COMPONENT video input Using Video Source input	12 12 12		
3.		Conne VCD). 3.1.1. 3.1.2. 3.1.3.	cting External Equipment (DVD/VCR/ Using COMPONENT video input Using Video Source input Using HDMI video input	12 12 12 13		
3.	3.1.	Conne VCD). 3.1.1. 3.1.2. 3.1.3.	cting External Equipment (DVD/VCR/ Using COMPONENT video input Using Video Source input Using HDMI video input cting a PC	12 12 12 13 13		
3.	3.1.	Conne VCD). 3.1.1. 3.1.2. 3.1.3. Conne	cting External Equipment (DVD/VCR/ Using COMPONENT video input Using Video Source input Using HDMI video input cting a PC Using VGA input	12 12 12 13 13 13		
3.	3.1.	Conne VCD). 3.1.1. 3.1.2. 3.1.3. Conne 3.2.1.	cting External Equipment (DVD/VCR/ Using COMPONENT video input Using Video Source input Using HDMI video input cting a PC Using VGA input	12 12 13 13 13 13		
3.	3.1.	Conne VCD). 3.1.1. 3.1.2. 3.1.3. Conne 3.2.1. 3.2.2.	cting External Equipment (DVD/VCR/ Using COMPONENT video input Using Video Source input Using HDMI video input cting a PC Using VGA input Using DVI input	12 12 13 13 13 13 13 14		
3.	3.1.	Conne VCD). 3.1.1. 3.1.2. 3.1.3. Conne 3.2.1. 3.2.2. 3.2.3. 3.2.4.	cting External Equipment (DVD/VCR/ Using COMPONENT video input Using Video Source input Using HDMI video input cting a PC Using VGA input Using DVI input Using HDMI input Using HDMI input	12 12 13 13 13 13 13 14 14		
3.	3.1.	Conne VCD). 3.1.1. 3.1.2. 3.1.3. Conne 3.2.1. 3.2.2. 3.2.3. 3.2.4.	cting External Equipment (DVD/VCR/ Using COMPONENT video input Using Video Source input Using HDMI video input cting a PC Using VGA input Using DVI input	12 12 13 13 13 13 13 14 14		
3.	3.1.	Conne VCD). 3.1.1. 3.1.2. 3.1.3. Conne 3.2.1. 3.2.2. 3.2.3. 3.2.4. Conne	cting External Equipment (DVD/VCR/ Using COMPONENT video input Using Video Source input Using HDMI video input cting a PC Using VGA input Using DVI input Using HDMI input Using HDMI input Using Audio Equipment	12 12 13 13 13 13 14 14 14 14		
3.	3.1.	Conne VCD). 3.1.1. 3.1.2. 3.1.3. Conne 3.2.1. 3.2.2. 3.2.3. 3.2.4. Conne 3.3.1. 3.3.2.	cting External Equipment (DVD/VCR/ Using COMPONENT video input Using Video Source input Using HDMI video input Using VGA input Using DVI input Using DVI input Using HDMI input Using Audio Equipment Connecting external speakers	12 12 13 13 13 13 14 14 14 14		
3.	3.1.3.2.3.3.	Conne VCD). 3.1.1. 3.1.2. 3.1.3. Conne 3.2.1. 3.2.2. 3.2.3. 3.2.4. Conne 3.3.1. 3.3.2. Conne	cting External Equipment (DVD/VCR/ Using COMPONENT video input Using Video Source input Using HDMI video input Cting a PC Using VGA input Using DVI input Using DVI input Using HDMI input Connecting external speakers Connecting an external audio device	12 12 13 13 13 13 14 14 14 14 14 15		
3.	3.1.3.2.3.3.	Conne VCD). 3.1.1. 3.1.2. 3.1.3. Conne 3.2.1. 3.2.2. 3.2.3. 3.2.4. Conne 3.3.1. 3.3.2. Conne	cting External Equipment (DVD/VCR/ Using COMPONENT video input Using Video Source input Using HDMI video input Cting a PC Using VGA input Using DVI input Using DVI input Using HDMI input Connecting external speakers Connecting an external audio device cting Multiple Displays in a Daisy-chain	12 12 13 13 13 13 14 14 14 14 14 15 16		
3.	3.1.3.2.3.3.	Conne VCD). 3.1.1. 3.1.2. 3.1.3. Conne 3.2.1. 3.2.2. 3.2.4. Conne 3.3.1. 3.3.2. Conne Config	cting External Equipment (DVD/VCR/ Using COMPONENT video input Using Video Source input Using HDMI video input Cting a PC Using VGA input Using DVI input Using DVI input Using DIsplayPort input Connecting external speakers Connecting an external audio device cting Multiple Displays in a Daisy-chain uration	12 12 13 13 13 13 13 14 14 14 14 15 16 16		
3.	3.1.3.2.3.3.	Conne VCD). 3.1.1. 3.1.2. 3.1.3. Conne 3.2.1. 3.2.2. 3.2.3. 3.2.4. Conne 3.3.1. 3.3.2. Conne Config 3.4.1.	cting External Equipment (DVD/VCR/ Using COMPONENT video input Using Video Source input Using HDMI video input Using VGA input Using DVI input Using DVI input Using HDMI input Using DIsplayPort input Connecting external speakers Connecting an external audio device cting Multiple Displays in a Daisy-chain uration Display control connection	12 12 13 13 13 13 14 14 14 14 15 16 16		
3.	3.1.3.2.3.3.	Conne VCD). 3.1.1. 3.1.2. 3.1.3. Conne 3.2.1. 3.2.2. 3.2.3. 3.2.4. Conne 3.3.1. 3.3.2. Conne Config 3.4.1. 3.4.2.	cting External Equipment (DVD/VCR/ Using COMPONENT video input Using Video Source input Using HDMI video input Cting a PC Using VGA input Using DVI input Using DVI input Using DIsplayPort input Connecting external speakers Connecting an external audio device Connecting control connection	12 12 13 13 13 13 13 14 14 14 14 15 16 16 17		
3.	3.1.3.2.3.3.	Conne VCD). 3.1.1. 3.1.2. 3.1.3. Conne 3.2.1. 3.2.2. 3.2.3. 3.2.4. Conne 3.3.1. 3.3.2. Conne Config 3.4.1. 3.4.2. 3.4.3. 3.4.4.	cting External Equipment (DVD/VCR/ Using COMPONENT video input Using Video Source input Using HDMI video input Cting a PC Using VGA input Using DVI input Using DVI input Using HDMI input Connecting external speakers Connecting an external audio device Connecting an external audio device	12 12 13 13 13 13 14 14 14 14 14 15 16 16 17 17		
3.	3.1.3.2.3.3.3.4.	Conne VCD). 3.1.1. 3.1.2. 3.1.3. Conne 3.2.1. 3.2.2. 3.2.3. 3.2.4. Conne 3.3.1. 3.3.2. Conne Config 3.4.1. 3.4.2. 3.4.3. 3.4.4. IR conr	cting External Equipment (DVD/VCR/ Using COMPONENT video input Using Video Source input Using HDMI video input Cting a PC Using VGA input Using DVI input Using DVI input Using DDMI input Connecting external speakers Connecting an external audio device Connecting an external audio device	12 12 13 13 13 13 13 13 14 14 14 14 14 16 16 17 17 17		

4.	Opera	ation		19		
	4.1.	Watch	the Connected Video Source	19		
	4.2.	Change Picture Format				
	4.3.	Play mu	ultimedia files via Local Area Network.	19		
		4.3.1.	Set up the network	19		
		4.3.2.	How to use DLNA-DMP	19		
		4.3.3.	How to use DLNA-DMR from PC			
	4.4.	Play mu	Iltimedia files from USB device			
	4.5.	Play op	tions	21		
		4.5.1.	Playing music files	21		
		4.5.2.	Playing movie files	21		
		4.5.3.	Playing photo files	21		
	4.6.	How to	o use Opera browser (HTML5)	21		
5.	Chang	ge your s	settings			
	5.1.	Setting	5	23		
		5.1.1.	Picture	23		
		5.1.2.	Sound			
		5.1.3.	Tiling	24		
		5.1.4.	Network	26		
		5.1.5.	General settings			
6.	USB c	levice co	ompatibility	30		
7.	Input	Mode		32		
8.	Pixel I	Defect P	olicy			
	8.1.		nd Sub-Pixels			
	8.2.		of Pixel Defects + Dot Definition			
	8.3.	<i>,</i> ,	Dot Defects			
	8.4.	0	ot Defects			
	8.5.	Proxim	ity of Pixel Defects			
	8.6.	Pixel D	efect Tolerances			
	8.7.					
9.	Clean	ing and T	Froubleshooting	35		
	9.1.	Cleanir	ıg			
	9.2.	Trouble	eshooting			
10.	Techn	ical Spec	cifications	38		

1. Unpacking and Installation


1.1. Unpacking

- This product is packed in a carton, together with the standard accessories.
- Any other optional accessories will be packed separately.
- Due to the size and weight of this display it is recommended for two people to move it.
- After opening the carton, ensure that the contents are complete and in good condition.

1.2. Package Contents

Please verify that you received the following items with your package content:

- LCD display
- Remote control with AAA batteries
- Power cord
- VGA cable
- RS232 cable
- Daisy chain cable
- IR sensor cable
- IR cable
- Quick start guide
- Edge Alignment Kit-1: 1PC
- Edge Alignment Kit-2: 2PCS
- Thumb Screw: 8PCS
- Edge Alignment Pin: 2PCS

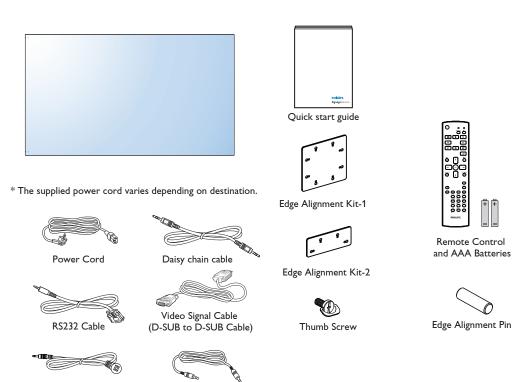

* Differences according to regions

IR Sensor Cable

Display design and accessories may differ from those illustrated above.

IR Cable

NOTES:

- For all other regions, apply a power cord that conforms to the AC voltage of the power socket and has been approved by and complies with the safety regulations of the particular country.
- You might like to save the package box and packing material for shipping the display.


1.3. Installation Notes

- Due to the high power consumption, always use the plug exclusively designed for this product. If an extended line is required, please consult your service agent.
- The product should be installed on a flat surface to avoid tipping. The distance between the back of the product and the wall should be maintained for proper ventilation. Avoid installing the product in the kitchen, bathroom or any other places with high humidity so as not to shorten the service life of the electronic components.
- The product can normally operate only under 3000m in altitude. In installations at altitudes above 3000m, some abnormalities may be experienced.

1.4. Installing and Removing Table Stands (optional)

To install table stands:

- 1. Ensure your display is powered off.
- 2. Spread a protective sheet on a flat surface.
- 3. Grab the carrying handles and place the display face-down on the protective sheet.
- 4. After inserting the stand in the guide block, tighten the screws on both sides of the display.
- NOTE: The longer side of the stand should face the front of the display.

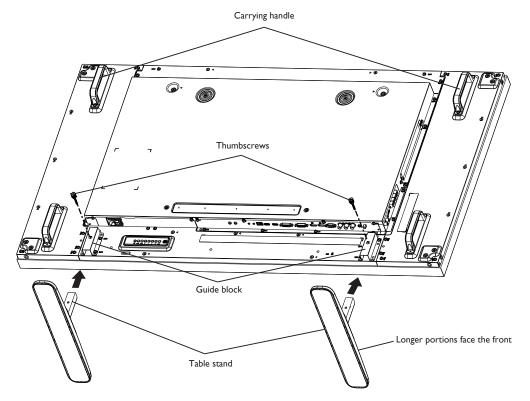


To remove table stands:

- 1. Power off the display.
- 2. Spread a protective sheet on a flat surface.
- 3. Grab the carrying handles and place the display face-down on the protective sheet.
- 4. Remove screws using a screwdriver and place them in a safe place for reuse.

1.5. Mounting on a Wall

To mount this display to a wall, you will have to obtain a standard wall-mounting kit (commercially available). We recommend using a mounting interface that complies with TUV-GS and/or UL1678 standard in North America.

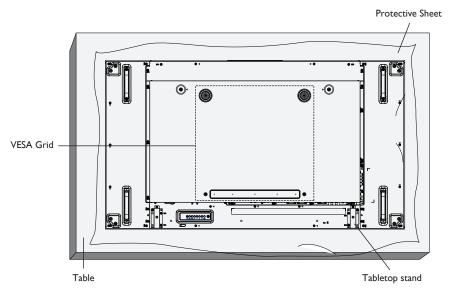

- 1. Lay a protective sheet on a table, which was wrapped around the display when it was packaged, beneath the screen surface so as not to scratch the screen face.
- 2. Ensure you have all accessories for mounting this display (wall mount, ceiling mount, table stand, etc).
- 3. Follow the instructions that come with the base mounting kit. Failure to follow correct mounting procedures could result in damage to the equipment or injury to the user or installer. Product warranty does not cover damage caused by improper installation.
- 4. For the wall-mounting kit, use M6 mounting screws (having a length 10 mm longer than the thickness of the mounting bracket) and tighten them securely.
- 5. Unit without base weight= 29.2 kg. The equipment and its associated mounting means still remain secure during the test. For use only with UL Listed Wall Mount Bracket with minimum weight/load: 29.2 kg.

1.5.1. VESA Grid

BDL5588XH	400(H) × 400(V) mm


Caution:

To prevent the display from falling:

- For wall or ceiling installation, we recommend installing the display with metal brackets which are commercially available. For detailed installation instructions, refer to the guide received with the respective bracket.
- To lessen the probability of injury and damage resulting from fall of the display in case of earthquake or other natural disaster, be sure to consult the bracket manufacturer for installation location.


Ventilation Requirements for enclosure locating

To allow heat to disperse, leave space between surrounding objects as shown in the diagram below.

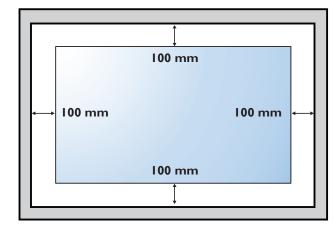

1.6. Mounting in Portrait Position


- This display can be installed in portrait position.
- 1. Remove the table stand, if attached.
- 2. Rotate 90 degrees anticlockwise. The "PHILIPS" logo should be bristling when facing the display at the back.

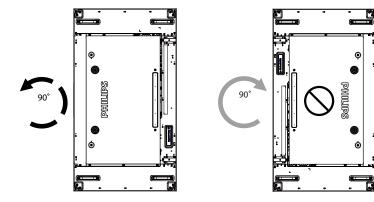


1.7. Operating Instructions of Edge Alignment Kit

1.7.1. Installing Edge Alignment Kit

- Before install edge alignment kit, displays must be mounted to video wall frame correctly.
- Using "Thumb Screw" for easy installing.
- Using "Edge Alignment Kit-1" on adjacent four displays.

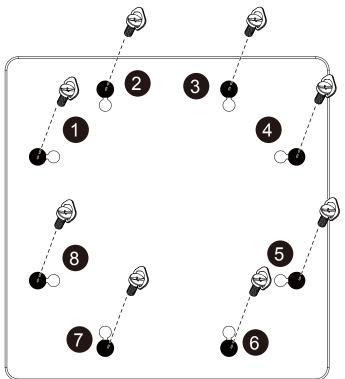

- Using "Edge Alignment Kit-2" on adjacent two displays.
- Install the "Edge Alignment Kit-2" with 2 PCS of M4 screw.

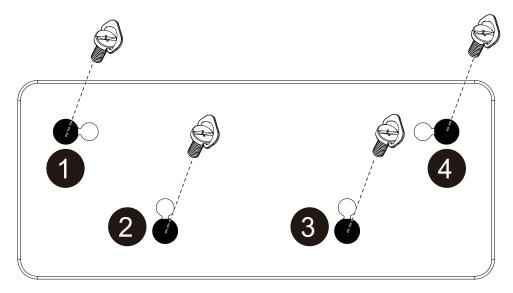


NOTE: When installing the edge alignment kit, please consult a professional technician for proper installation. We accept no liability for installations not performed by a professional technician.

1.8. Using of Edge Finishing Kit (Optional)

You could use the edge finishing kit to protect the display and have a better appearance.

1.8.1. Installing Edge Finishing Kit




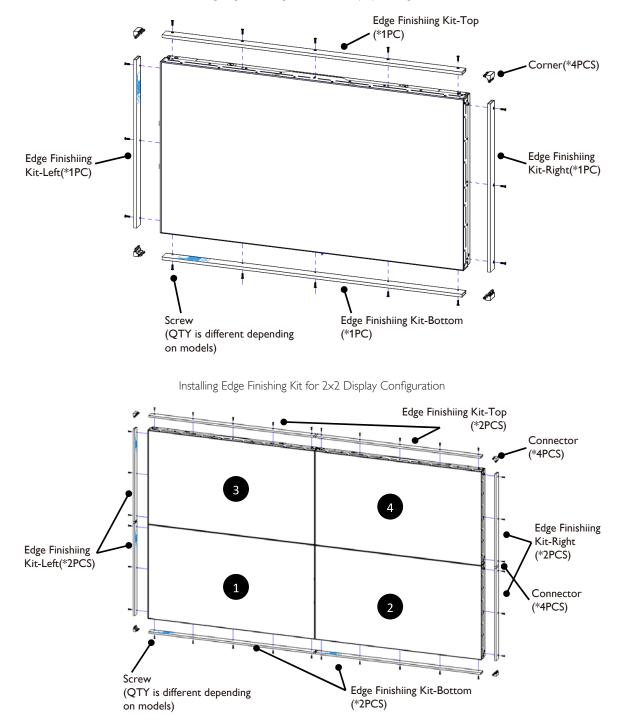

* For more detail information, please check the instruction guide in the package of kit.

2. Parts and Functions

2.1. Control Panel

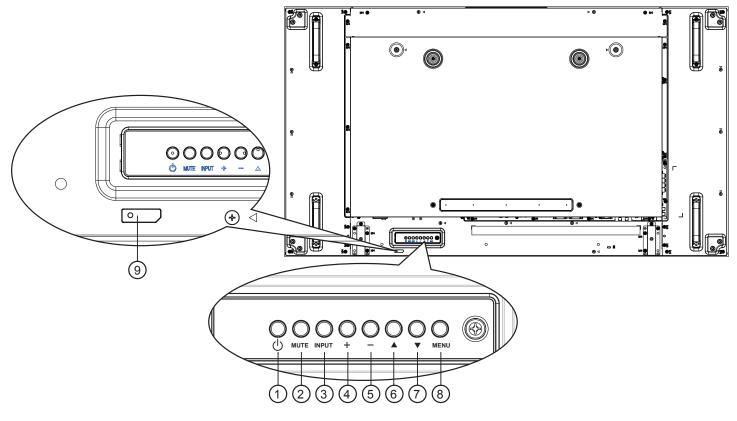

() [()] button

Use this button to turn the display on or put the display to standby.

2 [MUTE] button

Switch the audio mute ON/OFF.

③ [INPUT] button

- Choose the input source.
- Used as [OK] button in the On-Screen-Display menu.

④ **[+]** button

Increase the adjustment while OSD menu is on, or increase the audio output level while OSD menu is off.

(5) [—] button

Decrease the adjustment while OSD menu is on, or decrease the audio output level while OSD menu is off.

6 [A] button

Move the highlight bar up to adjust the selected item while OSD menu is on.

⑦ [▼] button

Move the highlight bar down to adjust the selected item while OSD menu is on.


(8) [MENU] button

Return to previous menu while OSD menu is on, or to activate the OSD menu when OSD menu is off.

(9) Remote control sensor and power status indicator

- Receives command signals from the remote control.
 - Indicates the operating status of the display without OPS:
 - Lights green when the display is turned on
 - Lights red when the display is in standby mode
 - Lights amber when the display enters APM mode
 - When {SCHEDULE} is enabled, the light blinks green and red
 - If the light blinks red, it indicates that a failure has been detected
 - Lights off when the main power of the display is turned off

2.2. Input/Output Terminals

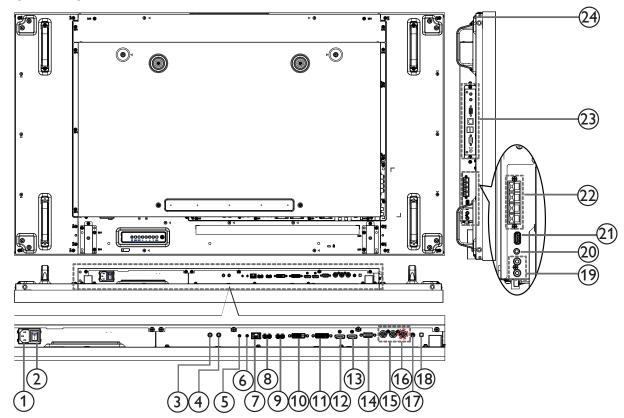

(1) AC IN

AC power input from the wall outlet.

② MAIN POWER SWITCH

Switch the main power on/off.

(3) IR IN / (4) IR OUT

IR signal input / output for the loop-through function.

NOTES:

- This display's remote control sensor will stop working if the jack [IR IN] is connected.
- To remotely control your A/V device via this display, refer to page 18 for **IR Pass Through** connection.

(5) RS232C IN / (6) RS232C OUT

RS232C network input / output for the loop-through function.

⑦ **RJ-45**

LAN control function for the use of remote control signal from control center:

8 HDMI1 IN / 9 HDMI2 IN

HDMI video/audio input.

10 DVI IN

DVI-D video input.

1 DVI OUT / VGA OUT

DVI or VGA video output.

(2) **DisplayPort IN /** (3) **DisplayPort OUT** DisplayPort video input / output.

(4) VGA IN (D-Sub)

VGA video input.

(5) COMPONENT IN (BNC)

Component YPbPr video source input.

- (16) Y/CVBS Video source input.
- (7) PC LINE IN Audio input for VGA source (3.5mm stereo phone).
- (18) SPEAKER SWITCH Internal speaker on/off switch.

(19) AUDIO IN

Audio input from external AV device (RCA).

20 AUDIO OUT

Audio output to external AV device.

21 USB PORT

Connect your USB storage device.

22 SPEAKERS OUT

Audio output to external speakers.

23 OPS SLOT

Slot for installing the optional OPS module.


NOTES: We recommend to use Advantech ARK DS262 or Winmate OMIS-OPS modules. We'll not guarantee other OPS modules.

24 SECURITY LOCK

Used for security and theft prevention.

2.3. Remote Control

2.3.1. General functions

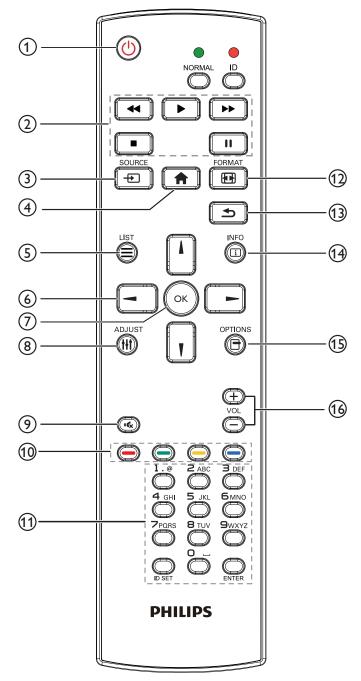

(1) [U] POWER button

Turn the display on or put the display to standby.

2 [PLAY] buttons

Control playback of media files.

③ [----] SOURCE button

Choose input source. Press [-] or [-] button to choose from USB, Network, Internet, SmartCMS, HDMI 1, HDMI 2, DisplayPort, Card OPS, DVI-D, YPbPr, AV, or VGA. Press [OK] button to confirm and exit.

(4) [**†**] HOME button

Access the OSD menu.

5 [] LIST button

No function.

6 [] [] [-] NAVIGATION buttons

Navigate through menus and choose items.

⑦ [OK] button

Confirm an entry or selection.

⑧ [**††]** ADJUST button

Access currently available options, picture and sound menus.

() [IC: MUTE button

Press to turn the mute function on/off.

(1) [-----] [-----] COLOR buttons

Choose tasks or options.

(1) [Number/ ID SET/ ENTER] button

Enter text for network setting. Press to set the display ID. Refer to **2.3.2. ID Remote Control**

12 [FF] FORMAT button

Change picture format.

for more detail.

(13 [**__**] BACK button

Return to the previous menu page or exit from the previous function.

(4 [i] INFO button

Display information about current activity.

(5) [-] OPTIONS button


Access currently available options, picture and sound menus.

16 [—] [+] VOLUME button

Adjust volume.

2.3.2. ID Remote Control

You can set the remote control ID when you want to use this remote control on one of several different displays.

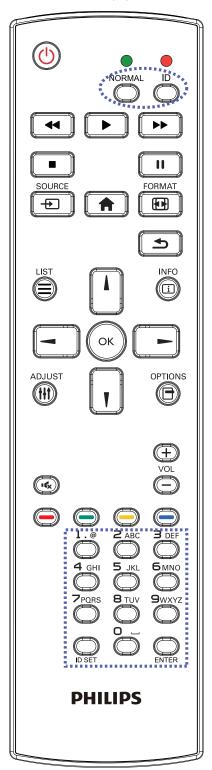

Press [ID] button. The red LED blinks twice.

 Press [ID SET] button for more than 1 second to enter the ID Mode. The red LED lights up.
 Press the [ID SET] button again will exit the ID Mode. The red LED

lights off.

Press the digit numbers $[\mathbf{0}] \sim [\mathbf{9}]$ to select the display you want to control.

For example: press [0] and [1] for display No.1, press [1] and [1] for display No.11.

The numbers available are from $[01] \sim [255]$.

- 2. Not pressing any button within 10 seconds will exit the ID Mode.
- 3. If an error pressing of buttons other than the digits occured, wait 1 second after the red LED lights off and then lights up again, then press the correct digits again.
- 4. Press [**ENTER**] button to confirm. The red LED blinks twice and then lights off.

NOTE:

- Press [NORMAL] button. The green LED blinks twice, indicating the display is in normal operation.
- It is necessary to set up the ID number for each display before selecting its ID number.

2.3.3. Inserting the batteries in the remote control

The remote control is powered by two 1.5V AAA batteries.

To install or replace batteries:

- 1. Press and then slide the cover to open it.
- 2. Align the batteries according to the (+) and (-) indications inside the battery compartment.
- 3. Replace the cover.

Caution:

The incorrect use of batteries can result in leaks or bursting. Be sure to follow these instructions:

- Place "AAA" batteries matching the (+) and (-) signs on each battery to the (+) and (-) signs of the battery compartment.
- Do not mix battery types.
- Do not combine new batteries with used ones. It causes shorter life or leakage of batteries.
- Remove the dead batteries immediately to prevent them from liquid leaking in the battery compartment. Don't touch exposed battery acid, as it can damage your skin.

NOTE: If you do not intend to use the remote control for a long period, remove the batteries.

2.3.4. Handling the remote control

- Do not subject to strong shock.
- Do not allow water or other liquid to splash the remote control. If the remote control gets wet, wipe it dry immediately.
- Avoid exposure to heat and steam.
- Other than to install the batteries, do not open the remote control.


2.3.5. Operating range of the remote control


Point the top of the remote control toward the display's remote control sensor(back side) when pressing a button.

Use the remote control within the range which is shown in the following table.

Operation Angle	RC operational distance
$\theta = 0^{\circ} \text{ (for H \& V)}$	≥ 8m
θ = 20° (for H & V)	≥ 5m
θ = 45° (for H only)	≥2m

NOTE: The remote control may not function properly when the remote control sensor on the display is under direct sunlight or strong illumination, or when there is an obstacle in the path of signal transmission.

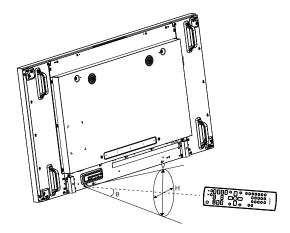


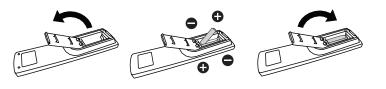


3. Connecting External Equipment

3.1. Connecting External Equipment (DVD/VCR/VCD)


3.1.1. Using COMPONENT video input

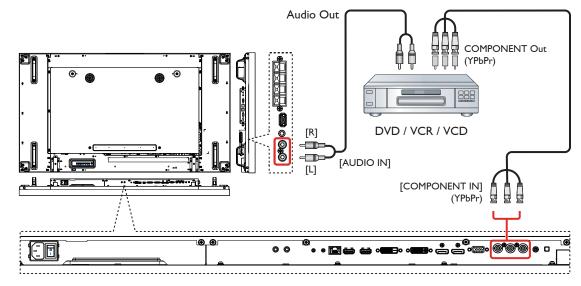

3.1.2. Using Video Source input

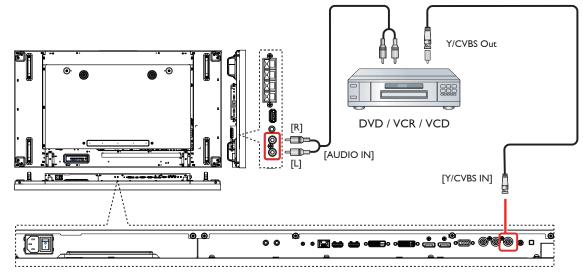


3.1.3. Using HDMI video input

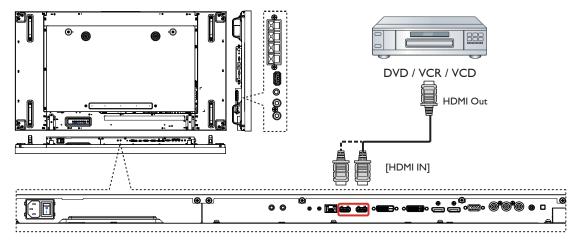


3.2. Connecting a PC


3.2.1. Using VGA input

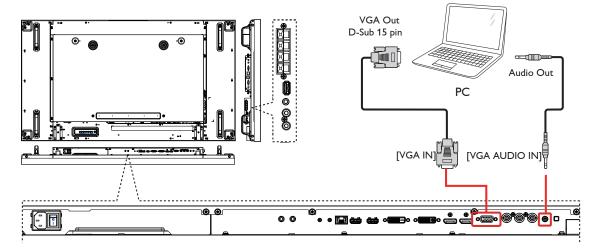


3.2.2. Using DVI input

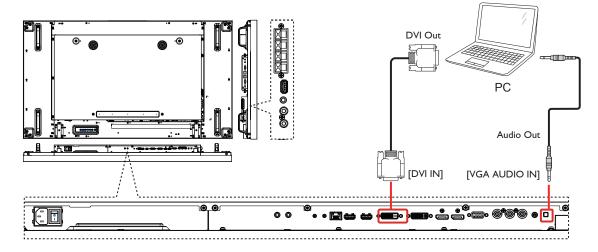

3.2.3. Using HDMI input

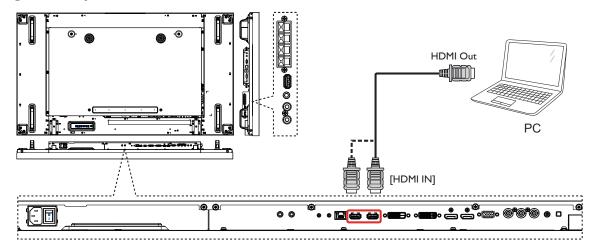



3.2.4. Using DisplayPort input

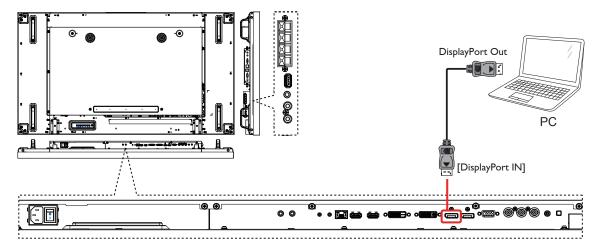


3.3. Connecting Audio Equipment

3.3.1. Connecting external speakers

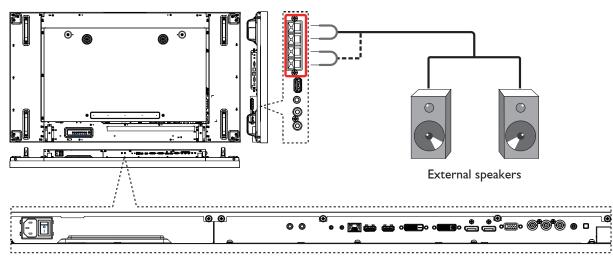

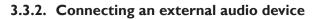

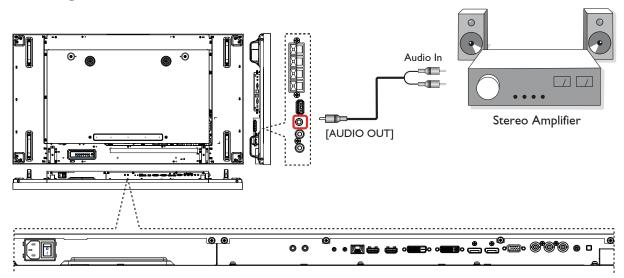


3.4. Connecting Multiple Displays in a Daisy-chain Configuration

You can interconnect multiple displays to create a daisy-chain configuration for applications such as a video wall.


3.4.1. Display control connection

Connect the [RS232C OUT] connector of DISPLAY 1 to the [RS232C IN] connector of DISPLAY 2.

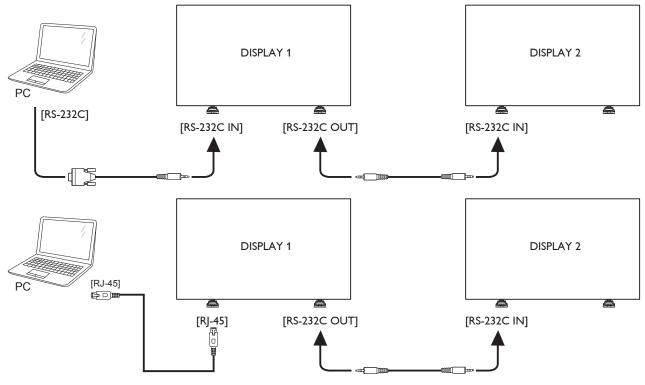


3.4.2. Digital video connection


Connect the [DVI OUT / VGA OUT] connector of DISPLAY 1 to the [DVI IN] connector of DISPLAY 2.

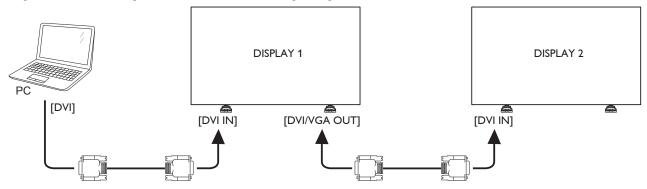

Connect the [DP OUT] connector of DISPLAY 1 to the [DP IN] connector of DISPLAY 2.

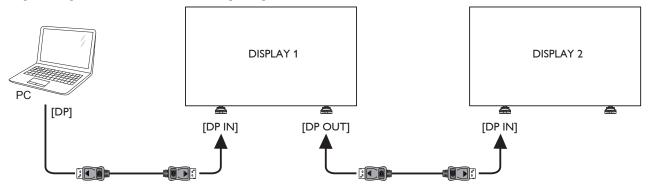


Connect the [DVI OUT] connector of DISPLAY 1 to the [DVI IN] connector of DISPLAY 2.

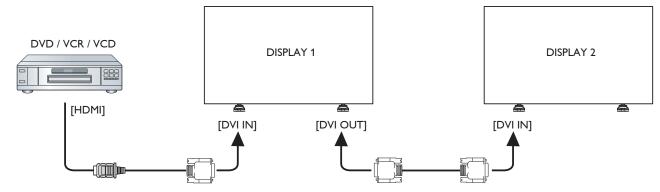

3.4.3. Analog video connection


Connect the [DVI OUT / VGA OUT] connector of DISPLAY 1 to the [VGA IN] connector of DISPLAY 2.

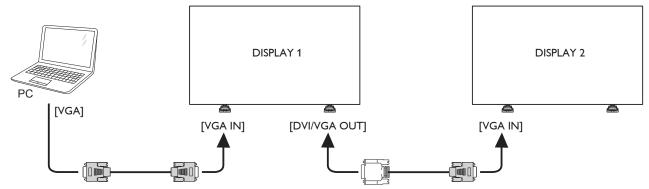

3.4.4. IR daisy-chain Connection


3.5.

Connect [IR Sensor Cable] to DISPLAY 1, and connect the [RS232C OUT] connector of DISPLAY 1 to the [RS232C IN] connector of DISPLAY 2.

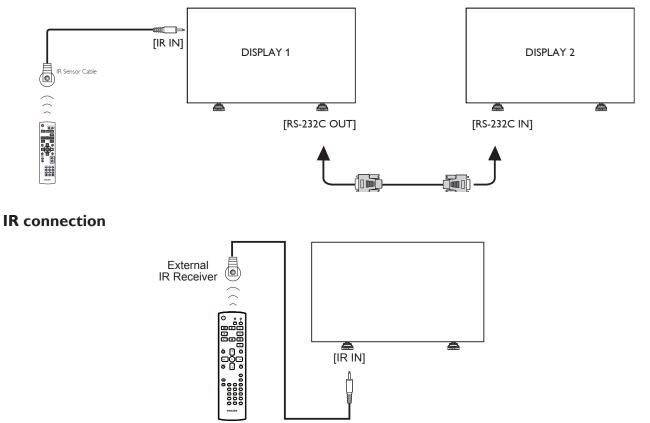


NOTE: This display's remote control sensor will stop working if the [IR IN] is connected.

3.6. IR Pass-through Connection

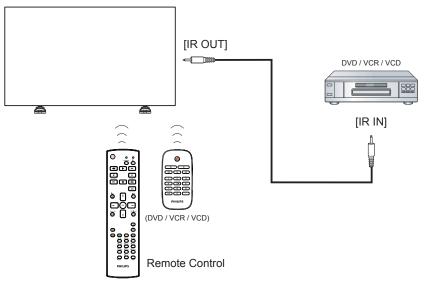

3.7. Wire-connecting to Network

If you connect this display to a home network, you can play photos, music and videos from your computer. See *Play multimedia files via Local Area Network* (Page 19) for more detail.

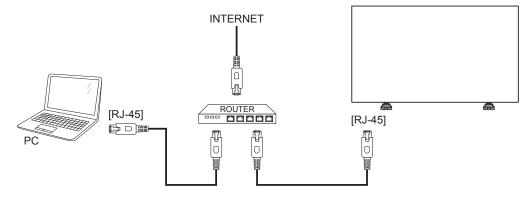

To setup the network:

- 1. Switch on the router and switch on its DHCP setting.
- 2. Connect the router to this display with an Ethernet cable.
- 3. Press [1] HOME button on the remote control, then select **Setup**.
- 4. Select **Connect to network**, then press **[OK]** button.
- 5. Follow the on-screen instructions to install the network.
- 6. Wait for this display to find the network connection.
- 7. If you are prompted, agree to the "End User Licence Agreement".

NOTE: Connecting with a shielded CAT-5 Ethernet cable to comply with the EMC directive.

4. Operation

NOTE: The control button described in this section is mainly on the remote control unless specified otherwise.

4.1. Watch the Connected Video Source

See page 12 for external equipments connection.

- 1. Press [-----] SOURCE button.
- 2. Press [] or [] button to choose a device, then press [OK] button.

4.2. Change Picture Format

You can change the picture format to suit the video source. Each video source has its available picture formats.

The available picture formats depend on the video source:

- 1. Press [FORMAT button.
- 2. Press [1] or [1] button to choose a picture format, then press [OK] button.
 - {Auto zoom}: Enlarge the picture to fill the screen. Recommended for minimal screen distortion but not for HD or PC.
 - {Movie expand 16:9}: Scale 4:3 format to 16:9. Not recommended for HD or PC.
 - {Wide screen}: Shows wide screen format content unstretched. Not recommended for HD or PC.
 - {Unscaled}: Provide maximum detail for PC. Only available when PC mode is selected in the {Picture} menu.
 - {4:3}: Display the classic 4:3 format.


4.3. Play multimedia files via Local Area Network

To play files via Local Area Network, you will need:


- A wired home network, connected with a Universal Plug and Play (uPnP) router.
- Optional: A LAN cable that connects your display to your home network.
- A media server running on your computer.
- Appropriate settings on your computer firewall to allow you to run the media server.

4.3.1. Set up the network

- 1. Connect your display and the computer to the same home network. See illustration below to connect your display to a network.
- 2. Switch on your computer and the router.
 - Single display setup:

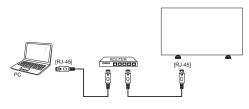

Multiple display setup:

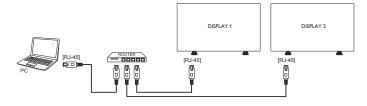

NOTE: If the apparatus does not return to DLNA mode due to external electrical disturbances (e.g. electrostatic discharge), user intervention is required.

Set up media sharing

- 1. Install a media server on your computer to share media files. These are some media servers:
 - For PC: Windows Media Player 11 (or higher) or TVersity
 - For **Mac**:Twonky
- 2. Switch on media sharing on your computer using the media server. For more information on how to set up the media server, refer to the website of the media server.

4.3.2. How to use DLNA-DMP

Ensure you have connected to the network.

You can press i button to display the connection of the network.

HDMI 1 1080p60		26/09/2014 Friday 09:32:00
Picture format Picture style Sound style Smart power Volume Monitor group Monitor ID Model name SWVersion Serial no	Wide screen Standard Personal Off 1 1 BDL5588XH 1.51	
Temperature	25°C	
Network configuration IP address Netmask Gateway Network name Ethernet MAC address	DHCP & Auto IP 192.168.1.116 255.255.255.0 192.168.1.1 BDL5588XH FF:FF:FF:FF:FF:FF:	

Play files from display

1. Press [-----] SOURCE button, choose Network, and press [OK] button.


USB
Network
Internet
SmartCMS
HDMI 1
HDMI 2
Display Port
Card OPS
DVI-D
YPbPr
AV
VGA

- 2. Now, you can see all the PC's connected to the same router on the screen. Choose the right one.
- 3. Press [1] and [-] to choose the directory and files to play.
- 4. You can connect up to 4 displays to the same PC and play same media stream.


4.3.3. How to use DLNA-DMR from PC

1. Press [1] HOME button, choose Network and press [OK] button.

2. Set Digital Media Renderer DMR as ON

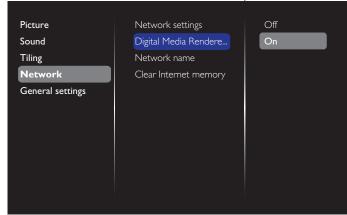

3. Set the name of your display.

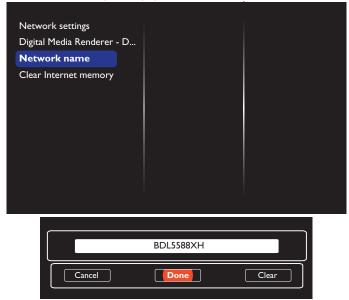

- Press [♠] HOME button, and press [-→] SOURCE button. Then, choose Network and press [OK] button.
- 5. On your PC, go to **Network and Sharing Center**, and click **Choose homegroup and sharing options**.
- 6. Check the media formats. Then, click **Choose media** streaming options.....

7. Go to **Advanced sharing settings**, and check **Turn on network discovery**.

8. Now, go to the directory of your media files. Choose the media file by right click. On the submenu from **Play To**, You can find all displays connected to your network. Choose the display, and click the media file to play.

Play files


- 1. Press [----] SOURCE button.
- 2. Choose **Network**, and press **[OK]** button.
- 3. Choose a file from the content browser, and press [OK] button to start playing.
- 4. Press the **[PLAY] buttons** on the remote control to control playing.

Tips:

- Choose the top bar to filter your files by type.
- Choose **Sort** to arrange the files by album name, artist, or other fields.
- To clear the list of offline media servers, press [] OPTIONS button. Then, choose Clear offline servers and press [OK] button.

4.4. Play multimedia files from USB device

1. Connect your USB device to the USB port on the display.

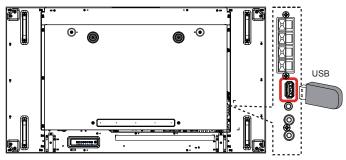

2. Press [-] SOURCE button, choose USB, and press [OK] button.

USB
Network
Internet
SmartCMS
HDMI 1
HDMI 2
Display Port
Card OPS
DVI-D
YPbPr
AV
VGA

- The connected USB device is detected automatically for all its playable files, which will be automatically sorted into 3 types:
 Music, Movie, and O Photo.
- Press [] BACK button to go up to the top layer in the screen.
 Press [] or [] button to choose the file type. Press [OK] button to enter its play list.
- 5. Choose the file you want. Press [OK] button to start playing.
- 6. Follow the on-screen instruction to control the play option.
- 7. Press [PLAY] buttons (H F G I J) to control playing.

4.5. Play options

4.5.1. Playing music files

1. Choose **J Music** in the top bar.



- 2. Choose one music track, and press [OK] button.
 - To play all the tracks in a folder, choose one music file. Then, press [____] to Play All.
 - To skip to the next or previous track, press 🚺 or 🚺 button.
 - To pause the track, press **[OK]** button. Press **[OK]** button again to resume playback.
 - To skip backward or forward 10 seconds, press [-] or [-] button.
 - To search backward or forward, press **[G]** or **[J]** button, press repeatedly to toggle between different speeds.
 - To stop the music, press [H] button.

Music options

While you play music, press [] OPTIONS button, then press [OK] button to choose an option:

- {Shuffle}: Enable or disable random play of tracks.
- {**Repeat**}: Choose {**Repeat**} to play a track or an album repeatedly, or choose {**Play once**} to play a track once.
- NOTE: To view information about a song (for example, title, artist or duration), choose the song, then press **[i] INFO** button. To hide the information, press **[i] INFO** button again.

4.5.2. Playing movie files

1. Choose **Movie** in the top bar.



- 2. Choose a video, and press [OK] button.
 - To play all the videos in a folder, choose one video file. Then, press [____] to Play All.
 - To pause the video, press **[OK]** button. Press **[OK]** button again to resume playback.
 - To skip backward or forward 10 seconds, press [-] or [-] button.
 - To search backward or forward, press **[G]** or **[J]** button, press repeatedly to toggle between different speeds.
 - To stop the video, press **[H]** button.

Movie options

While playing video, press [] OPTIONS button, then press [OK] button to choose an option:

- {Subtitles}: Choose the available subtitle settings.
- {Subtitle language}: Choose the language for subtitles if available.
- {Shuffle}: Enable or disable random play of video files.
- {Repeat}: Choose {Repeat} to play the video file repeatedly or {Play once} to play the video file once.
- {Status}: To view information about a video (for example, played position, duration, title, or date).

4.5.3. Playing photo files

1. Choose **O** Photo in the top bar.



2. Choose a photo thumbnail, then press OK button.

Start a slideshow

If there are multiple photos in a folder, choose a photo. Then, press [____] to **Play All**.

- To skip to the previous or next photo, press [-] or [-] button, and then press [OK] button.
- To stop the slideshow, press **[H]** button.

Slideshow options

While you play a slideshow, press [] OPTIONS button, then press [OK] button to choose an option:

- {Shuffle}: Enable or disable random display of pictures in the slideshow.
- {Repeat}: Choose {Repeat} to watch a slideshow repeatedly or {Play once} to watch once.
- {Slideshow Time}: Choose the displaying time for each photo in the slideshow.
- {Slideshow Transitions}: Choose the transition from one photo to the next.

4.6. How to use Opera browser (HTML5)

Please check the LAN wire to make sure the network is connected.

1. Press [->] SOURCE button, and choose Internet and press [OK] button.

1	
	USB
	Network
	Internet
	SmartCMS
	HDMI 1
	HDMI 2
	Display Port
	Card OPS
	DVI-D
	YPbPr
	AV
	VGA

2. Move the cursor to URL address bar. Press **[OK]** button and it will pop out the on-screen keyboard. You can move the cursor to enter the URL address. After finishing the URL address, choose **Done**.



3. Move the cursor to " \rightarrow " icon and press [OK] button.

	Internet
Web Address: (3) http://www.google.com	
www.google.com	History
	★ Bookmark

4. Now, you can see the web page.




NOTES:

- The Opera browser does not support FLASH format.
- The browser is not a video source. It will not stay at the browser screen after you restart the display.


5. Change your settings

Using the remote control:

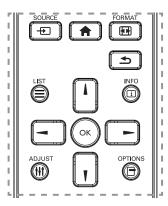

- 1. Press [] HOME button to display the OSD menu.
- 2. Press [J] [T] [-] or [-] button to choose its menu item or to adjust its value. Press [OK] button to confirm.
- 3. Press [] BACK button to go back to the previous menu layer.
- 4. Press [] HOME button to exit the OSD menu.

Using the display's control buttons

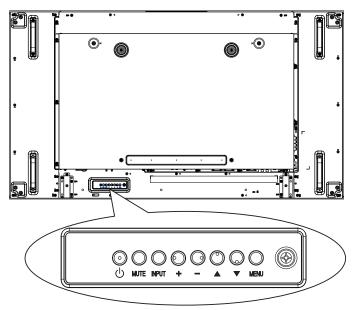

- 1. Press [MENU] button to display the OSD menu.
- 2. Press [] [] [] or [] button to choose menu item or adjust its value.
- 3. Press **[INPUT]** button to confirm menu selection and enter its submenu.
- 4. Press **[MENU]** button to exit the OSD menu.

5.1. Settings

Press [HOME button.

5.1.1. Picture

Picture	Picture style
Sound	Backlight
Tiling	Colour
Network	Sharpness
General settings	Noise reduction
	MPEG artifact reducti
	Picture enhancement
	Advanced
	Scan mode
	Format and edges
	Picture reset

Picture style

Choose a predefined picture setting.

Backlight

Adjust the brightness of this display's backlight.

Colour

Adjust the colour saturation of the picture.

Sharpness

Adjust the sharpness of the picture.

Noise reduction

Choose the amount of noise reduction for the picture.

MPEG artifact reduction

Smoothen transitions and haziness in the digital picture.

Picture enhancement

Fine-tune each pixel to match surrounding pixels and produce a brilliant, high-definition image.

- {Advanced sharpness}: Enable superior sharpness, especially on lines and contours in the picture.
- {Dynamic contrast}: Dynamically enhance the details in the dark, medium and light areas of the picture.
- {Colour enhancement}: Dynamically enhance the vividness and details of colours.

Advanced

Access advanced settings such as gamma, tint, video contrast and so on.

- {Gamma}: Adjust the non-linear setting for picture luminance and contrast.
- {Tint}: Change the colour balance.
- {Custom tint}: Customise colour balance setting. Only available if {Tint} → {Custom} is chosen.
- {Video contrast}: Adjust video contrast.
- {**Brightness**}: Adjust screen brightness.
- {Hue}: Adjust screen hue.

Scan mode

Change the display area of the image.

Format and edges

• {Picture format}: Change the picture format.

See page 19 for the descriptions about **Picture format**.

Picture reset

Reset all your picture settings to the factory defaults.

5.1.2. Sound

Picture	Sound style
Sound	Bass
Tiling	Treble
Network	Balance
General settings	Volume
	Minimum volume
	Maximum volume
	Surround mode
	Audio out (line out)
	Advanced
	Sound reset

Sound style

Access predefined sound settings.

Bass

Adjust to increase or decrease lower-pitched sounds.

Treble

Adjust to increase or decrease higher-pitched sounds.

Balance

Adjust to emphasize left or right audio output balance.

Volume

Adjust to increase or decrease the volume.

Minimum volume

Set the Minimum volume.

Maximum volume

Set the Maximum volume.

Surround mode

Set surround effects for audio performance.

Audio out (line out)

Adjust audio output volume.

Advanced

Access advanced settings to enhance your audio experience.

- {Auto volume leveling}: Enable the reduction of sudden volume changes.
- {Speaker settings}: Turn on or off the internal speakers.
- {Clear sound}: Enhance sound quality.
- {Audio out format}: Choose the type of audio output through the digital audio output connector: (HDMI only)
- {Audio out delay}: Automatically sync the image on this display to the audio from a connected home theatre.
- {Audio out offset}: Adjust the setting for audio output delay. Available if {Audio out delay} is switched on.

Sound reset

Reset to default setting.

Card OPS audio

Choose to set OPS audio output format.

The options are: {Auto}, {Analog}, {Digital}

NOTE: When the user select Card OPS source, this item will be appear in OSD menu.

5.1.3. Tiling

Picture	Enable
Sound	H monitors
Tiling	V monitors
Network	Position
General settings	Frame comp.
	Switch on delay
	Tiling tool

With this function you can create a single large-screen matrix (video wall) that consists of up to 100 sets of this display (**up to 10-sets on the vertical and 10-sets on the horizontal sides**).

Enable

Choose to {On} or {Off} the Tiling function. If {On}, the display will apply the settings in {H monitors}, {V monitors}, {Position}, and {Frame comp.}.

H monitors

Adjust displays on the horizontal side.

V monitors

Adjust displays on the vertical side.


Position

Adjust the position of this display in the screen matrix.

Example: 2 x 2 screen matrix (4 displays)

H monitors = 2 displays V monitors = 2 displays

H monitors

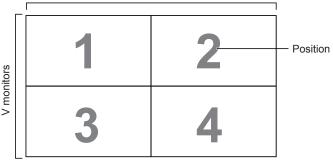

Example: 5 x 5 screen matrix (25 displays)

H monitors = 5 displays


V monitors = 5 displays

	r		H monitors			
ſ	1	2	3	4	5	 Position
	6	7	8	9	10	
V monitors	11	12	13	14	15	
>	16	17	18	19	20	
	21	22	23	24	25	


Frame comp.

Choose to turn the frame compensation function on or off. If selected $\{On\}$, the display will adjust the image to compensate for the width of the display bezels in order to accurately display the image.

$\{On\}$

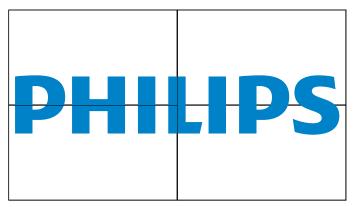

 $\{Off\}$

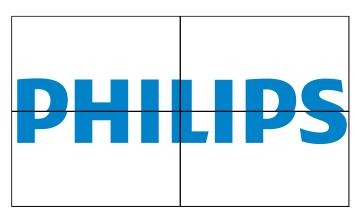

Frame comp.H

Adjust the horizontal frame compensation.

Frame comp.V


Adjust the vertical frame compensation.

Switch on delay

Adjust the power-on delaying time (in seconds) allows a sequential powering-on for each display by their ID number when multiple displays are connected.

Tilling tool

To activate the tiling tool function by enter the activate key that buy from the dealer.

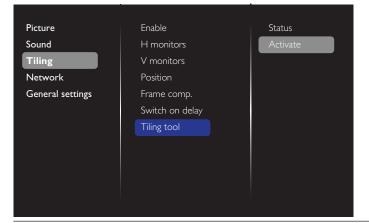

(1). Enter activate menu


Picture	Status	
Sound	Activate	
Tiling		
Network		
General settings		

(2). Enter activate key in OSD


	_	
Cancel	Done	Clear

(3). Press **[OK]** button and it will pop out the on-screen keyboard. You can move the cursor to enter the activate key. After finishing choose **Done**.


Note: Press yellow key of remote control, the input change to number digital.

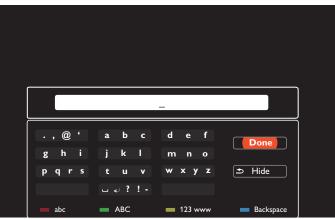


(4). Tiling tool activate message

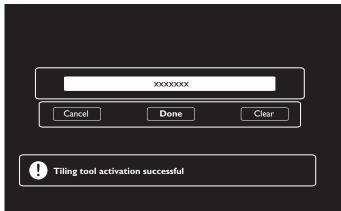

(5). Check tiling tool status on in OSD

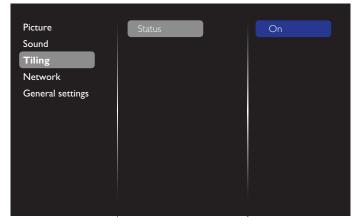

5.1.4. Network

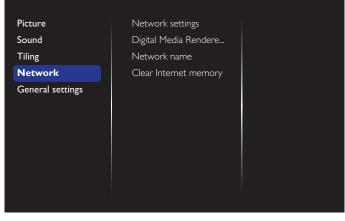

Network settings

- {Network configuration}: Choose how this display should assign addresses to the network resources.
- The user can choose {**DHCP & Auto IP**} (suggested) or {**Static IP**}.
- {Network type}: Choose Wired (default) to set the network type.

Digital Media Renderer - DMR

Receive multimedia files from the connected device by your network.

Network name

In the multiple-display connection, you can rename each display for easy identification.

Use the on-screen keyboard or the remote control keypad to enter the name.

Clear Internet memory

Clear all the cookies, bookmarks, history list and text used for auto fill.

5.1.5. General settings

Picture	Menu language
Sound	Monitor Group
Tiling	Monitor ID
Network	Eco mode
General settings	Auto search
	Clock
	Scheduling
	Sleep timer
	OneWire
	Local KB lock
	RC lock
	▼

Menu language

Choose language used for OSD menus.

Monitor group

Adjust the group range between 1 to 255. The default setting is 255.

Monitor ID

Adjust the ID number for controlling the display via the RS232C connection. Each display must have a unique ID number when multiple sets of this display are connected. Monitor ID number range is between 1 to 255. The default setting is 1.

Eco mode

Set this display to reduce the power consumption automatically.

Note: Factory default setting is "low power standby", but user could not reset it to default after setting Eco mode to "Normal" by "Factory reset" in MENU. However, user can still change the ECO mode back to "low power standby" manually.

Auto search

Choose to let this display detect and display available signal sources automatically.

Clock

Set the current date and time for the display's internal clock.

Scheduling

This function allows you to program up to 7 different scheduled time intervals for this display to activate.

You can set:


- Which input source the display will use for each scheduled activation period.
- The time for the display to turn on and turn off.
- The days in a week for the display to activate.

NOTES:

- We recommend you to set up current date and time in the {Clock} menu before using this function.
- After changing the {**Clock**} option in the {**General settings**} menu, you need to set this {**Scheduling**} again.

Picture	Menu language	
Sound	Monitor Group	
Tiling	Monitor ID	
Network	Eco mode	
General settings	Auto search	
	Clock	
	Scheduling	
	Sleep timer	
	OneWire	
	Local KB lock	
	RC lock	
	▼	

1. There are 7 schedule can be set. Go to **Status** and choose **On**.

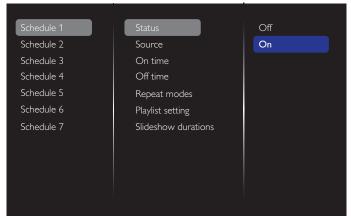

- Go to **Source** and choose input source. If {Source} → {USB} is chosen. You need to set playliist. If {Source} → {BROWSER} is chosen. You need to set URL address.
- NOTE: If **{Source}** → **{Autoplay**} is chosen. You need to create a folder named "**philips**" in the root directory of the USB and put the files (pictures or videos) you want to display in the folder.

Schedule 1	Status	USB playlist
Schedule 2	Source	HDMI 1
Schedule 3	On time	HDMI 2
Schedule 4	Off time	DisplayPort
Schedule 5	Repeat modes	Card OPS
Schedule 6	Playlist setting	DVI-D
Schedule 7	Slideshow durations	YPbPr
		AV
		VGA
		Internet
		SmartCMS


3. Set On time.

Schedule 1	Status	
Schedule 2	Status Source	
Schedule 3	On time	
Schedule 4	Off time	
Sche <u>dule 5</u>	Repeat modes	
Sche On time		
Sche	00 : 00	
Cancel	•	Done


4. Set Off time.

Schedule 1	Status	
Schedule 2	Source	
Schedule 3	On time	
Schedule 4	Off time	
Sche <u>dule 5</u>	Repeat modes	
Sche Off time		
Sche	14 : 00	
Cancel		Done


5. Go to Repeat modes and choose.

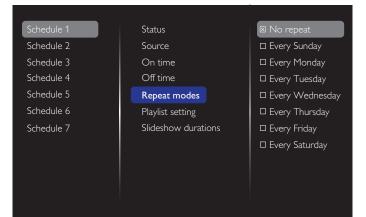

6. If $\{\text{Source}\} \rightarrow \{\text{USB}\}$ is chosen. Go to **Playlist setting**.

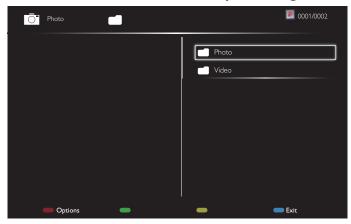

- Press [1] [1] buttons to choose files.
- Press [-] [-] buttons to switch Playlist and File Manager.
- Press [OK] button to set or clear the playlist.

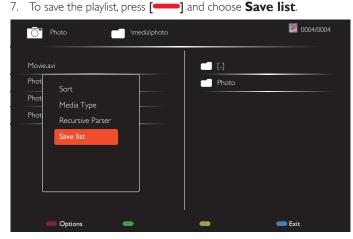

NOTES:

- Each Playlist supports up to 30 files.
- Playlist will not be cleared after {**Factory settings**}. You have to manually remove the files or delete usb_schedulinglist.txt in the USB.

Sleep timer

Switch off this display after a specified time.

OneWire

Connect and control your HDMI-CEC compliant devices through HDMI port to this display with the same remote control.

Local KB lock

Choose to enable or disable the keyboard (control buttons) function of the display.

- {Unlock}: Enable the keyboard function.
- {Lock all}: Lock all keyboard function.
- {Lock but volume}: Disable all the keyboard function except the
 [--] and [+] button.
- {Lock but power}: Disable all the keyboard function except the
 [U] button.
- {Lock all expect volume and power}: Disable all the keyboard function except the [--], [+] and [U] button:

RC lock

Choose to enable or disable the button function of the remote control.

- {Unlock}: Enable the keyboard function.
- {Lock all}: Lock all keyboard function.
- {Lock but volume}: Disable all the keyboard function except the
 [--] and [+] button.
- {Lock but power}: Disable all the keyboard function except the
 [U] POWER button.
- {Lock all expect volume and power}: Disable all the keyboard function except the [-] [+] and [0] POWER button:
- NOTE: To disable the lock function from **Local KB lock** or **RC lock** item, press buttons [**1**] and **1 9 9 8** on the remote control.

Pixel shift

For video input sources, you may choose **{On}** to move the screen image automatically to protect the display from "burn-in" or "after-image" symptoms 30 seconds after not operating the display.

Smart power

Choose a backlight level to optimise dynamic power consumption and picture contrast.

The options are: {Off}, {Standard}, {Medium}, {High}.

Wake on lan

Choose {**On**} and you can turn on the display by network.

Switch on state

Choose the display status used for the next time you connect the power cord.

- {On} The display will turn on when the power cord is connected to a wall outlet.
- {**Standby**} The display will remain Standby when the power cord is connected to a wall outlet.
- {Last status} The display will return to the previous power status (on/off/standby) when removing and replacing the power cord.

Light sensor

Choose {**On**} and the display will automatically adjust backlight.

Power LED Light

Choose {Off} to turn off the indicator.

Logo

Choose $\{Off\}$ and the display will not display the $\ensuremath{\text{PHILIPS}}$ logo when you switch on.

Advanced power management

Choose $\{{\bf On}\}.$ Then, when no signal, the display will automatically turn off.

Source notification

When you press [] POWER button to turn on the display from standby mode or change the input signal, the information OSD is displayed on the upper left corner of the screen.

Choose {Off} to turn off this function.

DisplayPort Ver.

Set the DisplayPort version to 1.1a or 1.2, this setting is only valid on DisplayPort input and output,

1.1a: Switch DisplayPort Ver. to 1.1a(default), the DisplayPort output is the clone of the DisplayPort input.

1.2: Switch DisplayPort Ver. to 1.2 to support MST(Multi-Stream Transport)

NOTE: If the display is black screen or abnormal under DisplayPort source, please switch to 1.1a and turn AC off and on.

Cooling Fan

Select {On} to turn on the cooling fan all the time. Select {Auto} to turn on/off the cooling fan according to the display's temperature. NOTES:

- The default {Auto} option will start running the cooling fan if the temperature of 60°C (140°F) is reached,.
- If the temperature exceeds 70°C (158°F) over 3 minutes and then a temperature warning message will be shown on the screen for 10 seconds, the display will be shut down automatically with blinking red & green LED lights.

Network control port

Choose the RS232 control form Card OPS or embedded RS232 in PD set.

Factory settings

Reset all your customized settings to the factory defaults.

6. USB device compatibility

USB Video Subtitle Formats (for language subtitles, etc.)

File Extensions	Container	Video codec	Maximum resolution	Max.Frame Rate (fps)	Max.Bit Rate (Mbps)	Audio codec
22.2		MPEG-1	1920×1080	25p,30p,50i,60i	30	MPEG-1(L1&L2),
.mpg	PS	MPEG-2	1920×1080	25p,30p,50i,60i	30	MPEG-1,2,2.5 L3,
	' ⁰ M		1920×1080	25p,30p,50i,60i	30	AAC/HE-AAC(v1&v2),
.vob		H.264	1920×1080	25p,30p,50p,60p,60i	30	DVD-PCM
		MPEG-2	1920×1080	25p,30p,50i,60i	30	
		MPEG-4 ASP	1920×1080	25p,30p,50i,60i	30	
+0	тс	H.264	1920×1080	25p,30p,50p,60p,60i	30	MPEG-1(L1&L2),
.ts	TS		1920x1080i@field rate=50, 60Hz			MPEG-1,2,2.5 L3, AAC/HE-AAC (v1&v2)
		MVC	1920×1080p@frame rate=24, 25,30Hz	-	30	
			1280x720p@frame rate=50, 60Hz			
		MPEG-2	1920×1080	25p,30p,50i,60i	30	
.ts		MPEG-4 ASP	1920×1080	25p,30p,50i,60i	30	
.m2ts	MaTS	H.264	1920×1080	25p,30p,50p,60p,60i	30	MPEG-1(L1&L2),
.mts	TTS		1920×1080i @ field rate=50, 60Hz			MPEG-1,2,2.5 L3,
.mt2		MVC	1920x1080p @ frame rate=24, 25,30Hz	-	30	AAC/HE-AAC (v1&v2)
			1280×720p @ frame rate=50, 60Hz			
.ts		MPEG-2	1920×1080	25p,30p,50i,60i	30	MPEG-1(L1&L2),
.m2ts	AVCHD	MPEG-4 ASP	1920×1080	25p,30p,50i,60i	30	MPEG-1,2,2.5 L3,
.mts		H.264	1920×1080	25p,30p,50p,60p,60i	30	AAC/HE-AAC (v1&v2)
.ts			1920×1080i@field rate=50, 60Hz			MPEG-1(L1&L2),
.m2ts	AVCHD	MVC	1920×1080p@frame rate=24, 25,30Hz	-	30	MPEG-1,2,2,5 L3,
.mts			1280x720p @ frame rate=50, 60Hz			AAC/HE-AAC (v1&v2)
.m4v	M4V	H.264	1920×1080	25p,30p,50p,60p,60i	30	AAC
		H.264	1920×1080	25p,30p,50p,60p,60i	30	
.ism/ Manifest .mpd	frag MP4	MVC	1920x1080i@field rate=50, 60Hz 1920x1080p@frame rate=24, 25,30Hz	-	30	AAC/HE-AAC(v1&v2), WMA, WMA-PRO
inpa			1280x720p @ frame rate=50, 60Hz			WINA-FILO
		MPEG-4 ASP	1920×1080	25p,30p,50i,60i	30	
		H.264	1920×1080		30	AAC/HE-AAC(v1&v2),
.mp4	MP4		1920×1080i@field rate=50, 60Hz			WMA,
.inp i	1 11 1	MVC	1920×1080p@frame rate=24, 25,30Hz	-	30	WMA-PRO
	1	1280x720p @ frame rate=50, 60Hz			VIMA-PRO	
		WMV9/VC1	1920×1080	30p,60i	30	
		MPEG-4 ASP	1920×1080	25p,30p,50i,60i	30	MPEG-1(L1&L2),
.mkv .mk3d	MKV	H.264	1920×1080		30	MPEG-1,2,2.5 L3, AAC/HE-AAC (v1&v2), WMA, WMA-PRO

USB Multimedia Formats

File Extensions	Container	Video codec	Maximum resolution	Frequency (kHz)	Max.Bit Rate (Mbps)	Audio codec
.mp3	MP3	-	-	48	384	MPEG-1,2,2.5 L3
.wma	WMA	-	-	48	192	WMA
.asf	(V2 up to V9.2)					
.wma	WMA Pro	-	-	96	768	WMA,WMA Pro
.wav(PC)	LPCM	-	-	192	768	LPCM
.aif(mac) .aiff(mac)	LPCM	-	-	192	768	LPCM
.aac .mp4 .m4a	AAC	-	-	48	1024	AAC,HE-AAC(v1&v2)
.pls .m3u	Playlists	-	-	-	-	-
.m4a	M4A	-	-	48	1024	AAC,HE-AAC(v1&v2)

NOTES:

• Sound or video may not work if the contents have a standard bit rate/frame rate above the compatible Frame/sec listed in the table above.

• Video content with a Bit rate or Frame rate larger than the rate specified in the table above can cause choppy video during playback.

7. Input Mode

VGA Resolution:

Standard	Active R	esolution	solution Refresh Rate Pixel Rate		A an e at Datia	Stored four Mode	
Resolution	H Pixels	V Lines	Refresh Rate	Pixel Rate	Aspect Ratio	Stand for Mode	
			60 Hz	25.175 MHz			
VGA	640	480	72 Hz	31.5 MHz	4:3	4:3	Video Graphic Array
			75 Hz	31.5 MHz			
WVGA	720	400	70 Hz	33.75 MHz	16:9	Wide Video Graphic Array	
SVGA	800	600	60 Hz	40 MHz	4:3	SuperVGA	
SVGA	800	600	75 Hz	49.5 MHz			
XGA	1024	768	60 Hz	65 MHz	4:3	Extended Graphic Array	
AGA	1024	/ 00	75 Hz	78.75 MHz			
WXGA	1280	768	60 Hz	79.5 MHz	5:3	Wide XGA	
WXGA	1280	800	60 Hz	79.5 MHz	16:10	Wide XGA	
SXGA	1280	960	60 Hz	108 MHz	4:3	Super XGA	
SXGA	1280	1024	60 Hz	108 MHz	5:4	Super XGA	
WXGA	1360	768	60 Hz	85.5 MHz	16:9	Wide XGA	
WXGA	1366	768	60 Hz	85.5 MHz	16:9	Wide XGA	
UXGA	1600	1200	60 Hz	162 MHz	4:3	Ultra XGA	
HD1080	1920	1080	60 Hz	148.5 MHz	16:9	HD1080	

SDTV Resolution:

Standard	Active Resolution		Refresh Rate	Pixel Rate	Aspect Ratio	Stand for Mode
Resolution	H Pixels	V Lines	Relieshirate			Stand for Flode
480i	720	480	29.97 Hz	13.5 MHz	4:3	Modified NTSC Standard
480p	720	100	59.94 Hz	27 MHz	4:3	1.100111e0 1413C Standard
576i	720	576	25 Hz	13.5 MHz	4:3	Modified PAL Standard
576р	720	576	50 Hz	27 MHz	С.т	FIOUINEU FAL SLANUARU

HDTV Resolution:

Standard	Active Resolution		Active Resolution Refresh Rate Pixel Rate		Aspect Ratio	Stand for Mode
Resolution	H Pixels	V Lines	Refresh Nate Fixer Nate		Aspect Natio	Stand for Prode
720p	1280	720	50 Hz 74 25 N	74.25 MHz	16:9	Normally DVB Mode
/ 20p	1200	/20	60 Hz	77,231112	10.7	
1080i	1920	1080	25 Hz	74.25 MHz	16:9	Normally ATSC Mode
10001			30 Hz	77,2311112	10.7	Normally Ar SC Flode
1080p	1920	1080	50 Hz	148.5 MHz	16:9	Normally ATSC Mode
1000p	1720	1000	60 Hz	110,511112	10.7	Normally Ar SC Flode

• The PC text quality is optimum in HD 1080 mode (1920 × 1080, 60Hz).

• Your PC display screen might appear different depending on the manufacturer (and your particular version of Windows).

• Check your PC instruction book for information about connecting your PC to a display.

• If a vertical and horizontal frequency-select mode exists, select 60Hz (vertical) and 31.5KHz (horizontal). In some cases, abnormal signals (such as stripes) might appear on the screen when the PC power is turned off (or if the PC is disconnected). If so, press the [INPUT] button to enter the video mode. Also, make sure that the PC is connected.

• When horizontal synchronous signals seem irregular in RGB mode, check PC power saving mode or cable connections.


- The display settings table complies to the IBM/VESA standards, and based on the analog input.
- The DVI support mode is regarded as same to the PC support mode.
- The best timing for the vertical frequency to each mode is 60Hz.

8. Pixel Defect Policy

We strive to deliver the highest quality products and use some of the industry's most advanced manufacturing processes whilst practicing stringent quality control. However, pixel or sub-pixel defects on the PDP / TFT panels used in Plasma- & LCD- displays are sometimes unavoidable. No manufacturer can guarantee that all panels will be free from pixel defects, but Philips guarantees that any Plasma- & LCD- displays with an unacceptable number of defects will be repaired during the warranty period in line with your local guarantee conditions.

This notice explains the different types of pixel defects and defines the acceptable defect level for the LCD screen. In order to qualify for repair under warranty, the number of pixel defects must exceed a certain level as shown in the reference table. If the LCD screen is within specification a warranty exchange / claim back will be refused. Additionally, because some types or combinations of pixel defects are more noticeable than others, Philips sets even higher quality standards for those.

8.1. Pixels and Sub-Pixels

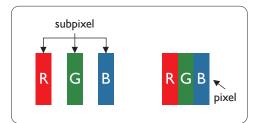


A pixel, or picture element, is composed of three sub-pixels in the primary colors of red, green and blue. Many pixels together form an image. When all sub-pixels of a pixel are lit, the three colored sub-pixels together appear as a single white pixel. When all are dark, the three colored sub-pixels together appear as a single black pixel. Other combinations of lit and dark sub-pixels appear as single pixels of other colors.

8.2. Types of Pixel Defects + Dot Definition

Pixel and sub-pixel defects appear on the screen in different ways. There are three categories of pixel defects and several types of sub-pixel defects within each category.

Dot definition = What is a defective "Dot"? :

One or more defective, adjacent sub-pixel are defined as one "dot". The no. of defective sub-pixels are not relevant to define a defective dot. This means that a defective dot can consist of one, two or three defective sub-pixels which can be dark or lit.

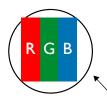

One dot = One Pixel; consists of three sub-pixels of Red, Green, and Blue.


8.3. Bright Dot Defects

Bright dot defects appear as pixels or sub-pixels that are always lit or "on". These are the examples of bright dot defects:



8.4. Dark Dot Defects

Black dot defects appear as pixels or sub-pixels that are always dark or "off". These are the examples of black dot defects:

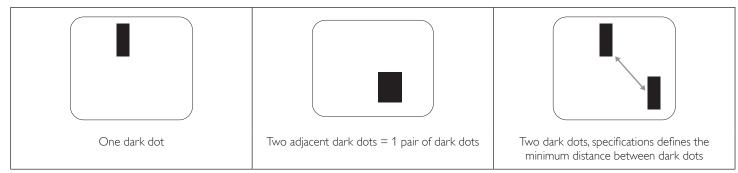

8.5. Proximity of Pixel Defects

Because pixel and sub-pixels defects of the same type that are nearby one another may be more noticeable, Philips also specifies tolerances for the proximity of pixel defects. In the table below you can find specifications about:

- Allowed amount of adjacent dark dots = (adjacent dark dots =1 pair of dark dots)
- Minimum distance between dark dots
- Total no. of all defective dots

8.6. Pixel Defect Tolerances

In order to qualify for repair due to pixel defects during the warranty period, a PDP / TFT panel in a Philips Plasma / LCD- display must have pixel or subpixel defects exceeding the tolerances listed in the following table.

BRIGHT DOT EFFECT	ACCEPTABLE LEVEL
1 lit sub pixel	2
BLACK DOT EFFECT	ACCEPTABLE LEVEL
1 dark sub pixel	10
TOTAL DOT DEFECTS OF ALL TYPES	12
NOTE: $*1 \text{ or } 2$ adjacent sub pixel defects = 1 det defect	

NOTE: * 1 or 2 adjacent sub pixel defects = 1 dot defect

8.7. MURA

Dark spots or patches may occasionally appear on some liquid crystal display (LCD) panels. This is known within the industry as Mura, which is a Japanese term for "unevenness." It is used to describe an irregular pattern or area in which uneven screen uniformity appears under certain conditions. Mura is a result of the deterioration of the liquid crystal alignment layer and is most commonly caused by long-term operation under high ambient temperatures. It is an industry- wide phenomenon and Mura is not repairable. It is also not covered by our warranty terms.

Mura has been around since the introduction of LCD technology and with screens getting bigger and in operation 24/7, many displays are running in low light conditions. This all adds to the possibility of Mura affecting displays.

HOW TO SPOT MURA

There are many symptoms of Mura and also multiple causes. Several of these are listed below:

- Impurities or foreign particles in the crystal matrix
- Uneven distribution of LCD matrix during manufacturing
- Non-uniform luminance distribution of the backlight
- Panel assembly induced stress
- Flaws within the LCD cells
- Thermal induced stress high temperature operation over long periods of time

HOW TO AVOID MURA

Although we can not guarantee the complete eradication of Mura every time, in general the appearance of Mura can be minimized by these methods:

- Lower the backlight brightness
- Use a screen saver
- Reduce the ambient temperature around the unit

9. Cleaning and Troubleshooting

9.1. Cleaning

Caution When Using the Display

- Do not bring your hands, face or objects close to the ventilation holes of the display. The top of the display is usually very hot due to the high temperature of exhaust air being released through the ventilation holes. Burns or personal injuries may occur if any body parts are brought too close. Placing any object near the top of the display could also result in heat related damage to the object as well as the display itself.
- Be sure to disconnect all cables before moving the display. Moving the display with its cables attached may damage the cables and thus cause fire or electric shock.
- Disconnect the power plug from the wall outlet as a safety precaution before carrying out any type of cleaning or maintenance procedure.

Front Panel Cleaning Instructions

- The front of the display has been specially treated. Wipe the surface gently using only a cleaning cloth or a soft, lint-free cloth.
- If the surface becomes dirty, soak a soft, lint-free cloth in a mild detergent solution. Wring the cloth to remove excess liquid. Wipe the surface of the display to remove dirt. Then use a dry cloth of the same type to dry.
- Do not scratch or hit the surface of the panel with fingers or hard objects of any kind.
- Do not use volatile substances such as insert sprays, solvents and thinners.

Cabinet Cleaning Instructions

- If the cabinet becomes dirty, wipe the cabinet with a soft, dry cloth.
- If the cabinet is extremely dirty, soak a lint-free cloth in a mild detergent solution. Wring the cloth to remove as much moisture as possible. Wipe the cabinet. Use another dry cloth to wipe over until the surface is dry.
- Do not allow any water or detergent to come into contact with the surface of the display. If water or moisture gets inside the unit, operating problems, electrical and shock hazards may result.
- Do not scratch or hit the cabinet with fingers or hard objects of any kind.
- Do not use volatile substances such as insert sprays, solvents and thinners on the cabinet.
- Do not place anything made from rubber or PVC near the cabinet for any extended periods of time.

9.2. Troubleshooting

Symptom	Possible Cause	Remedy
No picture is displayed	 The power cord is disconnected. The main power switch on the back of the display is not switched on. The selected input has no connection. The display is in standby mode. 	 Plug in the power cord. Make sure the power switch is switched on. Connect a signal connection to the display.
Interference displayed on the display or audible noise is heard	Caused by surrounding electrical appliances or fluorescent lights.	Move the display to another location to see is the interference is reduced.
Color is abnormal	The signal cable is not connected properly.	Make sure that the signal cable is attached firmly to the back of the display.
Picture is distorted with abnormal patterns	 The signal cable is not connected properly. The input signal is beyond the capabilities of the display. 	 Make sure that the signal cable is attached firmly. Check the video signal source to see if it is beyond the range of the display. Please verify its specifications with this display's specification section.
Display image doesn't fill up the full size of the screen	 The zoom mode is not set correctly. Scan Mode may be set incorrectly to underscan. If the image exceeds the screen size, Scan Mode may need to be set to Underscan. 	Use the Zoom mode or Custom zoom function in the Screen menu to fine tune display geometry and time frequency parameter.
Can hear sound, but no picture	Improperly connected source signal cable.	Make sure that both video inputs and sound inputs are correctly connected.
Can see picture but no sound is heard	 Improperly connected source signal cable. Volume is turned all the way down. {Mute} is turned on. No external speaker connected. 	 Make sure that both video inputs and sound inputs are correctly connected. Press [+] or [-] button to hear sound. Switch MUTE off by using the [I] button. Connect external speakers and adjust the volume to a suitable level.
Some picture elements do not light up	Some pixels of the display may not turn on.	This display is manufactured using an extremely high level of precision technology: however, sometimes some pixels of the display may not display.This is not a malfunction.
After-Images can still be seen on the display after the display is powered off. (Examples of still pictures include logos, video games, computer images, and images displayed in 4:3 normal mode)	A still picture is displayed for an over extended period of time	Do not allow a still image to be displayed for an extended period of time as this can cause a permanent after-image to remain on the display.

How to setup the settings in the menu to control all the monitors at the same time and individually via RC?	Daisy chained by RS232 and no IR cable	1.The first display sets as "Primary" on OSD (Advanced option/IR control item), others set as "Secondary".
		2. The setup OSD will show on Top-Left of display. (Toggle MENU will show again if it disappear)
		3. Default setting: ID NO: 0, GP NO: 0, this setting can control all displays by IR.
		The ''+'', ''-'' can change ''ID NO'' to control signal display by ''Monitor ID''.
		The ''UP'', ''DOWN'' can change ''GP NO'' to control multi-display by ''Group ID''.
		*The first display always be controlled by IR.
How is the RC working?	Daisy chain : no RS232 connected and IR cable	No need setting, just to connect with IR cables and control by IR.
		*This way has out-of-synchronizm phenomenon. Suggest to use above setting with RS-232 cable.

10. Technical Specifications

Display:

Item	Specifications
Screen Size (Active Area)	54,6'' (138.7 cm) LCD
Aspect Ratio	16:9
Number of pixels	1920 (H) × 1080 (V)
Pixel pitch	0.630 (H) × 0.630 (V) [mm]
Displayable colors	1.06B colors
Brightness (typical)	700 cd/m ²
Contrast ratio (typical)	1400:1
Viewing angle	178 degrees

In/Out Terminals:

Item		Specifications
Speaker Output	Internal Speakers	10W (L) + 10W (R) [RMS]/8Ω
	External Speakers	1 Way 1 Speaker System
		82 dB/W/M/160 Hz ~ 13 KHz
Audio Output	3.5mm phone jack x 1	0.5V [rms] (Normal) / 2 Channel (L+R)
Audio Input	RCA Jack x 2	0.5V [rms] (Normal) / 2 Channel (L+R)
	3.5mm phone jack x 1	
RS232C	2.5mm Phone jack x 2	RS232C in/RS232C out
RJ-45	RJ-45 Jack x 1 (8 pin)	10/100 LAN Port
HDMI Input	HDMI Jack x 2 (Type A) (18 pin)	Digital RGB:TMDS (Video + Audio)
		MAX: Video - 720p, 1080p, 1920 × 1080/60 Hz (WUXGA) Audio - 48 KHz/ 2 Channel (L+R)
		Supports LPCM only
DVI-D Input	DVI-D jack	Digital RGB:TMDS (Video)
VGA Input	D-Sub Jack x 1 (15 pin)	Analog RGB: 0.7V [p-p] (75Ω), H/CS/V:TTL (2.2kΩ), SOG: 1V [p-p] (75Ω)
		MAX: 720p, 1080p, 1920 x 1080/60 Hz (WUXGA)
DVI-I (DVI-D & VGA)	DVI-I Jack x 1 (29 pin)	Digital RGB:TMDS (Video)
Output		Analog RGB: 0.7V [p-p] (75Ω), H/CS/V:TTL (2.2kΩ), SOG: 1V [p-p] (75Ω)
		MAX: 720p, 1080p, 1920 × 1080/60 Hz (WUXGA)
Component Input	BNC Jack x 3	Y: 1V [p-p] (75Ω), Pb: 0.7V [p-p] (75Ω), Pr: 0.7V [p-p] (75Ω)
		МАХ: 480і, 576і, 480р, 576р, 720р, 1080і, 1080р
Video Input	BNC x 1 (Share with Component_Y)	Composite 1V [p-p] (75Ω)
Displayport in/out	Displayport Jack x 2 (20 pin)	Digital RGB:TMDS (Video + Audio)
		MAX: Video - 720p, 1080p, 1920 × 1080/60 Hz (WUXGA) Audio - 48 KHz/ 2 Channel (L+R)
		Supports LPCM only

General:

Item	Specifications
Power Supply	AC 100 - 240V, 50 - 60Hz, 3.5A
Power Consumption (Max)	420 W
Power Consumption (typ.)	275 W
Power Consumption (Standby & Off)	<0.5 W (RS232 in active)
Dimensions (With Stand) $[W \times H \times D]$	1213.4 × 726.2 × 400.0
Dimensions (Without Stand) $[W \times H \times D]$	1213.4 × 684.2 × 95.0 (@Wall mount) / 103.4 (@Handle)
Weight (With Stand)	31.5 Kg
Weight (Without Stand)	29.2 Kg
Gross Weight (Without Stand)	44.4 Kg

Environmental Condition:

Item		Specifications
Temperature	Operational	0 ~ 40°C
	Storage	-20 ~ 60°C
Humidity	Operational	20 ~ 80% RH (No condensation)
	Storage	5 ~ 95% RH (No condensation)
Altitude	Operational	0 ~ 3,000 m
	Storage / Shipment	0 ~ 9,000 m

Internal Speaker:

Item	Specifications
Туре	1 Way 1 Speaker
Input	10 W (RMS)
Impedance	8Ω
Output Sound Pressure	82 dB/W/M
Frequency Response	160 Hz ~ 13 KHz



2015 © Koninklijke Philips N.V. All rights reserved.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

Specifications are subject to change without notice.