



Philips Signage Solutions  
D-Line Display

50"  
4K UHD  
500cd/m<sup>2</sup>

**SignageSolutions**



50BDL4550D

## Chasing innovation

powered by Android

Make it stand out with a fast Philips D-Line Professional 4K UHD display. Philips superb picture quality ensures true colors and intense contrast. You can effortlessly display content from multiple sources on a single screen.

### Innovative solutions for any signage application

- Save and play content with internal memory
- Integrated dual-band WiFi
- Android SoC processor. Native and web apps

### Maximizing the impact of your message

- CMND: Take control of your displays
- Create and update content with CMND & Create
- Manage settings of multiple displays with CMND & Control
- Connect and control your content via the cloud

### Care about you, your business and your audience

- Ensure your content is running with automatic screenshots
- Keep your content up and running with FailOver
- SmartPower for energy saving

### Expand your viewing experience

- ADS wide-view panel display

**PHILIPS**

D-Line Display  
50" 4K UHD, 500cd/m<sup>2</sup>

# Highlights

## Internal Memory



Save and play content with internal memory. Upload your media into the display and playback content immediately. Working in conjunction with the internal browser, it also serves as a memory cache when streaming online content. If the network ever fails, the internal memory keeps content running by playing a cached version of the content, ensuring that your media stays up even if the network goes down.

## Proof of Play

Content is king, and with the automatic screenshot feature, you can make sure that your content is up and running at all times. Screenshots are taken throughout the day, which are then stored in the FTP server. From there, the screenshots can be viewed no matter when, or where you are.


## FailOver



Keeping your content up and running is critical for demanding commercial applications. While it is unlikely you will face a content disaster, FailOver provides content protection with a revolutionary technology that plays back-up content on screen in the event of a media


player failure. FailOver automatically kicks in when the primary input fails. Simply select a primary input connection and a FailOver connection and your ready for instant protection.

## SmartPower

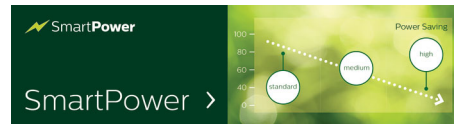

The backlight intensity can be controlled and pre-set by the system to reduce the power consumption by up to 50%, which saves substantially on energy costs.

## CMND



A robust display management platform, CMND puts the power back into your hands. Update and manage content with CMND & Create or control your settings with CMND & Control. It's all possible with CMND.

## CMND & Control



With CMND & Control, easily manage multiple displays in a central location. With real time display monitoring, setting and software updates from a remote location, and the ability to customize and configure multiple displays at once, such as video wall or menu board displays, controlling your suite of displays has never been easier.

50BDL4550D/93

## CMND & Create



Design and create compelling content with CMND & Create, a powerful authoring tool. With a drag and drop interface, preloaded templates, and integrated widgets, you'll be able to amaze your customers with compelling content. Available in portrait and landscape mode.

## ADS wide-view panel display

Be seen from any angle with ADS wide-view technology. Advanced Super Dimension Switch delivers faster on-display picture processing for smoother content transitions, remarkable image accuracy, and superior colour reproduction with 180 degree viewing.

## Powered by Android 8

Control your display via an Internet connection. Android-powered Philips Professional Displays are optimized for native Android apps, and you can install web apps directly to the display too. A new Android 8 ensures the software is kept secure and remain to the latest specification for longer.

## SmartBrowser

Connect and control your content via the cloud with the integrated HTML5 browser. Using the Chromium based browser, design your content online and connect a single display, or your complete network. Show content in both landscape and portrait mode, with fullHD resolution. Simply connect the display to the internet using WiFi or with an RJ45 cable, and enjoy your own created playlists.

# Specifications

## Picture/Display

- Diagonal screen size: 49.5 inch / 125.7 cm
- Panel resolution: 3840 x 2160
- Optimum resolution: 3840 x 2160 @ 60Hz
- Brightness: 500 cd/m<sup>2</sup>
- Contrast ratio (typical): 4000:1
- Dynamic contrast ratio: 500,000:1
- Aspect ratio: 16:9
- Response time (typical): 8 ms
- Pixel pitch: 0.2854 x 0.2854 mm
- Display colors: 1.07 Billion
- Viewing angle (H / V): 178 / 178 degree
- Picture enhancement: 3/2 - 2/2 motion pull down, 3D Combfilter, Motion compens. deinterlacing, 3D MA deinterlacing, Dynamic contrast enhancement, Progressive scan
- Operating system: Android 8.0
- Panel technology: VA

## Connectivity

- Video input: Display Port 1.2 (x1), DVI-I (x 1), HDMI 2.0 (x2), USB 2.0 (x2)
- Video output: DisplayPort 1.2 (x1), HDMI 2.0 (x1)
- Audio input: 3.5 mm jack
- Audio output: 3.5mm jack
- External control: RJ45, RS232C (in/out) 2.5 mm jack, IR (in/out) 3.5 mm jack
- WiFi: dual antenna 2,4Ghz and 5Ghz

## Supported Display Resolution

### • Computer formats

Resolution	Refresh rate
1920 x 1080	60Hz
1024 x 768	60Hz
1280 x 1024	60Hz
1280 x 720	60Hz
1440 x 900	60 Hz
1600 x 900	60Hz
1680 x 1050	60Hz
3840 x 2160	30, 60Hz
640 x 480	60Hz
800 x 600	60Hz

### • Video formats

Resolution	Refresh rate
1080i	50, 60Hz
576i	50Hz
576p	50Hz
480p	60Hz
480i	60Hz

1080p	50, 60Hz
2160p	24, 30, 60Hz
720p	50,60 Hz

## Dimensions

- Set dimensions (W x H x D): 1128.4 x 649.0 x 63.5 mm
- Set dimensions in inch (W x H x D): 44.43 x 25.55 x 2.50 inch
- Bezel width: 14.9 mm (Even bezel)
- Product weight (lb): 32.52 lb
- Product weight: 14.75 kg
- Wall Mount: 400 (H)x 400 (V) mm, M6

## Convenience

- Placement: Landscape (24/7), Portrait (24/7)
- Tiled Matrix: Up to 15 x 15
- Keyboard control: Hidden, Lockable
- Signal loop through: RS232, IR Loopthrough, DisplayPort, HDMI
- Network controllable: RS232
- Energy saving functions: Smart Power
- Screen saving functions: Pixel Shift, Low Bright
- WiFi protocol: a b g n, 802.1x

## Power

- Standby power consumption: <0.5 W
- Mains power: 100 ~ 240 VAC, 50 ~ 60 Hz
- Consumption (Typical): 100 W
- Consumption (Max): 132 W
- Energy Label Class: G

## Operating conditions

- Temperature range (operation): 0 ~ 40 °C
- Temperature range (storage): -20 ~ 60 °C
- Altitude: 0 ~ 3000 m
- MTBF: 50,000 hour(s)
- Humidity range (operation)[RH]: 20 - 80% RH (No condensation)
- Humidity range (storage) [RH]: 5 - 95% RH (No condensation)

## Sound

- Built-in speakers: 2 x 10W RMS

## Accessories

- Included accessories: Quick start guide, RS232 cable, AC Power Cord, IR sensor cable (1.8M), Remote Control & AAA Batteries

- Stand: BM05922(Optional)
- Included Accessories: AC Switch Cover, Philips logo (x1), RS232 daisy-chain cable, Screws, USB Cover (x1)

## Multimedia Applications

- USB Playback Audio: AAC, HEAAC, MPEG
- USB Playback Picture: BMP, JPEG, PNG
- USB Playback Video: MPEG, H.263, H.264, H.265


## Miscellaneous

- On-Screen Display Languages: English, French, German, Spanish, Polish, Turkish, Russian, Italian, Simplified Chinese, Traditional Chinese, Arabic, Japanese, Danish, Dutch, Finnish, Norwegian, Portuguese, Swedish
- Regulatory approvals: CE, CCC, RoHS, BSMI, CB, VCCI, CU, EMF, EnergyStar 8.0, ETL, FCC, Class A, PSB
- Warranty: 1 year warranty

## Internal Player

- CPU: 2 x A53 + 2 x A73
- GPU: ARM Mali G51
- Memory: 3GB DDR
- Storage: 32 GB eMMC

Philips 50BDL4550D  
Version: 1.1  
Release Date: 20220611

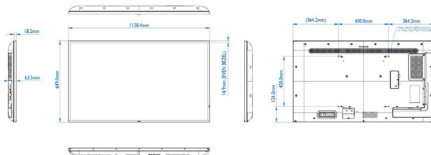

Issue date 2022-07-14

Version: 1.0.1

12 NC: 8670 001 68912  
EAN: 69 51613 91789 3

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)