



Philips
LED monitor with
SmartImage Lite

E Line
21.5" (54.6 cm)

227E3LHSU

Elegant display enhances your viewing experience

Experience awesome LED pictures with natural colors. The elegant design with translucent blue bezel, HDMI and stereo speakers makes it a great choice!

Great picture quality

- LED technology for natural colors
- 16:9 Full HD display for best viewing experience
- SmartContrast 20000000:1 for incredible rich black details
- SmartResponse of 2ms
- SmartImage Lite for an enhanced LCD viewing experience

Design that complements any interior

- Sleek, elegant design complements your home decor
- Translucent blue bezel with glossy finish
- Modern Touch controls

Experience true multimedia

- HDMI-ready for top quality, multimedia experience
- Built-in speakers for audio without desktop clutter

Great convenience

- Easy display performance tuning with SmartControl Lite

PHILIPS

LED monitor
E Line 21.5" (54.6 cm)

227E3LHSU/00

Highlights

LED technology

White LED's are solid state devices which light up to full, consistent brightness faster saving startup time. LED's are free from mercury content which allows for eco-friendly recycling and disposal process. LED's allow for better dimming control of LCD backlight, resulting in super high contrast ratio. It also gives superior color reproduction thanks to consistent brightness across the screen.

HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. A HDMI cable enables high-quality digital video and audio all transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

Built-in speakers

A pair of stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.

SmartImage Lite

SmartImage Lite is an exclusive, leading edge Philips technology that analyzes the content displayed on your screen. Based on a scenario you select, SmartImage Lite dynamically enhances the contrast, color saturation and sharpness of images and videos for ultimate


display performance - all in real time with the press on a single button.

16:9 Full HD



The Full HD screen has the widescreen resolution of 1920 x 1080p. This is the highest resolution of HD sources for the best possible picture quality. It is fully future proof as it supports 1080p signals from all sources, including the most recent like Blu-ray and advanced HD game consoles. The signal processing is extensively upgraded to support this much higher signal quality and resolution. It produces brilliant flicker-free progressive scan pictures with superb brightness and colors.

SmartContrast ratio 20000000:1

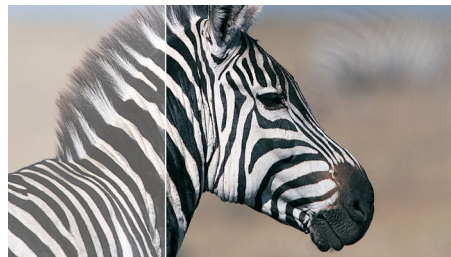

You want the LCD flat display with the highest contrast and most vibrant images. Philips advanced video processing combined with unique extreme dimming and backlight boosting technology results in vibrant images. SmartContrast will increase the contrast with excellent blacklevel and accurate rendition of dark shades and colors. It gives a bright, lifelike picture with high contrast and vibrant colors.

SmartResponse - 2ms



SmartResponse is a exclusive Philips overdrive technology that when turned on, automatically adjusts response times to specific application requirements like gaming and movies which require faster response times in order to produce judder, time-lag and ghost image free images

Touch controls



Touch controls are intelligent, touch sensitive icons that replace protruding buttons that lets the user adjust the monitor to their requirement. Responding to your lightest touch, Touch control gives the monitor a modern feel.

SmartControl Lite

SmartControl Lite is the next generation 3D icon based GUI monitor control software. This allows user to fine-tune most parameters of the monitor like Color, Brightness, screen calibration, Multi-media, ID management, etc with the mouse.



Specifications

Picture/Display

- LCD panel type: TFT-LCD
- Backlight type: W-LED system
- Panel Size: 21.5 inch / 54.6 cm
- Effective viewing area: 476.64 (H) x 268.11 (V)
- Aspect ratio: 16:9
- Optimum resolution: 1920 x 1080 @ 60Hz
- SmartResponse (typical): 2 ms (Gray to Gray)
- Response time (typical): 5 ms
- Brightness: 250 cd/m²
- SmartContrast: 20,000,000:1
- Contrast ratio (typical): 1000:1
- Pixel pitch: 0.248 x 0.248 mm
- Viewing angle: 176° (H) / 170° (V), @ C/R > 5
- Picture enhancement: SmartImage Lite
- Display colors: 16.7 M
- Scanning Frequency: 30 -83 kHz (H) / 56 -75 Hz (V)
- sRGB

Connectivity

- Signal Input: VGA (Analog), DVI-D (digital, HDCP), HDMI
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): Earphone out (3.5 mm jack)x 1, PC audio-in

Convenience

- Built-in Audio: 1.5W x 2
- User convenience: SmartImage lite, Input, Volume, Menu, Power On/Off
- OSD Languages: English, French, German, Italian, Russian, Simplified Chinese, Spanish, Portuguese, Turkish
- Other convenience: Kensington lock
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 7

Stand

- Tilt: -5/+20 degree

Power

- On mode: 18.5 W (EnergyStar 5.0 test method)
- Standby mode: 0.5 W
- Off mode: 0.5 W
- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Power supply: Built-in, 100-240VAC, 50/60Hz

Dimensions

- Product with stand (mm): 534 x 408 x 216 mm
- Product without stand (mm): 534 x 336 x 41 mm
- Packaging in mm (WxHxD): 580 x 494 x 106 mm

Weight

- Product with stand (kg): 3.68 kg
- Product without stand (kg): 3.46 kg
- Product with packaging (kg): 4.96 kg

Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- Temperature range (storage): -20°C to 60°C °C
- Relative humidity: 20%-80 %
- MTBF: 30,000 hour(s)

Sustainability

- Environmental and energy: EnergyStar 5.0, EPEAT Silver, RoHS, Mercury Free
- Recyclable packaging material: 100 %

Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC Class B, GOST, SEMKO, TUV Ergo, TUV/GS, UL/cUL, TCO Certified, PSB, SASO, WEEE

Cabinet

- Color: Black/ Blue tint
- Finish: Glossy



Issue date 2022-04-21

Version: 4.0.1

12 NC: 8670 000 75091
EAN: 87 12581 59772 6

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com