



未注公差参照 /UNSPECIFIED TOLERANCE TO FOLLOW GB/T11804-2000 精密F级/Grade F	>	0	6	30	120	400	1000
	≅	6	30	120	400	1000	2000
	公差/TOL. ±	0.05	0.10	0.15	0.20	0.30	0.50

版本/Rev	修订描述/REVISION DESCRIPTION	修订/REVISED BY	日期/DATE
A1	第一次发行	陈成	2018-08-01




SPK8413
Wired mechanical gaming keyboard
有线机械游戏键盘

User manual
English
产品手册
中文




Functional overview

Front view

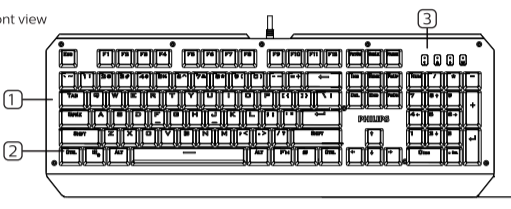

Back view

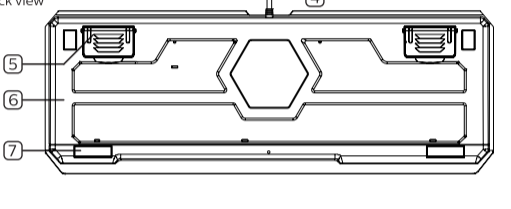

① Cover ⑤ Tripod
② Keycap ⑥ Bottom cover
③ Indicator light ⑦ Foot pad
④ Wire

Product description

- Double injection key cap, durable, never rub off, multiple color to option.
- Heavy keyboard, and the key response sensitive, key route:2.0mm.
- Mechanical switch design, key life up to 60 million times, durable and excellent feel.
- Backlight in Key cap and gap, uniform color. Rainbow or single light can be optional.
- Support 6 keys and N keys mode optional, password of online banking input is not affected.
- Intelligent sleep mode: the host goes into dormancy or standby mode, the backlight function is closed, and the host can resume the previous mode after starting.
- Support plug switch design, you can change shaft body according to your own preferences (optional).
- AULA original national patent: the second generation technology of dustproof and waterproof design(optional).
- Humanized design, add a series of common shortcut function keys with Fn key to use.

Specification

Fn+ shortcut function	F1 My computer	F2 search	F3 calculator	F4 Open player	F5 Prev song	F6 Next song
Fn+ shortcut function	F7 Play/Pause	F8 Stop	F9 Mute	F10 Volume down	F11 Volume up	
Fn+ shortcut function	WN-L	↑	↓	←	→	
Fn+ shortcut function	Lock WN	Brightness+	Brightness-	Speed+	Speed-	
Fn+ shortcut function	INS	PrtScr	ScrLock	Home	End	
Fn+ shortcut function	6 Keys Functional mode switching	6 Keys Anti-ghosting	All keys Anti-ghosting	Custom backlight recording key	Custom backlight storage key	

Record and storage custom mode key

- FN+Home = record key
- FN+End = storage key
- Press FN+9 or FN+0 to enter the corresponding custom mode, then press FN+Home to enter the custom stippling recording state.
- Press any key that needs to be turned on or off to the specified state. After setting, press FN+End for storage.

The light pattern

Flowing light, ripple light, always-on light, single light, synchronous breathing light, ASDW ↑ ↓ ↔ ESC keys always-on, never-ending light, sideways transform light, Snakelike marquee.

Pre-recorded gaming light effects of the light pattern.

- FN+1=game mode 1 (FPS) - ASDW ↑ ↔ ESC
- FN+2=game mode 2 (CF) - ASDW Ctrl-L Shift-L Alt-L Space RQQEB 1-5 Tab F1-F3 Home End PgUp PgDn PrtSc SCRLK
- FN+3=game mode 3 (COD) - QWERTASDFGCV 1-7 Ctrl-L Shift-L
- FN+4=game mode 4 (RTS) - QWERTASDGXZFKLHMNUYTP Space 1-0 Ctrl-L Shift-L Alt-L
- FN+5=game mode 5 (LOL) - QWER DGFVB Ctrl-L Alt-L Tab Space ~ 1-6 Esc
- FN+6=game mode 6 (Car Race) - ASDWR ↑ ↔ Ctrl-L Shift-L Alt-L
- FN+7=game mode 7 (NBA) - AFSWRE Space ↑ ↔ ZXCV 1234 Shift-L Ctrl-L Alt-L
- FN+8=game mode 8 (LOL) - QWERDFB 1-6
- FN+9=custom mode 1 - self design
- FN+0=custom mode 2 - self design

Specification

- Transmission: wired USB
- Number of button: 104 US/ 105 UK
- Button stroke: 4.0mm
- Key force: 60±10g
- Key life: 60 million times
- Rated voltage/current: DC 5V/ <280mA
- System requirements: Windows®7 / 8.1 & 10
- Product size: 450.5(L)×163.7(W)×42(H)±0.5mm
- Product weight: 950g±5g

Package contents

- Wired mechanical keyboard
- Instruction book
- Warranty card

功能概述

前视图



後视图



① 面蓋 ⑤ 腳架
② 鍵帽 ⑥ 底蓋
③ 指示燈 ⑦ 腳墊
④ 線材

產品描述

- 簡約的外形，穩重的外觀。
- 鍵帽採用雙色注塑工藝，經久耐用，不掉色。
- 鍵盤厚重，按鍵反應靈敏，觸發行程2.0mm。
- 採用機械軸設計，6000萬次按鍵壽命，經久耐用，手感極佳。
- 鍵帽和縫隙背光，色彩均勻，可選配單色或混色發光。
- 支持6鍵與N鍵模式自選，網銀密碼錄入不受影響。
- 具有智能休眠模式：主機進入休眠或待機狀態，背光功能關閉，主機啟動後恢復此前模式。
- 可根據玩家的喜好錄製燈光效果。
- 鍵盤人性化設計，與Fn配合增加一系列常用快捷功能按鍵。

安裝

即插即用
有線機械鍵盤支持即插即用，與USB連接之後，電腦會自動偵測到鍵盤，無需驅動或者CD。

標準版快捷鍵說明

Fn+	F1	F2	F3	F4	F5	F6	F7
快捷功能	我的電腦	搜索	計算器	播放/停止	上一曲	下一曲	播放/暫停
Fn+	F8	F9	F10	F11	F12	WN-L	↑
快捷功能	停止	靜音	音量減	音量加	鎖定/解鎖全鍵盤	鎖WIN	亮度+
Fn+	↑	←	→	INS	HOME	PGUP	DEL
快捷功能	亮度-	速度-	速度+	鎖定/解鎖全鍵盤	鎖定/解鎖全鍵盤	鎖定/解鎖全鍵盤	鎖定/解鎖全鍵盤
Fn+	PGDN	End	ESC	PRT	SCR		
快捷功能	鎖定/解鎖全鍵盤	鎖定/解鎖全鍵盤	恢復常亮	6鍵無誤	全鍵無誤		
	鎖定/解鎖全鍵盤	鎖定/解鎖全鍵盤	鎖定/解鎖全鍵盤	鎖定/解鎖全鍵盤	鎖定/解鎖全鍵盤		

自定義模式按鍵錄製存儲

- FN+End = 錄製鍵/存儲鍵
- 按FN+9或FN+0進入相應自定義模式後，按FN+End進入自定義點彩錄製狀態。按任意需要亮起或熄滅的鍵至指定狀態，完成設定後，按FN+End進行存儲即可。
- 按FN+ESC清除燈光錄製，恢復常亮模式。

燈光模式

每種燈光按4下分別對應4種燈效。

燈光模式預錄製遊戲燈效：

- FN+1=遊戲模式1 (FPS) - ASDW ↑ ↔ ESC 亮
- FN+2=遊戲模式2 (CF) - ASDW Ctrl-L Shift-L Alt-L Space RQQEB 1-5 Tab F1-F3 Home End PgUp PgDn PrtSc SCRLK 亮
- FN+3=遊戲模式3 (COD) - QWERTASDFGCV 1-7 Ctrl-L Shift-L 亮
- FN+4=遊戲模式4 (RTS) - QWERTASDGXZFKLHMNUYTP Space 1-0 Ctrl-L Shift-L Alt-L 亮
- FN+5=遊戲模式5 (LOL 全) - QWER DGFVB Ctrl-L Alt-L Tab Space ~ 1-6 Esc 亮
- FN+6=遊戲模式6 (Car Race) - ASDWR ↑ ↔ Ctrl-L Shift-L Alt-L 亮
- FN+7=遊戲模式7 (NBA) - AFSWRE Space ↑ ↔ ZXCV 1234 Shift-L Ctrl-L Alt-L 亮
- FN+8=遊戲模式8 (LOL 簡) - QWERDFB 1-6
- FN+9=自定義模式1 - self design
- FN+0=自定義模式2 - self design

規格

- 傳輸方式：有線USB
- 按鍵數：104 US/ 105 UK
- 按鍵行程：4.0mm
- 按鍵力度：60±10g
- 按鍵壽命次數：6,000萬次
- 額定電壓/電流：DC 5V / <280mA
- 系統需求：Windows®7/8.1 & 10
- 產品尺寸：450.5(L)×163.7(W)×42(H)±0.5mm
- 產品重量：950g±5g

包裝內容

- 有線機械鍵盤
- 說明書
- 保修卡



© 2018 Koninklijke Philips NV. All rights reserved.
Koninklijke Philips NV is a registered trademark of Philips.
Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips NV.
Made in China

© 2018 皇家飞利浦有限公司。保留所有权利。
皇家飞利浦有限公司是飞利浦公司的注册商标。
Philips 和飞利浦盾形徽标是皇家飞利浦有限公司注册的商标。
中国制造


通過以下網址，註冊您的產品以獲得支持：
www.philips.com/welcome

總代理：G&T (2018) 0200
Manufacturer: Gonggong Seng Electronics Co., Ltd.
Dongguan, Huizhou, Guangdong, China

總經銷：G&T (2018) 0200
製造商：康寧電子有限公司
地址：中國廣東省東莞市康寧路1號

- 技术要求：
- 1) 成品尺寸：80*95mm
 - 2) 材质：105g双铜
 - 3) 工艺：4C印刷,折风琴页
 - 4) 公差：+/-0.5mm

控制复印

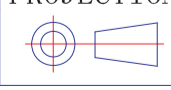核准 APPVE BY		图纸名称 DWG NAME	说明书	客户 CLIENT	飞利浦
审核 CHECKED BY		机型 MODEL NO.	SI-2039	绘图视角 PROJECTION	版本 VER. A1
设计 DRAWN BY	陈成	零件料号 PART NO.			单位 METRIC MM
		材质 MATERIAL			比例 SCALE 1:1
		表面处理 FINISHING			图面 SIZE
<p>■ PEACH ■ RoHS □ Ca65 □ CFR1303 □ PFOS □ PAHs □ FORMALDEHYDE / 甲醛 <***PPM □ HALOGEN FREE / 无卤</p> <p>THIS DRAWING, AND IT'S INHERANT DESIGN CONCEPTS, ARE THE PROPERTY OF SOAI AND AS SUCH MAY NOT BE COPIED, REPRODUCED, OR GIVEN TO THIRD PARTIES WITHOUT THE WRITTEN CONSENT OF SOAI.</p>					