



Philips  
LCD Monitor with Digital  
TV tuner

55 cm (21.5") w T-line  
1920x1080 Full HD

221T1SB1



## Digital Full HD TV monitor in a stylish package

Experience brilliant multimedia performance with this stylish, glossy and stunning Full HD 1080p display with Digital TV tuner! Combined with HDMI and AV inputs along with powerful sound the 221T1 takes entertainment to a new height!

### Best picture quality

- Full HD LCD display, with a 1920x1080p resolution
- SmartContrast 50000:1 for incredible rich black details
- Smart mode selects a perfect mode for what you are watching
- Up to 5ms response time for clear, fast moving action

### Experience true multimedia

- SmartSound selects a perfect mode for audio performance
- HDMI-ready for top quality, multimedia experience
- Incredible Surround for enhanced audio enjoyment

### Ready for digital

- MPEG4 HDTV reception via DVBT tuner

### Great convenience

- Built-in TV tuner for viewing TV programs on your PC monitor
- Remote control for TV functions

# PHILIPS

LCD Monitor with Digital TV tuner  
55 cm (21.5") w T-line 1920x1080 Full HD

221T1SB1/00

## Highlights

### SmartContrast ratio 50000:1



You want the LCD flat display with the highest contrast and most vibrant images. Philips advanced video processing combined with unique extreme dimming and backlight boosting technology results in vibrant images. SmartContrast will increase the contrast with excellent blacklevel and accurate rendition of dark shades and colors. It gives a bright, lifelike picture with high contrast and vibrant colors

### HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. A HDMI cable enables high-quality digital video and audio all transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

### MPEG4 HDTV

HDTV allows you to watch High Definition TV in the best picture and sound quality without additional set-top box. With the built in DVBT tuner that can handle state-of-the-art MPEG-4 formats, you can now receive and watch High Definition TV programs and other rich multimedia contents in Digital Quality

### Incredible Surround



Incredible Surround is an audio technology from Philips that dramatically magnifies the sound field to immerse you in the audio. Using state-of-the-art electronic phase shifting, Incredible Surround mixes sounds from left and right in such a way that it expands the virtual distance between the two speakers. This wider spread greatly enhances the stereo effect and creates a more natural sound dimension. Incredible Surround allows you to experience total surround with greater depth and width of sound, without the use of additional speakers.

### 5ms response time

Response time measures signal reaction speed in milliseconds. Faster response time is better as it eliminates visible image artifacts that could dampen your experience when viewing fast moving images or objects. In this case, this

LCD panel gives you 5ms response time so that you can watch your LCD TV with a clear, fast moving action.

### Full HD LCD display 1920x1080p



The Full HD screen has the widescreen resolution of 1920 x 1080p. This is the highest resolution of HD sources for the best possible picture quality. It is fully future proof as it supports 1080p signals from all sources, including the most recent like Blu-ray and advanced HD game consoles. The signal processing is extensively upgraded to support this much higher signal quality and resolution. It produces brilliant flicker-free progressive scan pictures with superb brightness and colors.

### Smart mode

The optimum picture and sound depends on various aspects like the video source, content type, surroundings of the room, type of display device etc. Smart Mode has predefined picture and sound settings conveniently preset by the way you use your TV. The 'Personal' setting, allows you to define the picture settings according to your preference, store it and gain easy access for future selection. All these conveniently built into your TV for optimal settings.



# Specifications

## Picture/Display

- Aspect ratio: 16:9, Widescreen
- Brightness: 250 cd/m<sup>2</sup>
- SmartContrast: 50000:1
- Contrast ratio (typical): 1000:1
- Response time (typical): 5 ms
- Panel resolution: 1920 x 1080
- Viewing angle: 170° (H) / 160° (V)
- Picture enhancement: Progressive scan, TrueVision
- Screen enhancement: Anti-Reflection coated screen
- Diagonal screen size: 21.5 inch / 54.61 cm

## Sound

- Output power (RMS): 2 x 3W
- Sound Enhancement: Incredible Surround, Smart Sound
- Sound System: Mono, Stereo

## Tuner/Reception/Transmission

- TV system: PAL I, PAL B/G, PAL D/K, SECAM B/G, SECAM D/K, SECAM L/L'
- Video Playback: NTSC, PAL, SECAM
- Aerial Input: 75 ohm coaxial (IEC75)
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- Digital TV: DVB Terrestrial \*
- Tuner Display: PLL

## Connectivity

- Signal Input: VGA (Analog), HDMI, PC Audio in
- Ext 1: SCART in
- Ext 2: YPbPr in, Audio L/R in
- Ext 3: CVBS out, Audio L/R out
- Other connections: Audio L/R in, CVBS in, S/PDIF out (coaxial), USB Service port, Common Interface

## Convenience

- Other convenience: VESA mount (100x100mm)
- Screen Format Adjustments: Widescreen, Normal, Zoom 1, Zoom 2
- Smart mode: Movie, Personal, Standard, Vivid, Eco
- SmartSound: Music, Speech, Personal
- Teletext: 1000 page Smart Text
- Ease of Use: Program List, Side Control

- Ease of Installation: Plug & Play, Automatic Tuning System (ATS)
- On-Screen Display languages: Bulgarian, Croatian, Czech, Danish, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Norwegian, Polish, Portuguese, Russian, Serbian, Slovakian, Slovenian, Spanish, Swedish, Simplified Chinese, Turkish
- Remote control: 221T1 Remote control

## Power

- On mode: 31W (Typ.@monitor mode)
- Off mode: <0.3W
- Mains power: 100-240V, 50/60Hz
- Ambient temperature: 0 °C to 40 °C

## Dimensions

- Product with stand (mm): 382 x 528 x 176 mm
- Product without stand (mm): 347 x 528 x 65 mm
- Packaging in mm (WxHxD): 451 x 620 x 160 mm

## Weight

- Product with stand (kg): 4.6 kg
- Product without stand (kg): 4.5 kg
- Product with packaging (kg): 6.5 kg

## Accessories

- Included accessories: Power cord, Remote Control, Batteries for remote control, Quick start guide, User Manual, Table top stand


## Supported Display Resolution

### Computer formats

Resolution	Refresh rate
1920 x 1080	60Hz

### Video formats

Resolution	Refresh rate
480i	60Hz
480p	60Hz
576i	50Hz
576p	50Hz
720p	50, 60Hz
1080i	50, 60Hz
1080p	50, 60Hz

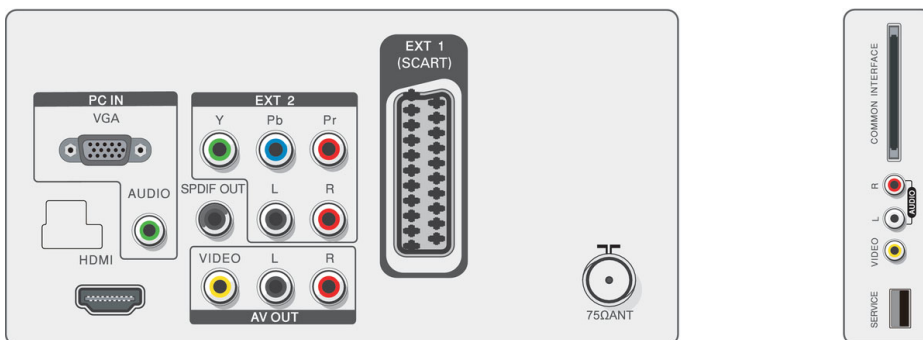

Issue date 2022-05-11

Version: 1.0.1

12 NC: 8670 000 66737  
EAN: 87 12581 55904 5

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)