



Philips Brilliance  
LED monitor

**S Line**  
21.5" (54.6 cm)

**221S3LES**

## Ergonomic display enhances productivity

With features like Ergo base, 0.1watt Soft off mode, Dual inputs, SmartImage and SmartControl, the energy efficient Philips 221S3 increases your productivity

### **Sustainable Eco-friendly solution**

- EPEAT Silver ensures lower impact on environment
- Mercury Free eco-friendly display
- Energy Star for energy efficiency and low power consumption
- SmartPower: Up to 50% power saving

### **Outstanding display performance**

- LED technology ensures natural colors
- SmartImage: Optimized user-friendly display experience

### **Ergonomic design**

- 130mm height adjustment for ideal sitting position
- 90 degree screen rotation and smart cable management

### **Great convenience**

- Dual input accepts both analog VGA and digital DVI signals
- Modern Touch controls


# PHILIPS

# Highlights

## LED technology

White LED's are solid state devices which light up to full, consistent brightness faster saving startup time. LED's are free from mercury content which allows for eco-friendly recycling and disposal process. LED's allow for better dimming control of LCD backlight, resulting in super high contrast ratio. It also gives superior color reproduction thanks to consistent brightness across the screen.

## SmartImage

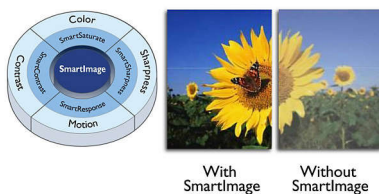

SmartImage is an exclusive leading edge Philips technology that analyzes the content displayed on your screen and gives you optimized display performance. This user friendly interface allows you to select various modes like Office, Image, Entertainment, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimizes the contrast, color saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time with the press of a single button!

## SmartPower

SmartPower is an artificial intelligent technology which dynamically analyzes the content of the screen image to achieve power saving. The backlight intensity can be controlled automatically and pre-set by the system to reduce the power consumption by up to 50%, which saves substantially on energy costs

## ScreenRotate

ScreenRotate makes it possible to use a monitor in either the landscape and portrait mode; to change orientation for a better view of a selected document or image, the monitor is rotated to the desired orientation.

## 130mm height adjustment

The Super Ergo Base is a 'people friendly' Philips monitor base that not only tilts and swivels, but is also height adjustable and pivots to 90 degree, so that each user can adjust the monitor to their personal preference for maximum viewing comfort and efficiency.

## EPEAT Silver

Philips EPEAT Silver certified monitors ensure protection for human health and environment, and are highly energy efficient ensuring low emissions of climate changing green house gases. EPEAT program helps purchasers evaluate, compare and select Monitors based on 51 environmental criteria supported by US EPA. EPEAT Silver is valid only where Philips registers the product. Please visit [www.epeat.net](http://www.epeat.net) for registration status in your country.

## Dual input



VGA connector



DVI connector

Dual input provides connectors to accommodate input of both analog VGA and digital DVI signals.

## Energy Star 5.0

Energy Star is a US EPA sponsored energy efficiency program also adopted by many other countries. Energy Star certification ensures

that you are buying a product which meets the latest power efficiency standards which operates with maximum power efficiency at all operational levels. New Philips monitors are certified for Energy Star 5.0 specifications and meet or exceed the standard. For example, in sleep mode Energy Star 5.0 requires less than 1watt power consumption, whereas Philips monitors consume less than 0.5watts. Further details can be obtained from [www.energystar.gov](http://www.energystar.gov)

## Touch controls



Touch controls are intelligent, touch sensitive icons that replace protruding buttons that lets the user adjust the monitor to their requirement. Responding to your lightest touch, Touch control gives the monitor a modern feel.

## Mercury Free

Philips monitors with LED backlighting are free of Mercury content, one of the most toxic natural substances, which affects humans and animals. This reduces the environmental impact of the display throughout its life-cycle, from manufacturing to disposal.



# Specifications

## Connectivity

- Signal Input: VGA (Analog ), DVI-D (digital, HDCP)
- Sync Input: Separate Sync, Sync on Green

## Picture/Display

- Panel Size: 21.5 inch / 54.6 cm
- Aspect ratio: 16:9
- LCD panel type: TFT-LCD
- Backlight type: W-LED system
- Pixel pitch: 0.248 x 0.248 mm
- Optimum resolution: 1920 x 1080 @ 60Hz
- Brightness: 250 cd/m<sup>2</sup>
- Display colors: 16.7 M
- Contrast ratio (typical): 1,000:1
- SmartContrast: 20,000,000:1
- Response time (typical): 5 ms
- Viewing angle: 176° (H) / 170° (V), @ C/R &gt; 5
- Picture enhancement: SmartImage
- Effective viewing area: 476.6 (H) x 268.1 (V)
- Scanning Frequency: 30 -83 kHz (H) / 56 -75 Hz (V)
- sRGB

## Convenience

- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 7/Vista/XP
- User convenience: SmartImage, Brightness, Power On/Off, SmartPower, Menu
- OSD Languages: English, French, German, Italian, Portuguese, Russian, Simplified Chinese, Spanish
- Other convenience: VESA mount (100x100mm), Kensington lock

## Stand

- Height adjustment: 130 mm
- Pivot: 90 degree, anti-clockwise, auto pivot
- Swivel: -65/65 degree
- Tilt: -5/20 degree

## Power

- ECO mode: 15.43 W (typ.)
- Power supply: Built-in, 100-240VAC, 50/60Hz
- Off mode: 0.1W
- On mode: 16.81W (EnergyStar 5.0 test method)
- Standby mode: 0.1 W
- Power LED indicator: Operation - White, Standby mode- White (blinking)

## Dimensions

- Product with stand (mm): 507 x 487 x 220 mm
- Packaging in mm (WxHxD): 565 x 377 x 262 mm
- Product without stand (mm): 507 x 323 x 59 mm

## Weight

- Product with packaging (kg): 7.43 kg
- Product with stand (kg): 5.64 kg
- Product without stand (kg): 3.51 kg

## Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- MTBF: 30,000 hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C

## Sustainability

- Environmental and energy: EPEAT Silver, EnergyStar 5.0, RoHS
- Recyclable packaging material: 100 %

## Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC Class B, GOST, SEMKO, TCO 5.1, TUV Ergo, TUV/GS, UL/cUL

## Cabinet

- Color: Silver
- Finish: Texture



Issue date 2024-03-25

Version: 2.0.2

EAN: 87 12581 58415 3

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)