




Philips Brilliance
4K Ultra HD LCD display
with MultiView

32" / 81.3 cm
3840 x 2160 (4K UHD)

Brilliance

BDM3275UP

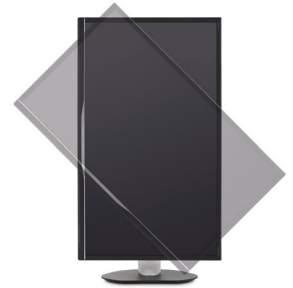

4K Ultra High Definition

See the big picture with all the details

The expansive 32" Ultra HD professional Philips display gives you the room to spread out, see the big picture and all the details in Ultra High Definition.

Brilliant performance

- UltraClear 4K UHD (3840x2160) resolution for precision
- IPS-AHVA wide-view technology for image and color accuracy
- 1.074 billion colors for smooth color gradations and detail
- Less eye fatigue with Flicker-free technology

Designed for the way you work

- MultiView enables simultaneous dual connect and view
- SmartErgoBase enables people-friendly ergonomic adjustments
- Low bezel-to-table height for maximum reading comfort
- Built-in stereo speakers for multimedia

Easy to connect and enjoy


- HDMI for quick digital connection
- DisplayPort connection for maximum visuals
- MHL technology for enjoying mobile content on big screen
- USB 3.0 enables fast data transfers and smart phone charging

PHILIPS

4K Ultra HD LCD display with MultiView
32" / 81.3 cm 3840 x 2160 (4K UHD)


Highlights

UltraClear 4K UHD Resolution

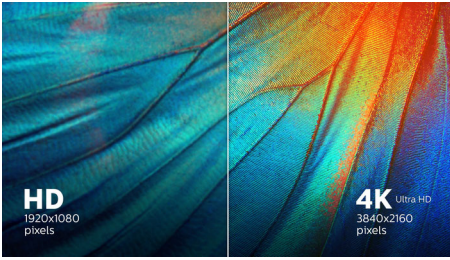


These Philips displays utilize high performance panels to deliver UltraClear, 4K UHD (3840 x 2160) resolution images. Whether you are demanding professional requiring extremely detailed images for CAD solutions, using 3D graphics applications or a financial wizard working on huge spreadsheets, Philips displays will make your images and graphics come alive.

IPS-AHVA display

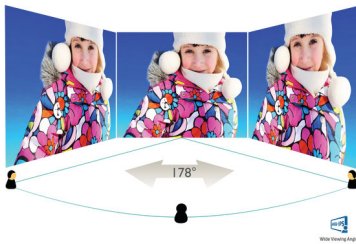

IPS-AHVA displays use an advanced technology which gives you extra wide viewing angles of 178/178 degree, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS-AHVA displays give you remarkably crisp images with vivid colors, making it ideal not only for Photos, movies and web browsing, but also for professional applications which demand color accuracy and consistent brightness at all times.

10-bit colors

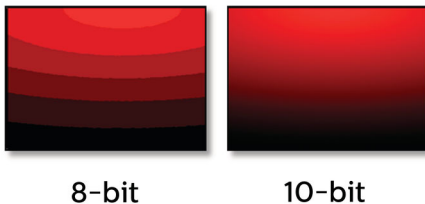

The 10-bit display delivers rich color depth with 1.074 billion colors and 12-bit internal

processing for re-creating smooth, natural colors without gradations and color banding.

Flicker-free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-free Technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

HDMI ready




Enjoy crisp colorful images and audio with simple one-cable connection. An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. An HDMI cable enables high-quality smooth digital video (up to 4K/UHD resolution at 60 Hz) and audio all transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

MultiView technology

With the ultra-high resolution Philips MultiView display you can now experience a world of connectivity. MultiView enables active dual connect and view so that you can work with multiple devices like a PC and notebook simultaneously, for complex multi-tasking.

BDM3275UP/00

SmartErgoBase

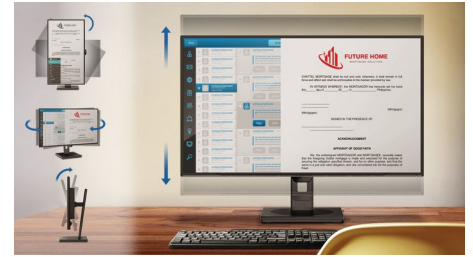

The SmartErgoBase is a monitor base that delivers ergonomic display comfort and provides cable management. The base's people-friendly height, swivel, tilt and rotation angle adjustments position the monitor for maximum comfort that can ease the physical strains of a long workday; cable management reduces cable clutter and keeps the workspace neat and professional.

Low bezel-to-table height



The Philips monitor, thanks to its advanced SmartErgoBase, can be lowered down almost to desk level for a comfortable viewing angle. Low bezel-to-table height is the perfect solution if you use bifocals, trifocals or progressive lens glasses for your computing work. Additionally, it allows for users with greatly different heights to use the monitor in their preferred angle and height settings, helping them reduce fatigue and strain.

Built-in stereo speakers



A pair of high quality stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.



Specifications

Picture/Display

- LCD panel type: IPS-AHVA LCD
- Backlight type: W-LED system
- Panel Size: 32 inch / 81.3 cm
- Effective viewing area: 708.48 (H) x 398.52 (V)
- Aspect ratio: 16:9
- Optimum resolution: 3840 x 2160 @ 60Hz
- Response time (typical): 4 ms (Gray to Gray)*
- Brightness: 350 cd/m²
- Contrast ratio (typical): 1,000:1
- SmartContrast: 50,000,000:1
- Pixel pitch: 0.1845 x 0.1845 mm
- Viewing angle: 178° (H) / 178° (V), @ C/R > 10
- Picture enhancement: SmartImage
- Display colors: Color support 1.07 billion colors
- Scanning Frequency: 30 - 83 kHz (H) / 56 - 76 Hz (V)
- MHL: 1080P @ 60Hz
- sRGB
- Brightness uniformity: 93 ~ 105%

Connectivity

- USB: USB 3.0 x 4 with B.C.1.2
- Signal Input: VGA (Analog), DVI-Dual Link (digital, HDCP), DisplayPort x 1, HDMI (2.0) - MHL x 1
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): PC audio-in, Headphone out

Convenience

- Built-in Speakers: 3 W x 2
- MultiView: PIP/PBP mode, 2x devices
- User convenience: SmartImage, Multiview, User, Menu, Power On/Off
- Control software: SmartControl Premium
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (100x100mm)
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 8.1 / 8 / 7

Stand

- Height adjustment: 180 mm
- Pivot: 90 degree
- Swivel: -170/+170 degree
- Tilt: -5/20 degree

Power

- ECO mode: 33.3 W (typ.)
- On mode: 41.1 W (typ.) (EnergyStar 7.0 test

- method)
- Standby mode: < 0.5 W (typ.)
- Off mode: Zero watts with Zero switch
- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Power supply: Built-in, 100-240VAC, 50-60Hz

Dimensions

- Product with stand(max height): 742 x 657 x 270 mm
- Product without stand (mm): 742 x 438 x 61 mm
- Packaging in mm (WxHxD): 970 x 526 x 224 mm

Weight

- Product with stand (kg): 10.90 kg
- Product without stand (kg): 7.94 kg
- Product with packaging (kg): 15.20 kg

Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- Temperature range (storage): -20°C to 60°C °C
- Relative humidity: 20%-80 %
- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- MTBF (demonstrated): 70,000 hrs (excluded backlight)

Sustainability

- Environmental and energy: EnergyStar 7.0, TCO Certified Edge, RoHS
- Recyclable packaging material: 100 %
- Post consumer recycled plastic: 65%
- Specific Substances: PVC / BFR free housing, Mercury free

Compliance and standards

- Regulatory Approvals: CE Mark, FCC Class B, BSMI, KCC, E-standby, ICES-003, KC, J-MOSS, cETLus, EPA, TUV/GS, TUV Ergo, PSB, CU-EAC, SEMKO, SASO, KUCAS, UKRAINIAN, PSE, CECP, WEEE, TCO Certified Edge

Cabinet

- Front bezel: Black
- Rear cover: Black
- Foot: Black
- Finish: Texture

What's in the box?

- Monitor with stand
- Cables: VGA, DVI, HDMI, DP, Audio, Power
- User Documentation



Issue date 2022-05-16

Version: 7.2.1

12 NC: 8670 001 21257
EAN: 87 12581 72950 9

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* This Philips display is MHL certified. However, in case your MHL device does not connect or work correctly, check with your MHL device FAQ or vendor directly for direction. The policy of your device manufacturer may require you to purchase their brand specific MHL cable or adapter in order to work

* Requires optional MHL certified mobile device and MHL cable. (not included) Please check with your MHL device vendor for compatibility.

* Standby/Off energy saving of ErP is not applicable for the MHL charging functionality

* For complete list of MHL-enabled products refer to www.mhlconsortium.org

* "IPS" word mark / trademark and related patents on technologies belong to their respective owners.

* EPEAT rating is valid only where Philips registers the product. Please visit <https://www.epeat.net/> for registration status in your country.

* Response time value equal to SmartResponse