

www.philips.com/welcome

EN	User manual	1
	Customer care and warranty	38
	Troubleshooting & FAQs	50





Table of Contents

1.	Important	1
1.1	Safety precautions and maintenance	1
1.2	Notational Descriptions	2
1.3	Disposal of product and packing material.	3
2.	Setting up the monitor	
2.1	Installation	
2.2	Operating the monitor	
2.3	Remove the Base	8
3.	Product information	9
3.1	SmartImage	9
3.2	SmartContrast	
3.3	SmartSaturate	
3.4	SmartSharpness	11
3.5	Philips SmartControl Premium	12
3.6	SmartDesktop Guide	20
3.7	PowerSensor ^{†M}	25
3.8	Philips' Flat Panel Monitors Pixel Defect	
	Policy	26
4	Technical Specifications	28
4.1	Resolution & Preset Modes	31
4.2	Automatic PowerSaving	31
5	Regulatory Information	32
6	Customer care and warranty	38
7	Troubleshooting & FAQs	
7.1	Troubleshooting	
7.2	SmartControl Premium FAQs	52
7.3	General FAQs	54

1. Important

This electronic user's guide is intended for anyone who uses the Philips monitor. Take time to read this user manual before you use your monitor. It contains important information and notes regarding operating your monitor.

The Philips guarantee applies provided the product is handled properly for its intended use, in accordance with its operating instructions and upon presentation of the original invoice or cash receipt, indicating the date of purchase, dealer's name and model and production number of the product.

1.1 Safety precautions and maintenance

Warnings

Use of controls, adjustments or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards and/ or mechanical hazards.

Read and follow these instructions when connecting and using your computer monitor.

Operation

- Keep the monitor out of direct sunlight and away from stoves or any other heat source.
- Remove any object that could fall into ventilation holes or prevent proper cooling of the monitor's electronics.
- Do not block the ventilation holes on the cabinet.
- When positioning the monitor, make sure the power plug and outlet are easily accessible.
- If turning off the monitor by detaching the power cable or DC power cord, wait for 6 seconds before attaching the power cable or DC power cord for normal operation.
- Please use approved power cord provided by Philips all the time. If your power cord is missing, please contact with your local service center: (Please refer to Customer Care Consumer Information Center)

- Do not subject the monitor to severe vibration or high impact conditions during operation.
- Do not knock or drop the monitor during operation or transportation.

Maintenance

- To protect your monitor from possible damage, do not put excessive pressure on the monitor panel. When moving your monitor, grasp the frame to lift; do not lift the monitor by placing your hand or fingers on the monitor panel..
- Unplug the monitor if you are not going to use it for an extensive period of time.
- Unplug the monitor if you need to clean it with a slightly damp cloth. The screen may be wiped with a dry cloth when the power is off. However, never use organic solvent, such as, alcohol, or ammonia-based liquids to clean your monitor.
- To avoid the risk of shock or permanent damage to the set, do not expose the monitor to dust, rain, water, or excessive moisture environment.
- If your monitor gets wet, wipe it with dry cloth as soon as possible.
- If foreign substance or water gets in your monitor, please turn the power off immediately and disconnect the power cord.
 Then, remove the foreign substance or water, and send it to the maintenance center.
- Do not store or use the monitor in locations exposed to heat, direct sunlight or extreme cold.
- In order to maintain the best performance of your monitor and use it for a longer lifetime, please use the monitor in a location that falls within the following temperature and humidity ranges.
 - Temperature: 0-40°C 32-95°F
 - Humidity: 20-80% RH

- IMPORTANT: Always activate a moving screen saver program when you leave your monitor unattended. Always activate a periodic screen refresh application if your monitor will display unchanging static content. Uninterrupted display of still or static images over an extended period may cause "burn in", also known as "after-imaging" or "ghost imaging", on your screen.
- "Burn-in", "after-imaging", or "ghost imaging" is a well-known phenomenon in monitor panel technology. In most cases, the "burned in" or "after-imaging" or "ghost imaging" will disappear gradually over a period of time after the power has been switched off.

Warning

Severe "burn-in" or "after-image" or "ghost image" symptoms will not disappear and cannot be repaired. The damage mentioned above is not covered under your warranty.

Service

- The casing cover should be opened only by qualified service personnel.
- If there is any need for any document for repair or integration, please contact with your local service center. (please refer to the chapter of "Consumer Information Center")
- For transportation information, please refer to "Technical Specifications".
- Do not leave your monitor in a car/trunk under direct sun light.

Solution Note

Consult a service technician if the monitor does not operate normally, or you are not sure what procedure to take when the operating instructions given in this manual have been followed.

1.2 Notational Descriptions

The following subsections describe notational conventions used in this document. Notes, Cautions and Warnings Throughout this guide, blocks of text may be accompanied by an icon and printed in bold or italic type. These blocks contain notes, cautions or warnings. They are used as follows:

Note

This icon indicates important information and tips that help you make better use of your computer system.

Caution

This icon indicates information that tells you how to avoid either potential damage to hardware or loss of data.

Warning

This icon indicates the potential for bodily harm and tells you how to avoid the problem. Some warnings may appear in alternate formats and may not be accompanied by an icon. In such cases, the specific presentation of the warning is mandated by the relevant regulatory authority.

1.3 Disposal of product and packing material

Waste Electrical and Electronic Equipment-WEEE

Recycling Information for Customers

Your display is manufactured with high quality materials and components which can be recycled and reused.

To learn more about our recycling program please visit <u>www.philips.com/about/sustainability/recycling</u>.



This marking on the product or on its packaging illustrates that, under European Directive 2002/96/ EC governing used electrical and electronic appliances, this product may not be disposed of with normal household waste. You are responsible for disposal of this equipment through a designated waste electrical and electronic equipment collection. To determine the locations for dropping off such waste electrical and electronic, contact your local government office, the waste disposal organization that serves your household or the store at which you purchased the product.

Your new monitor contains materials that can be recycled and reused. Specialized companies can recycle your product to increase the amount of reusable materials and to minimize the amount to be disposed of.

All redundant packing material has been omitted. We have done our utmost to make the packaging easily separable into mono materials.

Please find out about the local regulations on how to dispose of your old monitor and packing from your sales representative.

2. Setting up the monitor

2.1 Installation

1 Package contents





Power cord



Audio cable

VGA signal cable (optional)

EDFU CD

tart guide

PHILIPS

) 📻



DVI cable (optional)

2

3

 $(\mathbf{4})$

G

6

Ø

◀

2

SENSOR : PowerSensor: U: To switch monitor's power on and off.


: Return to previous OSD level.


▲▼ :To adjust the OSD menu.

- To adjust volume of the display.
- SmartImage. There are 6 modes to be selected: Office, Photo, Movie, Game, Economy and Off.

1 Front view product description







■/OK : To access OSD menu.

Kensington anti-thief lock

2 AC power input

2 Connecting to your PC

PHILIPS

- 3 DVI-D input (available for selecting model)
- 4 VGA input
- 5 USB upstream and downstream
- 6 Audio input
- Earphone jack

Connect to PC

- 1. Connect the power cord to the back of the montior firmly.
- 2. Turn off your computer and unplug its power cable.
- 3. Connect the monitor signal cable to the video connector on the back of your computer.
- 4. Connect the PC audio cable to the audio connector on the back of your computer.
- 5. Plug the power cord of your computer and your monitor into a nearby outlet.
- 6. Connect the USB upstream port on the monitor and the USB port on your computer with a USB cable. The USB downstream port is now ready for any USB device to plug in.
- 7. Turn on your computer and monitor. If the monitor displays an image, installation is complete.

2.2 Operating the monitor

2 Description of the On Screen Display

What is On-Screen Display (OSD)?

On-Screen Display (OSD) is a feature in all Philips monitors. It allows an end user to adjust screen performance or select functions of the monitors directly through an on-screen instruction window. A user friendly on screen display interface is shown as below:

Monit	or Setup	
AUTO AI	ito	
P	owerSensor	
	put	
· Pi	cture	
🗹 Au	dio	
3 C	blor	
€£	inguage	
	SD Settings	

Basic and simple instruction on the control keys

In the OSD shown above users can press $\checkmark \land$ buttons at the front bezel of the monitor to move the cursor, **OK** to confirm the choice or change.

The OSD Menu


Below is an overall view of the structure of the On-Screen Display. You can use this as a reference when you want to work your way around the different adjustments later on.

Mai	n menu	Sub menu
\square	Auto	
	PowerSensor	On - 0, 1, 2, 3, 4 (available for selective models)
	rowersensor	Off
	Input	VGA
	input	DVI (available for selective models)
		Office
	SmartImage	Photo
		Movie
		Game
		Economy
		Off
		Picture Format — Wide screen,4:3
	Picture	- Brightness - 0~100
		SmartContrast On, Off
		Gamma — 1.8, 2.0, 2.2, 2.4, 2.6
		└── Volume
-	Audio	- Stand Alone - On, Off
		Mute On, Off
		Color Temp. — 5000K,6500K,7500K,8200K,9300K,11500K
-	Color	sRGB
		User Define Red: 0~100
		Green: 0~100
		Blue: 0~100
	Language	English , Español, Français, Deutsch, Italiano,
	0 0	торани, страна, стана, с Постория стана,
		Horizontal — 0~100
-	OSD Setting	Vertical — 0~100
		— Transparency — Off, 1, 2, 3, 4
		OSD Time out - 5, 10, 20, 30, 60
L	Setup	Power LED 0, 1, 2, 3, 4
		Pixel Orbiting On, Off Over Scan On, Off
		- Over Scan - On, Off - H. Position - 0~100
		V. Position — 0~100
		- V. Postuon - 0~100 - Phase - 0~100
		Clock 0~100
		Resolution Notification — On, Off
		Reset Yes, No
		Information

3 Resolution notification

Height adjustment


This monitor is designed for optimal performance at its native resolution, 1920x1080@60Hz. When the monitor is powered on at a different resolution, an alert is displayed on screen: Use 1920x1080@60Hz for best results. Display of the native resolution alert can be switched off from Setup in the OSD (On Screen Display) menu.

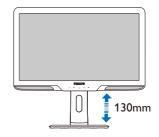

Pivot



4 Physical Function

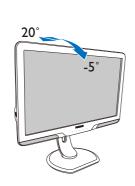

Swivel

Tilt




2.3 Remove the Base

Condition:

• For VESA standard mounting applications


Before you start disassembling the monitor base, please follow the instructions below to avoid damage or injury.


1. Remove the 4 screw covers.

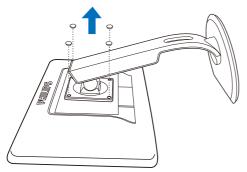

2. Remove the 4 screws and then remove the base from the monitor.




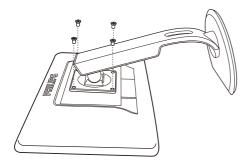

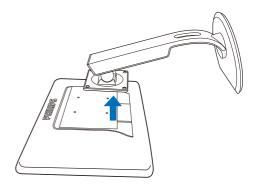

Note

This monitor accepts a 100mm × 100mm VESA-Compliant mounting interface.

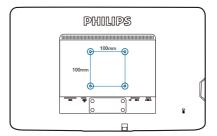

3. Product information

3.1 SmartImage

1 What is it?

SmartImage provides presets that optimize display for different types of content, dynamically adjusting brightness, contrast, color and sharpness in real time. Whether you're working with text applications, displaying images or watching a video, Philips SmartImage delivers great optimized monitor performance.

2 Why do I need it?

You want a monitor that delivers optimized display all your favorite types of content, SmartImage software dynamically adjust brightness, contrast, color and sharpness in real time to enhance your monitor viewing experience.

3 How does it work?

SmartImage is an exclusive, leading edge Philips technology that analyzes the content displayed on your screen. Based on a scenario you select, SmartImage dynamically enhances the contrast, color saturation and sharpness of images to enhance the contents being displayed - all in real time with the press of a single button. 4 How to enable SmartImage?



- 1. Press to 🗊 launch the SmartImage on screen display;
- 2. Keep pressing 🗊 to toggle between Office, Photo, Movie, Game, Economy and Off;
- 3. The SmartImage on screen display will remain on screen for 5 seconds or you can also press''OK'' to make confirmation.
- 4. When SmartImage is enabled, the sRGB scheme is disabled automatically. To use sRGB you need to disable SmartImage with the D button at the front bezel of your monitor.

Except using O key to scroll down, you can also press \checkmark buttons to choose and press "**OK**" to confirm selection and close the SmartImage OSD.

There are six modes to be selected: Office, Photo, Movie, Game, Economy and Off.

回7 Smart Image	
Office	
Photo	
Movie	
Game	
Economy	
Off	

- Office: Enhances text and dampens brightness to increase readability and reduce eye strain. This mode significantly enhances readability and productivity when you're working with spreadsheets, PDF files, scanned articles or other general office applications.
- Photo: This profile combines color saturation, dynamic contrast and sharpness enhancement to display photos and other images with outstanding clarity in vibrant colors - all without artifacts and faded colors.
- Movie: Ramped up luminance, deepened color saturation, dynamic contrast and razor sharpness displays every details in darker areas of your videos without color washout in brighter areas maintaining a dynamic natural values for the ultimate video display
- Game: Turn on over drive circuit for best response time, reduce jaggy edges for fast moving objects on screen, enhance contrast ratio for bright and dark scheme, this profile delivers the best gaming experience for gamers.
- Economy: Under this profile, brightness, contrast are adjusted and backlighting finetuned for just right display of everyday office applications and lower power consumption.
- Off: No optimization by SmartImage.

3.2 SmartContrast

1 What is it?

Unique technology that dynamically analyzes displayed content and automatically optimizes a monitor's contrast ratio for maximum visual clarity and viewing enjoyment, stepping up backlighting for clearer, crisper and brighter images or dimming backlighting for clear display of images on dark backgrounds.

2 Why do I need it?

You want the very best visual clarity and viewing comfort for every type of content. SmartContrast dynamically controls contrast and adjusts backlighting for clear, crisp, bright gaming and video images or displays clear, readable text for office work. By reducing your monitor's power consumption, you save on energy costs and extend the lifetime of your monitor.

3 How does it work?

When you activate SmartContrast, it will analyse the content you are displaying in real time to adjust colors and control backlight intensity. This function will dynamically enhance contrast for a great entertainment experience when viewing videos or playing games.

3.3 SmartSaturate

1 What is it?

Smart technology that controls color saturation, the degree to which one on screen color is blended in neighboring colors, to deliver rich and vibrant images for more entertainment fun when you are viewing videos.

2 Why do I need it?

You want rich, vibrant images for more entertainment fun when viewing photos or videos.

3 How does it work?

SmartSaturate dynamically controls color saturation, the degree to which on-screen color is blended in neighboring colors, to deliver rich, vibrant display for more entertainment fun when you are viewing images or videos in your display's Movie or Game mode. It is turned off for top quality display of office application and in the Economy mode to reduce power consumption.

3.4 SmartSharpness

1 What is it?

Smart technology that enhances sharpness when you need it for ultimate display performance and more entertainment fun when you are viewing videos or photos.

2 Why do I need it?

You want the ultimate in sharpness for more entertainment fun when viewing photos or videos.

3 How does it work?

Smart technology enhances sharpness when you need it for ultimate display performance and more entertainment fun when you are viewing videos or photos in the Movie or Game mode. It is turned off for top quality display of office applications and in the Economy mode to reduce power consumptions.

3.5 Philips SmartControl Premium

The new SmartControl Premium software by Phillips allows you to control your monitor via an easy to use on-screen graphic interface. Complicated adjustments are a thing of the past as this user friendly software guides you through finetuning resolution, Color calibration, Clock/Phase adjustments, RGB White point adjustment, etc.

Equipped with latest technology in core algorithm for fast processing and response, this Windows 7 compliant eye catching animated Icon based software is ready to enhance your experience with Philips monitors!

1 Installation

- Follow the instruction and complete the installation.
- You can launch after installation is completed.
- If you want to launch later, you can either click the shortcut on desktop or toolbar.

PHILIPS	www.philips.com/welcome
Required steps	Monitor driver and software installation
 Select Language: 	System requirements:
Welcome	PC running Windows 7, Vista, XP, 2000, 98.
 Monitor driver and software installation 	► Go to www.philips.com/welcome to download the latest version of monitor driver
 Planter driver and software installation 	
 Regarding 	Philips SmartControl
	System support and requirements:
Reference materials	1. System support Windows 7, Vista, XP. 2. Language support English, German, Spanish, French, Italian, Russian, Portuguese, Simplified Chinese 3. Philips Monitor Plag and Play support
 Quick Setup Quide 	Go to http://www.portrait.com/dtune/philesu/index.html to download the latest version of SmartControl
 Read User Navual 	to de la regularior para constante presentante constante en alest versan o association software.
 FAQ & Troubleshooting 	
	Quit Back Next

First launch -Wizard

- The first time after installation of SmartControl Premium, it will automatically go to Wizard for first time launch.
- The wizard will guide you through adjustment your monitor performance step by step.
- You can go to Plug-in menu to launch wizard later on as well.
- You can adjust more options without wizard by Standard pane.



2 Start with Standard pane:

Adjust menu:

- Adjust Menu allow you to adjust Brightness, Contrast, Focus, Position and Resolution.
- You can follow the instruction and do the adjustment.
- Cancel prompts user if you want to cancel installation.

SmartControl Premium

SmartControl Premium	PHILIPS
Adjust	Brightness Improvely adjusted Brightness will reach in a loss of detain darker image areas. Adjust the Brightness for the best possible picture quarky. 1. Lower the Brightness to the minimum level. 2. Rape the Brightness to the degrad level. 3. Adjust the Brightness an needed to achieve an equal separation of the strost.
Color Color Eco Eco Poton	Bightness 100 Undo Reset
Options Resolution	Undo Keset

SmartControl Premium

SmartControl Premium







SmartControl Premium

SmartControl Premium

PHILIPS

?×



2×

PHILIPS

Color menu:


- Color Menu allow you to adjust RGB, Black Level, White Point, Color Calibration, and SmartImage (Please refer to SmartImage section).
- You can follow the instruction and do the adjustment.
- Refer to below table for sub-menu item base on your input.
- Example for Color Calibration





- 1. "Show Me" starts color calibration tutorial.
- 2. Start starts the 6-step color calibration sequence.
- 3. Quick View loads the before/after images.
- 4. To return to Color home pane, click the Cancel button.
- Enable color calibration by default is on. If unchecked, does not allow for color calibration to happen, dimes out start and quick view buttons.
- 6. Must have patent info in calibration screen.

First color Calibration Screen:

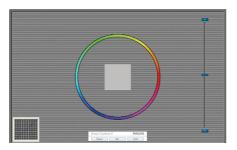

- Previous button is disabled until the second color screen.
- Next goes to the succeeding target (6-targets).
- Final next goes File>Presets pane.
- Cancel closes the UI and returns to the plug in page.

SmartImage

Allows user to change setting for better display setting based on content.

When Entertainment is set, SmartContrast and SmartResponse are enabled.



ECO



Theft Deterrence Pane will only be active when selecting Theft Deterrence Mode from the dropdown Plug Ins menu.



To enable Theft Deterrence, clicking Enable Theft Deterrence Mode button brings up the following screen:

- User can enter PIN between 4 and 9 digits numbers only.
- After entering PIN, Accept button takes user to the pop-up dialog box on the following page.
- Minimum minutes set to 5. Slider set to 5 by default.
- Does not require the display be attached to a different host to go into Theft Deterrence mode.



After creating PIN, the Theft Deterrence pane will indicate Theft Deterrence Enabled and provide PIN Options button:

- Theft Deterrence Enabled is displayed.
- Disable Theft Deterrence Mode opens pane screen on next page.
- PIN Options button only available after user creates PIN, button opens secure PIN web site.

Options>Preferences - Will only be active when selecting Preferences from the drop-down Options menu. On a non-supported display capable of DDC/Cl, only the Help and Options tabs are available.



- Displays current preference settings.
- A checked box enables the feature. The check box is a toggle.
- Enable Context Menu on desktop is checked (On) by default. Enable Context menu displays SmartControl Premium selections for Select Preset and Tune Display in the desktop right-click context menu. Disabled removes SmartControl Premium from the right click context menu.
- Enable Task Tray icon is checked (On) by default. Enable context menu shows the task tray menu for SmartControl Premium. A right click on the task tray icon displays the menu options for Help, Technical Support. Check for Upgrade, About, and Exit. When Enable task tray menu is disabled, the task tray icon will only display EXIT.
- Run at Startup is checked (On) by default. When disabled, SmartControl Premium will not launch at start or be in the task tray. The only way to launch SmartControl Premium is either from the desktop short cut or from the program file. Any preset set to run at startup will not load when this box is unchecked (Disabled).
- Enable transparency mode (Windows 7,Vista, XP). Default is 0% Opaque.

Options>Input - Will only be active when selecting Input from the drop-down Options menu. On a non-supported display capable of DDC/Cl, only the Help and Options tabs are available. All other SmartControl Premium tabs are not available. **Options>Audio** - Will only be active when selecting Volume from the drop-down Options menu.

On a non-supported display capable of DDC/Cl, only the Help and Options tabs are available.





- Display the Source instruction pane and current input source setting.
- On single input displays, this pane will not be visible.

Option>Auto Pivot



Help>User Manual - Will only be active when selecting User Manual from the drop-down Help menu. On a non-supported display capable of DDC/Cl, only the Help and Options tabs are available.



Help>Version - Will only be active when selecting Version from the drop- down Help menu. On a non-supported display capable of DDC/Cl, only the Help and Options tabs are available.



Context Sensitive menu

The Context Sensitive menu is Enabled by default. If Enable Context Menu has been checked in the Options>Preferences pane, then the menu will be visible.




The Context Menu has four entries:

- SmartControl Premium When selected the About Screen is displayed.
- Select Preset Provides a hierarchical menu of saved presets for immediate use. A check mark shows the currently selected preset. Facoty Preset can also be called from the drop down menu.
- Tune Display Opens the SmartControl Premium control panel.
- SmartImage Check current settings, Office, Photo, Movie, Game, Economy, Off.

Task Tray Menu Enabled

The task tray menu can be displayed by rightclicking on the SmartControl Premium icon from the task tray. Left Click will launch the application.

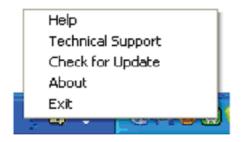

The task tray has five entries:

- Help Access to User Manual file: Open User Manual file using the default browser window.
- Technical Support displays the tech support page.
- Check for Update takes the user to PDI Landing and checks the user's version against the most current available.
- About Displays detailed reference information: product version, release information, and product name.
- Exit Close SmartControl Premium To run SmartControl Premium again either select SmartControl Premium from Program menu, double-click the desktop PC icon or restart the system.



Task Tray Menu Disabled

When the Task Tray is disabled in the preference folder, only the EXIT selection is available. To completely remove SmartControl Premium from the task tray, disable Run at Startup in Options>Preferences.


3.6 SmartDesktop Guide

1 SmartDesktop

SmartDesktop is in SmartControl Premium. Install SmartControl Premium and select SmartDesktop from Options.



- Align to partition check box will enable automatic alignment for the window when dragged into the defined partition.
- Select the desired partition by clicking on the icon. The partition will be applied to the desktop and the icon will be highlighted.
- Identify provides a quick way to view the grid.

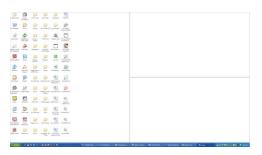

2 Drag and Drop Windows

Once the partitions are configured and Align to partition is selected a window can be dragged into the region and it will automatically align. When the window and mouse cursor are within the region, the region will become highlighted.

Note

If the outline of the region is not visible when dragging the window, "Show windows contents while dragging" is disabled. To enable:

- 1. In Control Panel, click System.
- Click Advanced system settings (For Vista & Win7 OS, this is located on the left sidebar)
- 3. In Performance section, click Settings.
- 4. In the box, check Show window contents while dragging, and click OK.

Other alternative path:

Vista

Control Panel > Personalization > Window Color and Appearance > Click "Open Classic appearance properties for more color options" > Click "Effects" button > check Show window contents while dragging

XP:

Display Properties>Appearance>Effects...> check Show window contents while dragging

Win 7:

No other alternative path available.

3 Title Bar Options

Desktop partition can be accessed from the title bar of the active window. This provides a quick and easy way to manage the desktop as well as sending any window to any partition without having to drag and drop. Move the cursor into the active window's title bar to access the drop down menu.



4 Right Click Menu

Right click on the Desktop Partition icon to view the drop down menu.



 Find Windows – In some cases, the user may have sent multiple windows to the same partition. Find Window will show all open windows and move the selected window to the forefront. 2. Desktop Partition – Desktop Partition shows the current selected partition and allows the user to quickly change to any of the partitions shown in the drop down.

A Dens two tans (a) (a) (b) (b) (b) (b) (b) (b) (b) (b) (b) (b					
Imati no mark Imat no mark Imati no mark Imat no mark <td< th=""><th>SmartControl Premium</th><th>· · · · · · · · · · · · · · · · · · ·</th><th></th><th></th><th>? ×</th></td<>	SmartControl Premium	· · · · · · · · · · · · · · · · · · ·			? ×
Alline Contensione 1 (10 1 21 20 21 20 21 20 21 20 21 20 20			ium. Install <u>SmartCon</u>	trol Premium and select	
A line free Konta to 7 (A) (C 1 = 1 = 1 = 1 = 1 = 1 = 1 = 1 = 1 = 1		<u>SmartDeskto</u>	pp Guide		_
B Z U - she x, x' 2 E E E E E E E ABBCcDi AaBbCcDi AABbCcl Align Off				Styles	i
A times new Roma 10 "A Al III III III III III IIII Alim Off			2 T Caption	Heading 1 Exit	
			AnBhCeDd		i

Note

If more than one display is attached, the user can select the targeted display to change the partition. The highlighted icon represents the current active partition.

- 3. Identify Partition Displays the outline grid on the desktop for the current partition.
- Align On/Align Off Enables/disables the drag and drop auto align feature.
- Exit Closes Desktop Partition and Display Tune. To re-initialize, launch Display Tune from the start menu or short cut on the desktop.


5 Left Click Menu

Left click on the Desktop Partition icon to quickly send the active window to any partition without having to drag and drop. Releasing the mouse will send the window to the highlighted partition.



6 Task Tray Right Click

The task tray also contains most of the features supported in the title bar (with the exception of automatically sending a window to any partition).

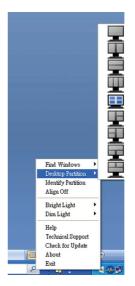

- Find Windows In some cases, the user may have sent multiple windows to the same partition. Find Window will show all open windows and move the selected window to the forefront.
- **Desktop Partition** Desktop Partition shows the current selected partition and allows the user to quickly change to any of the partitions shown in the drop down.
- Identify Partition Displays the outline grid on the desktop for the current partition.
- Align On/Align Off Enables/disables the drag and drop auto align feature.

7 SmartDesktop Partition Definitions

Name	Description	Image
Full Desktop	Applies all settings to the entire desktop.	_
Vertical	Assesses the screen resolution and divides the display into two evenly sized vertical regions. For 90/270 maintain vertical configuration.	1 2
Horizontal	Assesses the screen resolution and divides the display into two evenly sized horizontal regions. For 90/270 maintain horizontal configuration.	1 2
Vertical Triple	Assesses the screen resolution and divides the display into three evenly sized vertical regions. For 90 Partition 1 horizontal top Partition 2 horizontal center Partition 3 horizontal bottom. For 270 Partition 3 horizontal top Partition 2 horizontal center Partition 1 horizontal bottom.	1 2 3
Vertical Split Left	Assesses the screen resolution and divides the display into two vertical regions, the left hand side is a single region, the right hand side is split into two evenly sized regions For 90 Partition 1 on top Partition 2&3 on bottomFor 270 Partition 1 on bottom Partition 2&3 on top.	1 2 3
Vertical Split Right	Assesses the screen resolution and divides the display into two vertical regions, the right hand side is a single region, the left hand side is split into two evenly sized regions For 90 Partition 1&2 on top Partition 3 on bottom. For 270 Partition 3 on top Partition 1&2 on bottom.	1 3

Name	Description	Image
Horizontal Split Top	Assesses the screen resolution and divides the display into two evenly sized horizontal regions, the top region is single, the bottom region is spilt into two evenly sized regions For 90 Partition 1 on right side Vertical Partition 2&3 on left side Vertical. For 270 Partition 1 on left side Vertical Partition 2&3 on right side Vertical.	2 3
Horizontal Split Bottom	Assesses the screen resolution and divides the display into two evenly sized horizontal regions, the bottom region is single, the top region is spilt into two evenly sized regions For 90 Partition 1&2 on right side Vertical Partition 3 on left side Vertical. For 270 Partition 1&2 on left side Vertical Partition 3 on right side Vertical.	
Even Split	Assesses the screen resolution and divides the display into four evenly sized regions.	1 3 2 4

3.7 PowerSensor[™]

1 How does it work?

- PowerSensor works on principle of transmission and reception of harmless "infrared" signals in order to detect userpresence.
- When the user is in front of the monitor the monitor operates normally, at the predetermined settings that the user has seti.e. Brightness, contrast, color, etc
- Assuming that the monitor was set to 100% of brightness for example, when the user leaves his seat and is no longer in front of the monitor, the monitor automatically reduces the power consumption up to 80%.

User present in front

User not present



Power consumption as illustrated above is for reference purpose only

2 Setting

Default settings

At its default setting, (Setting 3), PowerSensor is designed to detect the presence of the user located between 30 and 100 cm (12 and 40 inches) from the display and within five degrees left or right of the monitor.

Custom settings

If you prefer to be in a position outside the perimeters listed above, choose a higher strength signal for optimal detection efficiency: The higher the setting, the stronger the detection signal. For maximum PowerSensor efficiency and proper detection, please position yourself directly in front of your monitor.

- If you choose to position yourself more than 100 cm or 40 inches from the monitor use the maximum detection signal for distances up to 120cm or 47 inches. (setting 4)
- Since some dark colored clothing tends to absorb infrared signals even when the user

is within 100 cm or 40 inches of the display, step up signal strength when wearing black or other dark garb.


You can return to the default mode at any time (setting 3)

Hot key PHILIPS Sensor distance



000

Landscape/Portrait mode



How to adjust settings

If PowerSensor is not operating correctly inside or outside the default range, here's how to fine-tune detection:


- Press the PowerSensor hot key
- You will find the default position '3' on the adjustment bar.
- Adjust the PowerSensor detection adjustment to Setting 4 and press OK.
- Test the new setup to see if PowerSensor properly detects you in your current position.
- PowerSensor function is designed to work in Landscape mode (horizontal position) only. After PowerSensor turn on it, it will automatically turn Off if the monitor is used in Portrait mode (90 degree/vertical position); it will automatically turn ON if monitor is returned to its default Landscape position.

Note e

A manually selected PowerSensor mode will remain operational unless and until it is readjusted or the default mode is recalled. If you find that the PowerSensor is excessively sensitive to nearby motion for some reason, please adjust to a lower signal strength.

3.8 Philips' Flat Panel Monitors Pixel Defect Policy

Philips strives to deliver the highest quality products. We use some of the industry's most advanced manufacturing processes and practice stringent quality control. However, pixel or sub pixel defects on the TFT monitor panels used in flat panel monitors are sometimes unavoidable. No manufacturer can guarantee that all panels will be free from pixel defects, but Philips guarantees that any monitor with an unacceptable number of defects will be repaired or replaced under warranty. This notice explains the different types of pixel defects and defines acceptable defect levels for each type. In order to gualify for repair or replacement under warranty, the number of pixel defects on a TFT monitor panel must exceed these acceptable levels. For example, no more than 0.0004% of the sub pixels on a 19" XGA monitor may be defective. Furthermore, Philips sets even higher quality standards for certain types or combinations of pixel defects that are more noticeable than others. This policy is valid worldwide.

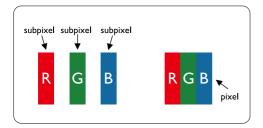

Pixels and Sub pixels


A pixel, or picture element, is composed of three sub pixels in the primary colors of red, green and blue. Many pixels together form an image. When all sub pixels of a pixel are lit, the three colored sub pixels together appear as a single white pixel. When all are dark, the three colored sub pixels together appear as a single black pixel. Other combinations of lit and dark sub pixels appear as single pixels of other colors.

Types of Pixel Defects


Pixel and sub pixel defects appear on the screen in different ways. There are two categories of pixel defects and several types of sub pixel defects within each category.

Bright Dot Defects

Bright dot defects appear as pixels or sub pixels that are always lit or 'on'.That is, a bright dot is a sub-pixel that stands out on the screen when the monitor displays a dark pattern.There are the types of bright dot defects:

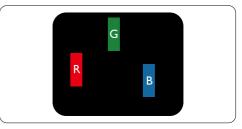


One lit red, green or blue sub pixel

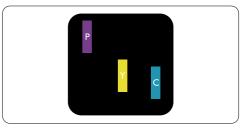

Two adjacent lit sub pixels:

- Red + Blue = Purple
- Red + Green = Yellow
- Green + Blue = Cyan (Light Blue)

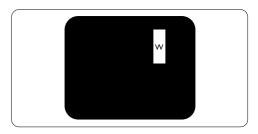



Three adjacent lit sub pixels (one white pixel)

A red or blue bright dot must be more than 50 percent brighter than neighboring dots while a green bright dot is 30 percent brighter than neighboring dots.

Black Dot Defects

Black dot defects appear as pixels or sub pixels that are always dark or 'off'.That is, a dark dot is a sub-pixel that stands out on the screen when the monitor displays a light pattern.These are the types of black dot defects:

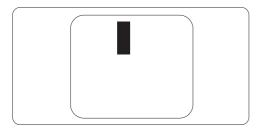

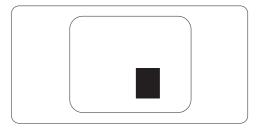

Proximity of Pixel Defects

Because pixel and sub pixels defects of the same type that are near to one another may be more noticeable, Philips also specifies tolerances for the proximity of pixel defects.

Pixel Defect Tolerances

In order to qualify for repair or replacement due to pixel defects during the warranty period, a TFT monitor panel in a Philips flat panel monitor must have pixel or sub pixel defects exceeding the tolerances listed in the following tables.

BRIGHT DOT DEFECTS	ACCEPTABLE LEVEL
MODEL	235P2/235PL2
1 lit subpixel	3
2 adjacent lit subpixels	1
3 adjacent lit subpixels (one white pixel)	0
Distance between two bright dot defects*	>15mm
Total bright dot defects of all types	3

BLACK DOT DEFECTS	ACCEPTABLE LEVEL
MODEL	235P2/235PL2
1 dark subpixel	5 or fewer
2 adjacent dark subpixels	2 or fewer
3 adjacent dark subpixels	0
Distance between two black dot defects*	>15mm
Total black dot defects of all types	5 or fewer

TOTAL DOT DEFECTS	ACCEPTABLE LEVEL
MODEL	235P2/235PL2
Total bright or black dot defects of all types	5 or fewer

Solution Note

1 or 2 adjacent sub pixel defects = 1 dot defect This monitor is ISO9241-307 compliant.

4 Technical Specifications

Picture/Display			
Monitor panel type	TFT-LCD		
Backlight	CCFL (235P2), LED (235PL2)		
Panel size	23'' W (58.4 cm)		
Aspect ratio	16:9		
Pixel Pitch	0.266 x 0.266 mm		
Brightness	300 cd/m² (235P2); 250 cd/m² (235PL2)		
SmartContrast	500,000:1 (235P2); 20,000,000:1 (235PL2)		
Contrast ratio (typical)	1000:1		
Response time (typical)	5 ms		
Optimum Resolution	1920 x 1080 @ 60Hz		
Viewing angle	176° (H) / 170° (V) @ C/R > 5		
Picture Enhancement	SmartImage		
Display colors	16.7 M		
Vertical refresh rate	56Hz -76Hz		
Horizontal Frequency	30kHz - 80kHz		
sRGB	YES		
Connectivity			
Signal input	DVI-D (Digital),VGA (Analog)		
USB	USB 2.0 × 1		
Input Signal	Separate Sync, Sync on Green		
Audio In/Out	Stereo Audio		
Convenience			
Build-in Audio	1.5W x 2		
User Convenience	Image: Image		
OSD Languages	English, French, German, Italian, Russian, Spanish,		
	Simplified Chinese, Portuguese		
Other convenience	VESA mount (100 x 100mm), Kensington lock		
Plug & Play Compatibility	DDC/Cl, sRGB, Windows 7/Vista/XP, Mac OSX, Linux		
Stand			
Tilt	-5/+20		
Swivel	-65/+65		
Height adjustment	130mm		

On mode 42.24W (typ.), 52W (max.) (with audio and USB x 1) On mode (ECO mode) (typical) 24.5W Energy Consumption (EnergyStar 5.0 test method) AC Input Voltage at 100VAC +/-SVAC, 50Hz +/- 3Hz AC Input Voltage at 115VAC +/-SVAC, 60Hz +/- 3Hz AC Input Voltage at 20VAC +/-SVAC, 60Hz +/- 3Hz AC Input Voltage at 100VAC +/-SVAC, 60Hz +/- 3Hz AC Input Voltage at AC Input Voltage at 100VAC +/-SVAC, 50Hz +/- 3Hz AC Input Voltage at AC Input Voltage at 100VAC +/-SVAC, 50Hz +/- 3Hz AC Input Voltage at AC Input Voltage at 100VAC +/-SVAC, 50Hz +/- 3Hz AC Input Voltage at AC Input Voltage at 100VAC +/-SVAC, 50Hz +/- 3Hz AC Input Voltage at AC Input Voltage at 100VAC +/-SVAC, 50Hz +/- 3Hz AC Input Voltage at AC Input Voltage at 100VAC +/-SVAC, 60Hz +/- 3Hz AC Input Voltage at AC Input Voltage at 100VAC +/-SVAC, 60Hz +/- 3Hz AC Input Voltage at 115VAC +/-SVAC, 60Hz +/- 3Hz AC Input Voltage at 100VAC +/-SVAC,	Power (235P2)					
On mode (ECO mode) (typical) 24.5W Energy Consumption (Energy/Star 5.0 test method) AC Input Voltage at 100VAC +/-5VAC, 50Hz +/-3Hz AC Input Voltage at 115VAC +/-5VAC, 60Hz +/-3Hz AC Input Voltage at 230VAC +/-5VAC, 50Hz +/-3Hz Normal Operation (typical) 28.62W 27.65W 27.5W Sleep (typical) 0.1W 0.1W 0.1W 0.1W Off 0.1W 0.1W 0.1W 0.1W 0.1W Heat Dissipation* AC Input Voltage at 100VAC +/-5VAC, 50Hz +/-3Hz AC Input Voltage at 230VAC +/-5VAC, 60Hz +/-3Hz AC Input Voltage at 230VAC +/-5VAC, 50Hz +/-3Hz 20Hz +/-3Hz 50Hz +/-3Hz Normal Operation 97.68BTU 94.3BTU 0.34BTU 0.34BTU 0.34BTU Sleep (typical) 0.34BTU 0.34BTU 0.34BTU 0.34BTU 0.34BTU On mode 25W (typ.). 36W (max) (with audio and USB x 1) 0 0 0 230VAC +/-5VAC, 50Hz +/-3Hz 50Hz +/-3Hz 50Hz +/-3Hz Normal Operation (typical) 17.74W AC Input Voltage at 100VAC +/-5VAC, 50Hz +/-3Hz 20VAC +/-5VAC, 50Hz +/-3Hz 50Hz +/-3Hz 50Hz +/-3Hz Normal Operation (typical) 22		42.24W (typ.), 52W (max.) (with audio and USB x 1)				
Energy Consumption (EnergyStar 5.0 test method)AC Input Voltage at 100VAC +/.5VAC, 50Hz +/. 3HzAC Input Voltage at 115VAC +/.5VAC, 50Hz +/. 3HzAC Input Voltage at 50Hz +/. 3HzAC Input Voltage at 50Hz +/. 3HzNormal Operation (typical)0.1W0.1W0.1W0.1WOff0.1W0.1W0.1W0.1WHeat Dissipation*AC Input Voltage at 100VAC +/.5VAC, 50Hz +/.3HzAC Input Voltage at 60Hz +/.3HzAC Input Voltage at 200VAC +/.5VAC, 50Hz +/.3HzAC Input Voltage at 200VAC +/.5VAC, 50Hz +/.3HzNormal Operation97.68BTU94.37BTU93.86BTUSleep (typical)0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTUOm mode25W (typ.), 36W (max) (with audio and USB x 1)On mode (ECO mode) (typical)17.74WEnergy Consumption (EnergyStar 5.0 test method)AC Input Voltage at 100VAC +/.5VAC, 50Hz +/.3HzAC Input Voltage at 200VAC +/.5VAC, 50Hz +/.3HzNormal Operation (typical)22.68W22.46W22.38WSleep (typical)0.1W0.1W0.1WOff0.1W0.1W0.1WOff0.1W0.1W0.1WOff0.1W0.1W0.1WOff0.1W0.1W0.1WOff0.1W0.1W0.1WOff0.1W0.1W0.1WOff0.1W0.1W0.1WOff0.1W0.1W0.1WOff0.34BTU0.34BTUOff0.34BTU0.34B	On mode (ECO mode) (typical)					
S0Hz +/- 3Hz 60Hz +/- 3Hz 50Hz +/- 3Hz 50Hz +/- 3Hz Normal Operation (typical) 28.62W 27.55W 27.5W Sleep (typical) 0.1W 0.1W 0.1W 0.1W Off 0.1W 0.1W 0.1W 0.1W 0.1W Heat Dissipation* AC Input Voltage at 100VAC +/-5VAC, 50Hz +/-3Hz 60Hz +/-3Hz 50Hz +/-3Hz 50Hz +/-3Hz Normal Operation 97.68BTU 94.37BTU 93.86BTU 0.34BTU 2.36W 2.246W 2.36W 2.30VAC +/-5VAC, 60Hz		AC Input Voltage at AC Input Voltage at AC Input Vo				
Normal Operation (typical) 28.62W 27.55W 27.55W Sleep (typical) 0.1W 0.1W 0.1W 0.1W Off 0.1W 0.1W 0.1W 0.1W Heat Dissipation* AC Input Voltage at 100VAC +/-5VAC, 50Hz +/-3Hz AC Input Voltage at 115VAC +/-5VAC, 60Hz +/-3Hz AC Input Voltage at 120VAC +/-5VAC, 50Hz +/-3Hz AC Input Voltage at 230VAC +/-5VAC, 60Hz +/-3Hz S0Hz +/-3Hz Normal Operation 97.68BTU 94.37BTU 93.86BTU Sleep (typical) 0.34BTU 0.34BTU 0.34BTU Off 0.34BTU 0.34BTU 0.34BTU Off 0.34BTU 0.34BTU 0.34BTU On mode 25W (typ.), 36W (max) (with audio and USB x 1) 0 On mode 25W (typ.), 36W (max) (with audio and USA x 1) 230VAC +/-5VAC, 60Hz +/-3Hz 50Hz +/-3Hz Normal Operation (typical) 22.68W 22.46W 22.38W 230VAC +/-5VAC, 60Hz +/-3Hz 50Hz +/-3Hz Normal Operation (typical) 0.1W 0.1W 0.1W 0.1W Heat Dissipation* AC Input Voltage at 100VAC +/-5VAC, 50Hz +/-3Hz 60Hz +/-3Hz	(EnergyStar 5.0 test method)	100VAC +/-5VAC,	115VAC +/-5VAC,	230VAC +/-5VAC,		
Sleep (typical) 0.1W 0.1W 0.1W Off 0.1W 0.1W 0.1W 0.1W Heat Dissipation* AC Input Voltage at 100VAC +/-SVAC, 50Hz +/-3Hz AC Input Voltage at 115VAC +/-SVAC, 50Hz +/-3Hz 20VAC +/-SVAC, 50Hz +/-3Hz 20VAC +/-SVAC, 50Hz +/-3Hz Normal Operation 97.688TU 94.378TU 93.868TU Sleep (typical) 0.34BTU 0.34BTU 0.34BTU Off 0.34BTU 0.34BTU 0.34BTU Off 0.34BTU 0.34BTU 0.34BTU On mode 25W (typ.), 36W (max) (with audio and USB x 1) 0 On mode (ECO mode) (typical) 17.74W 200VAC +/-5VAC, 50Hz +/- 3Hz AC Input Voltage at 115VAC +/-5VAC, 60Hz +/- 3Hz AC Input Voltage at 22.46W 22.38W Sleep (typical) 0.1W 0.1W 0.1W 0.1W Off 0.1W 0.1W 0.1W 0.1W Gene (typical) 0.1W 0.1W 0.1W 0.1W Off 0.34BTU 0.34BTU 0.34BTU 0.34BTU Sleep (typical) 0.1W 0.1W <		50Hz +/- 3Hz	60Hz +/- 3Hz			
Off0.1W0.1W0.1WHeat Dissipation*AC Input Voltage at 100VAC +/-SVAC, 50Hz +/-3HzAC Input Voltage at 115VAC +/-SVAC, 60Hz +/-3HzAC Input Voltage at 230VAC +/-SVAC, 50Hz +/-3HzNormal Operation97.68BTU94.37BTU93.86BTUSleep (typical)0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTUOm mode25W (typ.), 36W (max) (with audio and USB x 1)On mode25W (typ.), 36W (max) (with audio and USB x 1)On mode (ECO mode) (typical)17.74WEnergy Consumption (Energy Consumption (Energy Consumption (typical))AC Input Voltage at 100VAC +/-5VAC, 50Hz +/- 3HzAC Input Voltage at 22.66WNormal Operation (typical)22.68W22.46W22.38WSleep (typical)0.1W0.1W0.1WOff0.1W0.1W0.1WHeat Dissipation*AC Input Voltage at 100VAC +/-5VAC, 50Hz +/-3HzAC Input Voltage at 115VAC +/-5VAC, 20Hz +/-3HzNormal Operation (typical)0.1W0.1WOff0.1W0.1WOff0.34BTU0.34BTUOger (typical)0.34BTU0.34BTUOff0.34BTU0.34BTUOff0.34BTU0.34BTUOff0.34BTU0.34BTUOff0.34BTU0.34BTUOff0.34BTU0.34BTUOff0.34BTU0.34BTUOff0.34BTU0.34BTUOff0.34BTU0.34BTUOff0.34BTU0.34BTU<	Normal Operation (typical)	28.62W	27.65W	27.5W		
Heat Dissipation* AC Input Voltage at 100VAC +/-5VAC, 50Hz +/ -3Hz AC Input Voltage at 230VAC +/-5VAC, 60Hz +/ -3Hz AC Input Voltage at 230VAC +/-5VAC, 50Hz +/ -3Hz Normal Operation 97.68BTU 94.37BTU 93.66BTU Sleep (typical) 0.34BTU 0.34BTU 0.34BTU Off 0.34BTU 0.34BTU 0.34BTU Om mode 25W (typ.), 36W (max) (with audio and USB x 1) 0 On mode 25W (typ.), 36W (max) (with audio and USB x 1) 0 On mode (ECO mode) (typical) 17.74W AC Input Voltage at 100VAC +/-5VAC, 50Hz +/-3Hz AC Input Voltage at 115VAC +/-5VAC, 60Hz +/- 3Hz AC Input Voltage at 230VAC +/-5VAC, 60Hz +/- 3Hz Normal Operation (typical) 22.68W 22.46W 22.38W Sleep (typical) 0.1W 0.1W 0.1W Off 0.34BTU 0.34BTU 0.34BTU Off 0.34BTU 0.34BTU	Sleep (typical)	0.1W	0.1W	0.1W		
$\begin{array}{c c c c c c c c c c c c c c c c c c c $						
S0Hz +/ -3Hz 60Hz +/ -3Hz S0Hz +/ -3Hz Normal Operation 97.68BTU 94.37BTU 93.86BTU Sleep (typical) 0.34BTU 0.34BTU 0.34BTU Off 0.34BTU 0.34BTU 0.34BTU Om mode 25W (typ.), 36W (max) (with audio and USB × 1) 0.34BTU On mode 25W (typ.), 36W (max) (with audio and USB × 1) 0.34BTU On mode (ECO mode) (typical) 17.74W AC Input Voltage at 100VAC +/-5VAC, 50Hz +/-3Hz AC Input Voltage at 100VAC +/-5VAC, 50Hz +/-3Hz SOHz +/-3Hz 50Hz +/-3Hz 50	Heat Dissipation*					
Normal Operation 97.68BTU 94.37BTU 93.86BTU Sleep (typical) 0.34BTU 0.34BTU 0.34BTU 0.34BTU Off 0.34BTU 0.34BTU 0.34BTU 0.34BTU Power (23SPL2) 0 0 0 0.34BTU 0.34BTU 0.34BTU On mode 25W (typ.), 36W (max) (with audio and USB x 1) 0 0 0 0.34BTU 0.34BTU On mode 25W (typ.), 36W (max) (with audio and USB x 1) 0 0 0.34BTU 0.34BTU 0.34BTU On mode (ECO mode) (typical) 17.74W Energy Consumption AC Input Voltage at 115VAC +/-5VAC, 50Hz +/-3Hz 30VAC +/-5VAC, 50Hz +/-3Hz 20VAC +/-5VAC, 50Hz +/-3Hz 30VAC +/-5VAC, 50Hz +/-3Hz 30VAC +/-5VAC, 50Hz +/-3Hz 50Hz +/-3Hz 30Hz +/-3Hz		· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	· · · ·		
Sleep (typical) $0.34BTU$ $0.34BTU$ $0.34BTU$ $0.34BTU$ Off $0.34BTU$ $0.34BTU$ $0.34BTU$ $0.34BTU$ Power (235PL2) $25W$ (typ.), 36W (mx) (with audio and USB x 1) $0n mode$ $25W$ (typ.), 36W (mx) (with audio and USB x 1)On mode (ECO mode) (typical) $17.74W$ $17.74W$ AC Input Voltage at $100VAC +/-SVAC,$ $50Hz +/-3Hz$ AC Input Voltage at $100VAC +/-SVAC,$ $50Hz +/-3Hz$ AC Input Voltage at $100VAC +/-SVAC,$ $50Hz +/-3Hz$ AC Input Voltage at $115VAC +/-SVAC,$ $50Hz +/-3Hz$ AC Input Voltage at $100VAC +/-SVAC,$ $50Hz +/-3Hz$ AC Input Voltage at $230VAC +/-SVAC,$ $50Hz +/-3Hz$ AC Input Voltage at $30VAC +/-SVAC,$ $50Hz +/-3Hz$ <						
Off 0.34BTU 0.34BTU 0.34BTU 0.34BTU Power (235PL2) On mode 25W (typ.), 36W (max) (with audio and USB x 1) On mode (ECO mode) (typical) 17.74W AC Input Voltage at 100VAC +/-5VAC, 50Hz +/-3Hz AC Input Voltage at 200VAC +/-5VAC, 50Hz +/-3Hz AC Input Voltage at 200VAC +/-5VAC, 50Hz +/-3Hz AC Input Voltage at 200VAC +/-5VAC, 50Hz +/-3Hz SoHz +/-3Hz						
Power (23SPL2)On mode25W (typ.), 36W (max) (with audio and USB × 1)On mode (ECO mode) (typical)17.74WEnergy Consumption (EnergyStar 5.0 test method)AC Input Voltage at 100VAC +/-5VAC, 50Hz +/- 3HzAC Input Voltage at 115VAC +/-5VAC, 60Hz +/- 3HzNormal Operation (typical)22.68W22.46W22.38WSleep (typical)0.1W0.1W0.1WOff0.1W0.1W0.1WOff0.1W0.1W0.1WOff0.1W0.1W0.1WOrmal Operation *AC Input Voltage at 100VAC +/-5VAC, 50Hz +/ -3HzAC Input Voltage at 200VAC +/-5VAC, 50Hz +/ -3HzNormal Operation77.41BTU76.66BTU76.38BTUNormal Operation77.41BTU76.66BTU0.34BTUOff0.34BTU0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTU0.34BTUOff0.100.34BTU0.34BTU0.34BTUPower LED indicatorOn mode: White, Standby/Sleep mode: White (blinking) Build-in, 100-240VAC, 50/60HzVDimension566 × 517 × 250mmVProduct with stand (WxHxD)566 × 517 × 250mmVBox dimension (WxHxD)672 × 268 × 434mmVWeightProduct with stand6.4kg (235P2), 5.7kg (235PL2)Product with stand6.4kg (235P2), 5.7kg (235PL2)V						
On mode 25W (typ.), 36W (max) (with audio and USB x 1) On mode (ECO mode) (typical) 17.74W Energy Consumption (EnergyStar 5.0 test method) AC Input Voltage at 100VAC +/-5VAC, 50Hz +/- 3Hz AC Input Voltage at 230VAC +/-5VAC, 60Hz +/- 3Hz AC Input Voltage at 230VAC +/-5VAC, 50Hz +/- 3Hz Normal Operation (typical) 22.68W 22.46W 22.38W Sleep (typical) 0.1W 0.1W 0.1W Off 0.1W 0.1W 0.1W Off 0.1W 0.1W 0.1W Off 0.1W 0.1W 0.1W Heat Dissipation* AC Input Voltage at 100VAC +/-5VAC, 50Hz +/ -3Hz AC Input Voltage at 230VAC +/-5VAC, 50Hz +/ -3Hz AC Input Voltage at 230VAC +/-5VAC, 50Hz +/ -3Hz Normal Operation 77.41BTU 76.66BTU 76.38BTU Sleep (typical) 0.34BTU 0.34BTU 0.34BTU Off 0.34BTU 0.34BTU 0.34BTU Orewer LED indicator On mode: White, Standby/Sleep mode: White (blinking) Power Supply Build-in, 100-240VAC, 50/60Hz Image: Standby/Sleep mode: White (blinking) Product with stand 566 × 517 × 250mm		0.34BTU	0.34BTU	0.34BTU		
On mode (ECO mode) (typical) 17.74W Energy Consumption (EnergyStar 5.0 test method) AC Input Voltage at 100VAC +/-5VAC, 50Hz +/- 3Hz AC Input Voltage at 115VAC +/-5VAC, 60Hz +/- 3Hz AC Input Voltage at 230VAC +/-5VAC, 60Hz +/- 3Hz Normal Operation (typical) 22.68W 22.46W 22.38W Sleep (typical) 0.1W 0.1W 0.1W Off 0.1W 0.1W 0.1W Off 0.1W 0.1W 0.1W Heat Dissipation* AC Input Voltage at 100VAC +/-5VAC, 50Hz +/ -3Hz AC Input Voltage at 115VAC +/-5VAC, 50Hz +/ -3Hz AC Input Voltage at 230VAC +/-5VAC, 50Hz +/ -3Hz Normal Operation 77.41BTU 76.66BTU 76.38BTU Sleep (typical) 0.34BTU 0.34BTU 0.34BTU Off 0.34BTU 0.34BTU 0.34BTU Off On mode: White, Standby/Sleep mode: White (blinking) 9 Power Supply Build-in, 100-240VAC, 50/60Hz						
Energy Consumption (EnergyStar 5.0 test method)AC Input Voltage at 100VAC +/-SVAC, 50Hz +/- 3HzAC Input Voltage at 115VAC +/-SVAC, 60Hz +/- 3HzAC Input Voltage at 230VAC +/-SVAC, 50Hz +/- 3HzNormal Operation (typical)22.68W22.46W22.38WSleep (typical)0.1W0.1W0.1WOff0.1W0.1W0.1WOff0.1W0.1W0.1WHeat Dissipation*AC Input Voltage at 100VAC +/-SVAC, 50Hz +/-3HzAC Input Voltage at 60Hz +/-3HzAC Input Voltage at 230VAC +/-SVAC, 230VAC +/-SVAC, 50Hz +/-3HzNormal Operation77.41BTU76.66BTU76.38BTUSleep (typical)0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTUPower LED indicatorOn mode: White, Standby/Sleep mode: White (blinking)Power SupplyBuild-in, 100-240VAC, 50/60HzVerticeDimension566 x 517 x 250mmVerticeProduct with stand (WxHxD)566 x 360 x 57mmVerticeBox dimension (WxHxD)672 x 268 x 434mmVerticeWeight6.4kg (235P2), 5.7kg (235PL2)Product without standProduct with stand6.4kg (235P2), 5.7kg (235PL2)Vertice			ax) (with audio and US	SB x 1)		
(EnergyStar 5.0 test method) 100VAC +/-5VAC, 50Hz +/- 3Hz 115VAC +/-5VAC, 60Hz +/- 3Hz 230VAC +/-5VAC, 50Hz +/ -3Hz Normal Operation (typical) 22.68W 22.46W 22.38W Sleep (typical) 0.1W 0.1W 0.1W Off 0.1W 0.1W 0.1W Heat Dissipation* AC Input Voltage at 100VAC +/-5VAC, 50Hz +/ -3Hz AC Input Voltage at 230VAC +/-5VAC, 50Hz +/ -3Hz AC Input Voltage at 230VAC +/-5VAC, 50Hz +/ -3Hz Normal Operation 77.41BTU 76.66BTU 76.38BTU Sleep (typical) 0.34BTU 0.34BTU 0.34BTU Off 0.34BTU 0.34BTU 0.34BTU Off 0.34BTU 0.34BTU 0.34BTU Off 0.34BTU 0.34BTU 0.34BTU Power LED indicator On mode: White, Standby/Sleep mode: White (blinking) Power Supply Build-in, 100-240VAC, 50/60Hz Image: Solution (WXHxD) S66 x 360 x 57mm 566 x 360 x 57mm Image: Solution (WXHxD) Product without stand 672 x 268 x 434mm Image: Solution (WXHxD) Box dimension (WxHxD) 672 x 268 x 434mm Image:	, , , , , , , , , , , , , , , , , , , ,		[. <u>.</u>			
S0Hz +/- 3Hz 60Hz +/- 3Hz 50Hz +/- 3Hz Normal Operation (typical) 22.68W 22.46W 22.38W Sleep (typical) 0.1W 0.1W 0.1W Off 0.1W 0.1W 0.1W Heat Dissipation* AC Input Voltage at 100VAC +/-5VAC, 50Hz +/-3Hz AC Input Voltage at 230VAC +/-5VAC, 60Hz +/-3Hz AC Input Voltage at 230VAC +/-5VAC, 50Hz +/-3Hz Normal Operation 77.41BTU 76.66BTU 76.38BTU Sleep (typical) 0.34BTU 0.34BTU 0.34BTU Off 0.34BTU 0.34BTU 0.34BTU Off 0.34BTU 0.34BTU 0.34BTU Power LED indicator On mode:White, Standby/Sleep mode:White (blinking) Power Power Supply Build-in, 100-240VAC, 50/60Hz V Product with stand (WXHxD) 566 x 517 x 250mm V V Product without stand 672 x 268 x 434mm V V Weight Erzek x 434mm V V V Product with stand 6.4kg (235P2), 5.7kg (235PL2) Product without stand 4.2kg (235P2), 3.5kg (235PL2)			AC Input Voltage at			
Normal Operation (typical) 22.68W 22.46W 22.38W Sleep (typical) 0.1W 0.1W 0.1W 0.1W Off 0.1W 0.1W 0.1W 0.1W Heat Dissipation* AC Input Voltage at 100VAC +/-5VAC, 50Hz +/-3Hz AC Input Voltage at 115VAC +/-5VAC, 60Hz +/-3Hz AC Input Voltage at 230VAC +/-5VAC, 50Hz +/-3Hz Normal Operation 77.41BTU 76.66BTU 76.38BTU Sleep (typical) 0.34BTU 0.34BTU 0.34BTU Off 0.34BTU 0.34BTU 0.34BTU Off 0.34BTU 0.34BTU 0.34BTU Off 0.34BTU 0.34BTU 0.34BTU Off 0.34BTU 0.34BTU 0.34BTU Power LED indicator On mode:White, Standby/Sleep mode:White (blinking) Power Supply Build-in, 100-240VAC, 50/60Hz U V V Product with stand (WXHXD) 566 × 360 × 57mm V S66 × 360 × 57mm Product without stand 6.4kg (235P2), 5.7kg (235PL2) V V Product with stand 6.4kg (235P2), 3.5kg (235PL2)	(EnergyStar 5.0 test method)	· · · · · · · · · · · · · · · · · · ·				
Sleep (typical)0.1W0.1W0.1WOff0.1W0.1W0.1WHeat Dissipation*AC Input Voltage at 100VAC +/-5VAC, 50Hz +/ -3HzAC Input Voltage at 115VAC +/-5VAC, 60Hz +/ -3HzAC Input Voltage at 230VAC +/-5VAC, 50Hz +/ -3HzNormal Operation77.41BTU76.66BTU76.38BTUSleep (typical)0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTUPower LED indicatorOn mode: White, Standby/Sleep mode: White (blinking)Power SupplyBuild-in, 100-240VAC, 50/60HzImage: Standby/Sleep mode: White (blinking)Product with stand (WxHxD)566 x 517 x 250mmImage: Standby/Sleep mode: White (blinking)Product with stand (WxHxD)566 x 360 x 57mmImage: Standby/SleepWeightImage: Standby/SleepImage: Standby/SleepProduct with stand6.4kg (235P2), 5.7kg (235PL2)Image: Standby/SleepProduct with stand4.2kg (235P2), 3.5kg (235PL2)Image: Standby/Sleep						
Off0.1W0.1W0.1WHeat Dissipation*AC Input Voltage at 100VAC +/-5VAC, 50Hz +/-3HzAC Input Voltage at 115VAC +/-5VAC, 60Hz +/-3HzAC Input Voltage at 230VAC +/-5VAC, 50Hz +/-3HzNormal Operation77.41BTU76.66BTU76.38BTUSleep (typical)0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTUPower LED indicatorOn mode: White, Standby/Sleep mode: White (blinking)Power SupplyBuild-in, 100-240VAC, 50/60HzTermProduct with stand (WxHxD)566 x 517 x 250mm566 x 360 x 57mmProduct without stand (WxHxD)672 x 268 x 434mm566 x 360 x 57mmWeightProduct with stand6.4kg (235P2), 5.7kg (235PL2)TermProduct without stand4.2kg (235P2), 3.5kg (235PL2)Term						
OneOneOneOneHeat Dissipation*AC Input Voltage at 100VAC +/-5VAC, 50Hz +/ -3HzAC Input Voltage at 230VAC +/-5VAC, 50Hz +/ -3HzAC Input Voltage at 230VAC +/-5VAC, 50Hz +/ -3HzNormal Operation77.41BTU76.66BTU76.38BTUSleep (typical)0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTUOff0.34BTU0.34BTU0.34BTUPower LED indicatorOn mode: White, Standby/Sleep mode: White (blinking)Power SupplyBuild-in, 100-240VAC, 50/60HzToDimensionFroduct with stand (WXHxD)566 x 517 x 250mmProduct without stand566 x 360 x 57mmFroduct without stand(WxHxD)672 x 268 x 434mmFroduct with standWeightFroduct with stand6.4kg (235P2), 5.7kg (235PL2)Product without stand4.2kg (235P2), 3.5kg (235PL2)						
100VAC +/-5VAC, 50Hz +/ -3Hz 115VAC +/-5VAC, 60Hz +/ -3Hz 230VAC +/-5VAC, 50Hz +/ -3Hz Normal Operation 77.41BTU 76.66BTU 76.38BTU Sleep (typical) 0.34BTU 0.34BTU 0.34BTU Off 0.34BTU 0.34BTU 0.34BTU Off 0.34BTU 0.34BTU 0.34BTU Power LED indicator On mode: White, Standby/Sleep mode: White (blinking) Power Supply Build-in, 100-240VAC, 50/60Hz Term Product with stand (WXHxD) 566 x 517 x 250mm Term Product without stand (WxHxD) 566 x 360 x 57mm Term Box dimension (WxHxD) 672 x 268 x 434mm Term Weight Froduct with stand 6.4kg (235P2), 5.7kg (235PL2) Term		0	01111			
50Hz +/ -3Hz 60Hz +/ -3Hz 50Hz +/ -3Hz Normal Operation 77.41BTU 76.66BTU 76.38BTU Sleep (typical) 0.34BTU 0.34BTU 0.34BTU Off 0.34BTU 0.34BTU 0.34BTU Off 0.34BTU 0.34BTU 0.34BTU Power LED indicator On mode: White, Standby/Sleep mode: White (blinking) 0 Power Supply Build-in, 100-240VAC, 50/60Hz U Dimension 566 × 517 × 250mm U Product with stand (WxHxD) 566 × 360 × 57mm U Wkith with stand (WxHxD) 672 × 268 × 434mm U Weight E U U Product with stand 6.4kg (235P2), 5.7kg (235PL2) U Product without stand 4.2kg (235P2), 3.5kg (235PL2) U	Heat Dissipation*					
Normal Operation 77.41BTU 76.66BTU 76.38BTU Sleep (typical) 0.34BTU 0.34BTU 0.34BTU 0.34BTU Off 0.34BTU 0.34BTU 0.34BTU 0.34BTU Off 0.34BTU 0.34BTU 0.34BTU 0.34BTU Power LED indicator On mode: White, Standby/Sleep mode: White (blinking) Power Supply Build-in, 100-240VAC, 50/60Hz Technology Power Supply Build-in, 100-240VAC, 50/60Hz Technology Technology Technology Product with stand (WxHxD) 566 × 517 × 250mm Technology Technology Technology Product without stand 566 × 360 × 57mm Technology Technology Technology Box dimension (WxHxD) 672 × 268 × 434mm Technology Technology Technology Weight Technology Technology Technology Technology Technology Product with stand 6.4kg (235P2), 5.7kg (235PL2) Technology Technology Technology		· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	,		
Sleep (typical) 0.34BTU 0.34BTU 0.34BTU 0.34BTU Off 0.34BTU 0.34BTU 0.34BTU 0.34BTU 0.34BTU Power LED indicator On mode: White, Standby/Sleep mode: White (blinking) Power Supply Build-in, 100-240VAC, 50/60Hz Dimension Product with stand (WxHxD) 566 x 517 x 250mm Froduct without stand 566 x 360 x 57mm Product without stand (WxHxD) 672 x 268 x 434mm Froduct with stand 672 x 268 x 434mm Weight Product with stand 6.4kg (235P2), 5.7kg (235PL2) Product without stand	Normal Operation					
Off0.34BTU0.34BTU0.34BTUPower LED indicatorOn mode: White, Standby/Sleep mode: White (blinking)Power SupplyBuild-in, 100-240VAC, 50/60HzDimensionProduct with stand (WxHxD)566 x 517 x 250mmProduct without stand566 x 360 x 57mm(WxHxD)672 x 268 x 434mmWeightProduct with stand6.4kg (235P2), 5.7kg (235PL2)Product without stand4.2kg (235P2), 3.5kg (235PL2)	· · · · · · · · · · · · · · · · · · ·					
Power LED indicatorOn mode: White, Standby/Sleep mode: White (blinking)Power SupplyBuild-in, 100-240VAC, 50/60HzDimensionProduct with stand (W×HxD)566 × 517 × 250mmProduct without stand566 × 360 × 57mm(W×HxD)672 × 268 × 434mmWeightProduct with stand6.4kg (235P2), 5.7kg (235PL2)Product without stand4.2kg (235P2), 3.5kg (235PL2)						
Power SupplyBuild-in, 100-240VAC, 50/60HzDimensionProduct with stand (WxHxD)566 x 517 x 250mmProduct without stand (WxHxD)566 x 360 x 57mmBox dimension (WxHxD)672 x 268 x 434mmWeightProduct with stand6.4kg (235P2), 5.7kg (235PL2)Product without stand4.2kg (235P2), 3.5kg (235PL2)						
Power SupplyBuild-in, 100-240VAC, 50/60HzDimensionProduct with stand (WxHxD)566 x 517 x 250mmProduct without stand (WxHxD)566 x 360 x 57mmBox dimension (WxHxD)672 x 268 x 434mmWeightProduct with stand6.4kg (235P2), 5.7kg (235PL2)Product without stand4.2kg (235P2), 3.5kg (235PL2)	Power LED indicator	On mode: White. Sta	ndby/Sleep mode:Whi	ite (blinking)		
Dimension Product with stand (WxHxD) 566 x 517 x 250mm Product without stand 566 x 360 x 57mm (WxHxD) 662 x 268 x 434mm Box dimension (WxHxD) 672 x 268 x 434mm Weight						
Product without stand (WxHxD)566 x 360 x 57mmBox dimension (WxHxD)672 x 268 x 434mmWeight672 x 268 x 434mmProduct with stand6.4kg (235P2), 5.7kg (235PL2)Product without stand4.2kg (235P2), 3.5kg (235PL2)						
Product without stand (WxHxD)566 x 360 x 57mmBox dimension (WxHxD)672 x 268 x 434mmWeight672 x 268 x 434mmProduct with stand6.4kg (235P2), 5.7kg (235PL2)Product without stand4.2kg (235P2), 3.5kg (235PL2)		566 x 517 x 250mm				
Box dimension (WxHxD) 672 x 268 x 434mm Weight 6.4kg (235P2), 5.7kg (235PL2) Product with stand 6.4kg (235P2), 3.5kg (235PL2) Product without stand 4.2kg (235P2), 3.5kg (235PL2)	· · · · · · · · · · · · · · · · · · ·					
Weight Product with stand 6.4kg (235P2), 5.7kg (235PL2) Product without stand 4.2kg (235P2), 3.5kg (235PL2)						
Weight Product with stand 6.4kg (235P2), 5.7kg (235PL2) Product without stand 4.2kg (235P2), 3.5kg (235PL2)	Box dimension (WxHxD)	672 x 268 x 434mm				
Product without stand 4.2kg (235P2), 3.5kg (235PL2)						
	Product with stand	6.4kg (235P2), 5.7kg (235PL2)				
$P_{12} + p_{12} + p$	Product without stand					
Product with packaging 8.1kg (Z35PZ), 7.4kg (Z35PLZ)	Product with packaging	8.1kg (235P2), 7.4kg (235PL2)				

Operating Condition		
Temperature range	Storage: -20°C to 60°C	
	operation: 0°C to 40 °C	
Relative humidity	20% to 80%	
Altitude	Non-operation: + 40,000 ft (12,192 m)	
	operation: + 12,000 ft (3,658 m)	
MTBF	50,000 hrs (235P2), 30,000 hrs (235PL2)	
Environmental		
ROHS	YES	
EPEAT	Gold. (www.epeat.net)	
Packaging	100% recyclable	
Compliance and standards		
Regulatory Approvals	CE Mark, Energy Star 5.0, FCC Class B, SEMKO,TCO5.0, TÜV/ GS,TÜV Ergo, UL/cUL	
Cabinet		
Color	Black/Silver, Black/Black	
Finish	Texture	

1. EPEAT Gold is valid only where Philips registers the product. Please visit <u>www.epeat.net</u> for registration status in your country.

2. This data is subject to change without notice. Go to <u>www.philips.com/support</u> to download the latest version of leaflet..

4.1 Resolution & Preset Modes

1 Maximum Resolution

For 235P2/235PL2

1920 × 1080 at 60 Hz (analog input) 1920 × 1080 at 60 Hz (digital input)

2 Recommended Resolution

For 235P2/235PL2

1920 x 1080 at 60 Hz (digital input)

H. freq (kHz)	Resolution	V. freq (Hz)
31.47	640×480	59.94
37.88	800×600	60.32
48.36	1024×768	60.00
54.00	1152×864	60.00
44.77	1280×720	59.86
47.78	1280×768	59.87
49.70	1280×800	59.81
60.00	1280×960	60.00
63.89	1280×1024	60.02
47.71	1360x768	60.02
55.47	1440×900	59.90
55.94	1440×900	59.89
75.00	1600×1200	60.00
64.67	1680×1050	59.88
65.29	1680×1050	59.95
66.59	1920×1080	59.93
74.04	1920×1200	59.95
67.50	1920×1080	60.00

4.2 Automatic PowerSaving

If you have VESA DPM compliance display card or software installed in your PC, the monitor can automatically reduce its power consumption when not in use. If an input from a keyboard, mouse or other input device is detected, the monitor will 'wake up' automatically. The following table shows the power consumption and signaling of this automatic power saving feature:

Power Management Definition (235P2)					
VESA Mode	Video	H-sync	V-sync	Power Used	LED color
Active	ON	Yes	Yes	42.24W (typ.), 52W (max.) (with audio and USB x 1)	White
Sleep (typ.)	OFF	No	No	0.1W	White (Blinking)
Switch Off	OFF	-	-	0.1W	OFF

Po	Power Management Definition (235PL2)				
VESA Mode	Video	H-sync	V-sync	Power Used	LED color
Active	ON	Yes	Yes	25W (typ.), 36W (max.) (with audio and USB x 1))	White
Sleep (typ.)	OFF	No	No	0.1W	White (Blinking)
Switch Off	OFF	-	-	0.1W	OFF

The following setup is used to measure power consumption on this monitor.

Native resolution: 1920x1080.

Contrast: 50%

Brightness: 300 nits (235P2); 250 nits (235PL2) Color temperature: 6500k with full white pattern Audio and USB Inactive (Off)

Note

This data is subject to change without notice.

5 Regulatory Information

Lead-free Product



Lead free display promotes environmentally sound recovery and disposal of waste from electrical and electronic equipment. Toxic substances

like Lead has been eliminated and compliance with European community's stringent RoHs directive mandating restrictions on hazardous substances in electrical and electronic equipment have been adhered to in order to make Philips monitors safe to use throughout its life cycle.

TCO Displays 5.0 Information



Congratulations, Your display is designed for both you and the planet!

This display carries the TCO Certified label. This ensures that the display is designed for minimal impact on the climate and natural environment, while offering all the performance expected from top of the line electronic products. TCO Certified is a third party verified program, where every product model is tested by an accredited independent test laboratory. TCO Certified represents one of the toughest certifications for displays worldwide.

Some of the Usability features of the TCO Displays 5.0 requirements:

Visual Ergonomics

Good visual ergonomics in order to improve the working environment for the user and to reduce sight and strain problems. Important parameters are:

• Light levels without color tint, Uniform color and luminance, Wide color gamut

- Calibrated color temperature and gamma curve
- Wide luminance level, Dark black levels, Low motion blur

Electrical Safety

- Product fulfills rigorous safety standards Emissions
- Low alternating electric and magnetic fields emissions
- Low acoustic noise emissions Some of the Environmental features of the TCO Displays 5.0 requirements:
- The brand owner demonstrates corporate social responsibility and has a certified environmental management system (EMAS or ISO 14001)
- Very low energy consumption both in on- and standby mode
- Restrictions on chlorinated and brominated flame retardants, plasticizer and polymers
- Restrictions on heavy metals such as cadmium, mercury and lead (RoHS compliance)

EPEAT

(www.epeat.net)



"The EPEAT (Electronic Product Environmental Assessment Tool) program evaluates computer desktops, laptops, and monitors based on 51 environmental criteria

developed through an extensive stakeholder consensus process supported by US EPA. EPEAT system helps purchasers in the public and private sectors evaluate, compare and select desktop computers, notebooks and monitors based on their environmental attributes. EPEAT also provides a clear and consistent set of performance criteria for the design of products, and provides an opportunity for manufacturers to secure market recognition for efforts to reduce the environmental impact of its products.''

Benefits of EPEAT

Reduce use of primary materials Reduce use of toxic materials Avoid the disposal of hazardous waste EPEAT'S requirement that all registered products meet ENERGY STAR's energy efficiency specifications, means that these products will consume less energy throughout their life.

CE Declaration of Conformity

This product is in conformity with the following standards

- EN60950-1:2006 (Safety requirement of Information Technology Equipment)
- EN55022:2006 (Radio Disturbance requirement of Information Technology Equipment)
- EN55024:1998+A1:2001+A2:2003 (Immunity requirement of Information Technology Equipment)
- EN61000-3-2:2006 (Limits for Harmonic Current Emission)
- EN61000-3-3:1995+A1:2001+A2:2005 (Limitation of Voltage Fluctuation and Flicker) following provisions of directives applicable
- 2006/95/EC (Low Voltage Directive)
- 2004/108/EC (EMC Directive)
- 2005/32/EC (EuP Directive, EC No. 1275/2008 mplementing Directive for Standby and Off mode power consumption) and is produced by a manufacturing organization on ISO9000 level.

The product also comply with the following standards

- ISO9241-307:2008 (Ergonomic requirement, Analysis and compliance test methods for electronic visual displays)
- GS EK1-2000:2009 (GS mark requirement)
- prEN50279:1998 (Low Frequency Electric and Magnetic fields for Visual Display)
- MPR-II (MPR:1990:8/1990:10 Low Frequency Electric and Magnetic fields)
- TCO Displays 5.0 (Requirement for Environment Labeling of Ergonomics, Energy, Ecology and Emission,TCO: Swedish Confederation of Professional Employees) for TCO versions

Energy Star Declaration

(www.energystar.gov)

This monitor is equipped with a function for saving energy which supports the VESA Display Power Management (DPM) standard. This means that the monitor must be connected to a computer which supports VESA DPM. Time settings are adjusted from the system unit by software.

	VESA State	LED Indicator	Power Consumption
Normal operation	ON (Active)	White	28.62W (typ.) (235P2) 22.47W (typ.) (235PL2)
Power Saving Alternative 2 One step	Sleep (typ.) Switch Off	White Blinking Off	0.1W 0.1W



As an ENERGY STAR[®] Partner, we have determined that this product meets the ENERGY STAR[®] guidelines for energy efficiency.

Note

We recommend you switch off the monitor when it is not in use for a long time.

Federal Communications Commission (FCC) Notice (U.S. Only)

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions. may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Use only RF shielded cable that was supplied with the monitor when connecting this monitor to a computer device.

To prevent damage which may result in fire or shock hazard, do not expose this appliance to rain or excessive moisture.

THIS CLASS B DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE-CAUSING EQUIPMENT REGULATIONS.

FCC Declaration of Conformity

Declaration of Conformity for Products Marked with FCC Logo,

United States Only



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Commission Federale de la Communication (FCC Declaration)

- Cet équipement a été testé et déclaré conforme auxlimites des appareils numériques de class B.aux termes de l'article 15 Des règles de la FCC. Ces limites sont concues de façon à fourir une protection raisonnable contre les interférences nuisibles dans le cadre d'une installation résidentielle. CET appareil produit, utilise et peut émettre des hyperfréquences qui, si l'appareil n'est pas installé et utilisé selon les consignes données, peuvent causer des interférences nuisibles aux communications radio. Cependant, rien ne peut garantir l'absence d'interférences dans le cadre d'une installation particulière. Si cet appareil est la cause d'interférences nuisibles pour la réception des signaux de radio ou de télévision, ce qui peut être décelé en fermant l'équipement, puis en le remettant en fonction, l'utilisateur pourrait essayer de corriger la situation en prenant les mesures suivantes:
- Réorienter ou déplacer l'antenne de réception.
- Augmenter la distance entre l'équipement et le récepteur.
- Brancher l'équipement sur un autre circuit que celui utilisé par le récepteur.
- Demander l'aide du marchand ou d'un technicien chevronné en radio/télévision.

Toutes modifications n'ayant pas reçu l'approbation des services compétents en matière de conformité est susceptible d'interdire à l'utilisateur l'usage du présent équipement.

N'utiliser que des câbles RF armés pour les connections avec des ordinateurs ou périphériques. CET APPAREIL NUMERIQUE DE LA CLASSE B RESPECTE TOUTES LES EXIGENCES DU REGLEMENT SUR LE MATERIEL BROUILLEUR DU CANADA.

EN 55022 Compliance (Czech Republic Only)

This device belongs to category B devices as described in EN 55022, unless it is specifically stated that it is a Class A device on the specification label. The following applies to devices in Class A of EN 55022 (radius of protection up to 30 meters). The user of the device is obliged to take all steps necessary to remove sources of interference to telecommunication or other devices.

Pokud není na typovém štitku počítače uvedeno, že spadá do do třídy A podle EN 55022, spadá automatický do třídy B podle EN 55022. Pro zařízení zařazená do třídy A (chranné pásrno 30m) podle EN 55022 platí následující. Dojde-li k rušení telekomunikačních nebo jiných zařízení je užtivatel povínnen prověst taková opatřpní, aprušení odstranil.

Polish Center for Testing and Certification Notice

The equipment should draw power from a socket with an attached protection circuit (a threeprong socket). All equipment that works together (computer, monitor, printer, and so on) should have the same power supply source.

The phasing conductor of the room's electrical installation should have a reserve short-circuit protection device in the form of a fuse with a nominal value no larger than 16 amperes (A).

To completely switch off the equipment, the power supply cable must be removed from the power supply socket, which should be located near the equipment and easily accessible.

A protection mark "B" confirms that the equipment is in compliance with the protection usage requirements of standards PN-93/T-42107 and PN-89/E-06251.

Wymagania Polskiego Centrum Badań i Certyfikacji

Urządzenie powinno być zasilane z gniazda z przyłączonym obwodem ochronnym (gniazdo z kołkam). Współpracujące ze sobą urządzenia (komputer, monitor, drukarka) powinny być zasilane z tego samego źródła.

Instalacja dektryczna pomieszczenia powinar zawienić w przewodrie fazowym rezzwowa ochorne przed zwarciani, w polscie borgicznak o watości zmianitowej nie wijskej nie 16 A (amperów). W celu całkowitego wyłącowa i urządzenia z sieci zasilania, należy wyjeć wtyczkę labła zasilającego z zmiada, które powino zmajówać sie w polskla urządzenia i był atwo dostępne. Znak berpieczeństwa ¹⁶ Proviendza zgodnoś urządzenia z wymaganiami bezpieczeństwa użytkownia zawarymi w 199-837-2107 (1974-891-60251.

Pozostałe instrukcje bezpieczeństwa

- Nie należy używać wtyczek adapterowych lub usuwać kolka obwodu ochronnego z wtyczki. Jeżeli konieczne jest użycie przeddłużacza to należy użyć przedłużacza 3-żylowego z prawidłowo połączonym przewodem ochronnym.
- System komputerowy należy zabezpieczyć przed nagłymi, chwilowymi wzrostami lub spadkami napięcia, używając eliminatora przepięć, urządzenia dopasowującego lub bezzakłaceniowego źródka zasilania.
- Należy upewnić się, aby nic nie leżało na kablach systemu komputerowego, oraz aby kable nie były umieszczone w miejscu, gdzie można byłoby na nie nadeptywać lub potykać się o nie.
- Nie należy rozlewać napojów ani innych płynów na system komputerowy.
- Nie należy wpychać żadnych przedmiotów do otworów systemu komputerowego, gdyż może to spowodować pożar lub porażenie prądem, poprzez zwarcie elementów wewnętrznych.
 System komputerowy zawianie znajdować je z zdala od razelnij ków la obach z body i obach z state z stat
- (b) System konzupterowy powienie znajdować się z dala od grzejników i źródel ciepła. Ponadto, nie należy błokować otworów wentylacyjnych. Należy umkać kładzenia lużnych papierów pod komputer oraz umieszczania komputera w ciasnym miejscu bez możliwości cyrkulacji powietrza wokół niego.

North Europe (Nordic Countries) Information

Placering/Ventilation

VARNING:

FÖRSÄKRA DIG OM ATT HUVUDBRYTARE OCH UTTAG ÄR LÄTÅTKOMLIGA, NÄR DU STÄLLER DIN UTRUSTNING PÅPLATS.

Placering/Ventilation ADVARSEL:

SØRG VED PLACERINGEN FOR, AT NETLEDNINGENS STIK OG STIKKONTAKT ER NEMTTILGÆNGELIGE.

Paikka/Ilmankierto

VAROITUS:

SIJOITA LAITE SITEN, ETTÄ VERKKOJOHTO VOIDAAN TARVITTAESSA HELPOSTI IRROTTAA PISTORASIASTA.

Plassering/Ventilasjon

ADVARSEL:

NÅR DETTE UTSTYRET PLASSERES, MÅ DU PASSE PÅ AT KONTAKTENE FOR STØMTILFØRSEL ER LETTE Å NÅ.

BSMI Notice (Taiwan Only)

符合乙類資訊產品之標準

Ergonomie Hinweis (nur Deutschland)

Der von uns gelieferte Farbmonitor entspricht den in der "Verordnung über den Schutz vor Schäden durch Röntgenstrahlen" festgelegten Vorschriften.

Auf der Rückwand des Gerätes befindet sich ein Aufkleber, der auf die Unbedenklichkeit der Inbetriebnahme hinweist, da die Vorschriften über die Bauart von Störstrahlern nach Anlage III ¤ 5 Abs. 4 der Röntgenverordnung erfüllt sind.

Damit Ihr Monitor immer den in der Zulassung geforderten Werten entspricht, ist darauf zu achten, daß

- 1. Reparaturen nur durch Fachpersonal durchgeführt werden.
- 2. nur original-Ersatzteile verwendet werden.
- 3. bei Ersatz der Bildröhre nur eine bauartgleiche eingebaut wird.

Aus ergonomischen Gründen wird empfohlen, die Grundfarben Blau und Rot nicht auf dunklem Untergrund zu verwenden (schlechte Lesbarkeit und erhöhte Augenbelastung bei zu geringem Zeichenkontrast wären die Folge).

Der arbeitsplatzbezogene Schalldruckpegel nach DIN 45 635 beträgt 70dB (A) oder weniger.

ACHTUNG: BEIM AUFSTELLEN DIESES GERÄTES DARAUF ACHTEN, DAß NETZSTECKER UND NETZKABELANSCHLUß LEICHT ZUGÄNGLICH SIND.

China RoHS

The People's Republic of China released a regulation called "Management Methods for Controlling Pollution by Electronic Information Products" or commonly referred to as China RoHS.All products are produced and sold for China market have to meet China RoHS request.

中国大陆RoHS

根据中国大陆《电子信息产品污染控制管理办法》(也称为中国大陆RoHS), 以下部分列出了本产品中可能包含的有毒有害物质或元素的名称和含量

本表适用之产品

显示器(液晶及CRT)

有毒有害物质或元素

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
外壳	0	0	0	0	0	0
CRT显示屏	×	0	0	0	0	0
液晶显示屏/灯管	×	×	0	0	0	0
电路板组件*	×	0	0	0	0	0
电源适配器	×	0	0	0	0	0
电源线/连接线	×	0	0	0	0	0
*: 电路板组件包括印刷电路板及其构成的零部件,如电阻、电容、集成电路、连接器等 C·表示该有着有害物底在该部件所有均成材料中的含量站在 《电子信息产品中有有者等地质的限量要求和是 规定的限量要求以下 X:表示该有著有物质互少在该部件的某一均质材料中的含量超出 《电子信息产品中有有者物质的限量要求和》规定的限量要求;但是上表中打"X"的部件, 有含效型而已未有着有物质的股份型来和》规定的限量要求;但是上表中打"X"的部件,						

ジ 环保使用期限

此标识指期限(十年),电子信息产品中含有的 有毒有害物质或元素在正常使用的条件下不 会发生外泄或突变,电子信息产品用户使用该 电子信息产品不会对环境造成严重污染或对 其人身、财产造成严重损害的期限.

中国能源效率标识

根据中国大陆《能源效率标识管理办法》本显示器符合以下要求:

能源效率(cd/W)	> 1.05
能效等级	1级
能效标准	GB 21520-2008

详细有关信息请查阅中国能效标识网: http://www.energylabel.gov.cn/

6 Customer care and warranty

Customer Care & Warranty

PLEASE SELECT YOUR COUNTRY/AREA TO REVIEW DETAILS OF YOUR WARRANTY COVERAGE

WESTERN EUROPE

Austria / Belgium / Denmark / France / Germany / Greece / Finland / Ireland / Italy / Luxembourg / the Netherlands / Norway / Portugal / Sweden / Switzerland / Spain / United Kingdom / Poland

EASTERN EUROPE

Czech Republic / Hungary / Russia / Slovakia / Slovenia / Turkey

LATIN AMERICA

Argentina / Brasil

NORTH AMERICA

Canada / USA

PACIFIC Australia / New Zealand

ASIA

China / Hong Kong / India / Indonesia / Korea / Malaysia / Pakistan / Philippines / Singapore / Taiwan / Thailand / Vietnam

AFRICA

South Africa

MIDDLE EAST United Arab Emirates

Your Philips F1rst Choice Warranty

Thank you for purchasing this Philips monitor.



All Philips monitors are designed and manufactured to high standards and deliver high-quality performance, ease of use and ease of installation. Should you encounter any difficulties while

installing or using this product, please contact the Philips helpdesk directly to benefit from your Philips F1rst Choice Warranty. This three-year service warranty entitles you to a swap model on-site if your monitor turns out to be faulty or defective. Philips aims at a swap within 48 hours of your call being received.

What is covered?

The Philips F1rst Choice Warranty applies within Andorra, Austria, Belgium, Cyprus, Denmark, France, Germany, Greece, Finland, Ireland, Italy, Liechtenstein, Luxembourg, Monaco, the Netherlands, Norway, Poland, Portugal, Sweden, Switzerland, Spain and the United Kingdom and only for monitors originally designed, manufactured, approved and/or authorized for usage within these countries.

Warranty coverage begins as from the day you buy your monitor. For three years thereafter, your monitor will be swapped by at least an equivalent monitor in case of defects provided for under the warranty coverage.

The swap monitor remains yours and Philips keeps the defective/original monitor. For the swap monitor the warranty period remains equal to that of your original monitor, being 36 months as from the purchase date of your original monitor.

What is excluded?

The Philips F1rst Choice Warranty applies provided the product is handled properly for its intended use, in accordance with its operating instructions and upon presentation of the original invoice or cash receipt, indicating the date of purchase, dealer's name and model and production number of the product.

The Philips F1rst Choice Warranty may not apply if:

- The documents have been altered in any way or made illegible;
- The model or production number on the product has been altered, deleted, removed or made illegible;
- Repairs or product modifications and alterations have been executed by unauthorized service organizations or persons;
- Damage is caused by accidents including but not limited to lightning, water or fire, misuse or neglect;
- Reception problems caused by signal conditions or cable or antenna systems outside the unit;
- Defects caused by abuse or misuse of the monitor;
- Product requires modification or adaptation to enable it to comply with local or national technical standards, which apply in countries for which the product was not originally designed, manufactured, approved and/or authorized. Therefore always check whether a product can be used in a specific country.
- Note that products that are not originally designed, manufactured, approved and/or authorized for usage within the Philips F1rst Choice countries, do not apply to the Philips F1rst Choice Warranty. In these cases the Philips global warranty terms are valid.

Just a click away

In case of any problems, we advise you to read the operating instructions carefully or go to the <u>www.philips.com/support</u> website for additional support.

Just a phone call away

In order to avoid unnecessary inconvenience, we advise you to read the operating instructions carefully or go to the www.philips.com/support website for additional support before contacting the Philips helpdesk.

To solve your problem quickly, please prepare the following details before contacting the Philips helpdesk:

- Philips type number
- Philips serial number
- Purchase date (copy of purchase may be required)
- PC environment Processor:
 - CUP and Graphic card name and driver version
 - Operating system
 - Application being used
- Other cards installed

Having the following information available will also help speed up the process:

- Your proof of purchase indicating: date of purchase, dealer name, model and product serial number.
- The full address to which the faulty monitor has to be collected and the swap model should be delivered.

Philips' customer help desks are located worldwide. Click here to access the F1rst Choice Contact Information.

Or you can reach us via: Website: http://www.philips.com/support

F1rst Choice Contact Information

Country	Code	Telephone number	Tariff
Austria	+43	0810 000206	€0.07
Belgium	+32	078 250851	€0.06
Denmark	+45	3525 8761	Local call tariff
Finland	+358	840 320 041	€0.08
Luxembourg	+352	26 84 30 00	Local call tariff
The Netherlands	+31	0900 0400 063	€0.10
Norway	+47	2270 8250	Local call tariff
Poland	+48	0223491505	Local call tariff
Portugal	+351	2 1359 1440	Local call tariff
Spain	+34	902 888 785	€0.10
Sweden	+46	08 632 0016	Local call tariff
Switzerland	+41	02 2310 2116	Local call tariff
United Kingdom	+44	0207 949 0069	Local call tariff

Your Guarantee in Central and Eastern Europe

Dear Customer,

Thank you for purchasing this Philips product, which has been designed and manufactured to the highest quality standards. If, unfortunately, something should go wrong with this product Philips guarantees free of charge labor and replacement parts during a period of 36 months from date of purchase.

What is covered?

This Philips Guarantee in Central and Eastern Europe applies within Czech Republic, Hungary, Slovakia, Slovenia, Russia and Turkey and only for monitors originally designed, manufactured, approved and/or authorized for usage within these countries.

Warranty coverage begins as from the day you buy your monitor. For 3 years thereafter, your monitor will be serviced in case of defects provided for under the warranty coverage.

What is excluded?

The Philips guarantee applies provided the product is handled properly for its intended use, in accordance with its operating instructions and upon presentation of the original invoice or cash receipt, indicating the date of purchase, dealer's name and model and production number of the product.

The Philips guarantee may not apply if:

- the documents have been altered in any way or made illegible;
- the model or production number on the product has been altered, deleted, removed or made illegible;
- repairs or product modifications and Iterations have been executed by unauthorized service organizations or persons;
- damage is caused by accidents including but not limited to lightning, water or fire, misuse or neglect.

- Reception problems caused by signal conditions or cable or antenna systems outside the unit;
- Defects caused by abuse or misuse of the monitor;
- Product requires modification or adaptation to enable it to comply with local or national technical standards, which apply in countries for which the product was not originally designed, manufactured, approved and/or authorized. Therefore always check whether a product can be used in a specific country.

Please note that the product is not defective under this guarantee in the case where modifications become necessary in order for the product to comply with local or national technical standards which apply in countries for which the product was not originally designed and/or manufactured. Therefore always check whether a product can be used in a specific country.

Just a click away

In case of any problems, we advise you to read the operating instructions carefully or go to the www.philips.com/support website for additional support.

Just a phone call away

In order to avoid unnecessary inconvenience, we advise you to read the operating instructions carefully before contacting our dealers or Information Centers

In case your Philips product is not working correctly or is defective, please contact your Philips dealer or directly the Philips Service and Consumer Information Centers

Website: http://www.philips.com/support

Consumer Information Centers

Argentina / Australia / Brasil / Canada / New Zealand / Belarus / Bulgaria / Croatia / Czech Republic / Estonia / United Arab Emirates / Hong Kong / Hungary / India / Indonesia / Israel / Latvia / Lithuania / Malaysia / Middle East + North Africa / New Zealand / Pakistan / Romania / Russia / Serbia & Montenegro / Singapore / Slovakia / Slovenia / South Africa / South Korea / Taiwan / Philippines / Thailand / Turkey / Ukraine / Vietnam

Eastern Europe

BELARUS Technic al Center of JV IBA M. Bogdanovich str: 155 BY - 220040 Minsk Tel: +375 17 217 33 86

BELARUS

Service.BY Petrus Brovky st. 19 – 101-B 220072, Minsk Belarus

BULGARIA

LAN Service 140, Mimi Balkanska Str. Office center Translog 1540 Sofia, Bulgaria Tel: +359 2 960 2360 www.lan-service.bg

CZECH REPUBLIC

General Consumer Information Center 800 142100

Xpectrum

Lu.ná 591/4 CZ - 160 00 Praha 6 Tel: 800 100 697 or 220 121 435 Email:info@xpectrum.cz www.xpectrum.cz

CROATIA

Renoprom d.o.o. Ljubljanska 4, Sv. Nedjelja,10431 Croatia Tel: +385 1 333 0974

ESTONIA

FUJITSU SERVICES OU Akadeemia tee 21G EE-12618 Tallinn Tel: +372 6519900 www.ee.invia.fujitsu.com

HUNGARY

Serware Szerviz Vizimolnár u. 2-4 HU - 1031 Budapest Tel: +36 1 2426331 Email: inbox@serware.hu www.serware.hu

HUNGARY

Profi Service Center Ltd. 123 Kulso-Vaci Street, H-1044 Budapest (Europe Center) Hungary Tel: +36 1 814 8080 m.andras@psc.hu

LATVIA

ServiceNet LV Jelgavas iela 36 LV - 1055 Riga, Tel: +371 7460399 Email: serviss@servicenet.lv

LITHUANIA

ServiceNet LT Gaiziunu G. 3 LT - 3009 KAUNAS Tel: +370 7400088 Email: servisas@servicenet.lt www.servicenet.lt

ROMANIA

Blue Ridge Int'l Computers SRL 115, Mihai Eminescu St., Sector 2 RO - 020074 Bucharest Tel: +40 21 2101969

SERBIA & MONTENEGRO

Kim Tec d.o.o. Viline vode bb, Slobodna zona Beograd L12/3 11000 Belgrade Serbia Tel. +381 11 20 70 684

SLOVAKIA

General Consumer Information Center 0800004551

Datalan Servisne Stredisko Puchovska 8 SK - 831 06 Bratislava Tel: +421 2 49207155 Email: servis@datalan.sk

SLOVENIA

PC HAND Brezovce 10 SI - 1236 Trzin Tel: +386 1 530 08 24 Email: servis@pchand.si

RUSSIA

CPS 18, Shelepihinskaya nab. 123290 Moscow Russia Tel. +7(495)797 3434

Profservice:

14A -3, 2Karacharovskaya str, 109202, Moscow , Russia Tel. +7(095)170-5401

TURKEY

Türk Philips Ticaret A.S. Yukari Dudullu Org,San.Bolgesi 2.Cadde No:22 34776-Umraniye/Istanbul Tel: (0800)-261 33 02

UKRAINE

Comel Shevchenko street 32 UA - 49030 Dnepropetrovsk Tel: +380 562320045 www.csp-comel.com LLC Topaz Company Topaz-Service Company, Mishina str: 3, Kiev Ukraine-03151 Tel: +38 044 245 73 31

Latin America ARGENTINA

Azopardo 1480. (C1107ADZ) Cdad. de Buenos Aires Tel: 0800 3330 856 Email: CIC.monitores@Philips.com

BRASIL

Alameda Raja Gabaglia, 188 - 10°Andar - V. Olímpia - S. Paulo/SP - CEP 04551-090 -Brasil Tel: 0800-7254101 Email: CIC.monitores@Philips.com

Pacific AUSTRALIA

Company: AGOS NETWORK PTY LTD Address: 4/5 Dursley Road, Yenorra, NSW 2161, Australia Tel: 1300 360 386 Fax: +61-2-80808147 Email: philips@agos.com.au Service hours: Mon.~Fri. 8:00am-7:30pm

NEW ZEALAND

Company: Visual Group Ltd. Address: 28 Walls Rd Penrose Auckland Phone: 0800 657447 Fax: 09 5809607 E-mail: vai.ravindran@visualgroup.co.nz Service Hours: Mon.~Fri. 8:30am~5:30pm

Asia

HONG KONG

Company: Smart Pixels Technology Ltd. Address: 9/F Wilson Logistics Center 24-28 Kung Kip Street Kwai Chung, N.T., Hong Kong. Tel: +852 2619 9639 Fax: +852 2148 3123 E-mail: service@smartpixels.com.hk Service hours: Mon.To Fri.: 9:00am–6:00pm, Sat.: 9:00am–1:00pm

Macau

Company: Smart Pixels Technology Ltd. Address: RUA DO PE. ANT ROLIZ NO.2H R/C + SL(A) HONG FOK KOK, MACAU 澳門羅神父街鴻福閣三號H舖 Tel: (853)-0800-987 Fax: (853)-2855-2228 E-mail: service@smartpixels.com.hk Service hours: Mon.To Fri.: 9:00am-6:00pm, Sat.: 9:00am-1:00pm

India:

Company: REDINGTON INDIA LTD Address: SPL Guindy House, 95 Mount Road, Chennai 600032, India Tel: 1 800 425 6396 E-mail: centralservice@philipsmonitors.co.in Service hours: Mon.~Fri. 9:00AM~5:30PM; Sat. 9:00AM~1:00PM

Indonesia:

Company: PT. Gadingsari elektronika Prima Address: Kompleks Pinang 8, Jl. Ciputat raya No. 8F, Pondok Pinang. Jakarta Tel: 62 21 75909053, 75909056, 7511530 Fax: 62 21 7510982 E-mail: gepta@cbn.net.id Service hours: Mon.~Fri. 8:30am~4:30pm; Sat. 8:30am~2:00pm Coverage: Jakarta, Bekasi, Krawang, Bogor, Depok, Tangerang, Serpong, Serang

Additional service points:

1. ASC MEDAN Address: JL.Kakap No.32G, Medan Phone: 62 61 4538920 Coverage: Medan, Aceh, Pematang Siantar, Pakanbaru, Padang

2. ASC YOGYA Address: Jl.Pembela Tanah Air No.15,Yogyakarta Phone: 62 274 564791 Coverage: Yogyakarta, Solo, Semarang, Magelang

3. ASC SURABAYA Address: HI-TECH Mall Lt.2 ,Blok C1-.12A JI.Kusuma Bangsa 116-118, Surabaya Phone: 62 31 5353573 Coverage: Surabaya, Malang, Pasuruan, Bojonegoro, Kediri, Gersik

4. ASC BALI Address: Jl.Pulau Nusa Penida No.28 Denpasar-Bali Phone: 62 813 31821822 Coverage: Denpasar, Kuta, Nusa Dua, Gianyar, Bedugul

5. ASC BANDUNG Address: Segitiga Mas Kosambi Blok G-9 Jl.Jend A.Yani ,Bandung Phone: 62 22 7237009 Coverage: Bandung, Cirebon, Ciamis, Sukabumi

Pakistan:

Philips Consumer Service Address: Mubarak manzil, 39, Garden Road, Saddar, Karachi-74400 Tel: (9221) 2737411-16 Fax: (9221) 2721167 E-mail: care@philips.com Service hours: Mon.~Sat. 09:30am~1:00pm & 2:00pm~5:30pm

Vietnam:

1. Ho Chi Minh City : Company: FPT Service Informatic Company Ltd. -Ho Chi Minh City Branch Address: 207/4 Nguyen Van Thu Street, District 1, HCM City Tel: +84 8 38248007 Fax: +84 8 38248010 E-mail: Thanght@fpt.com.vn quangdd@fpt.com.vn Service hours: Mon. To Fri.: 8:00am–12:00pm, 1:30pm–5:30pm; Sat.: 8:00am–12:00pm

2. Danang City :
Company: FPT Service Informatic Company Ltd. -Da nang Office
Address: 336 Le Duan Street - Thanh Khe District
- Da Nang City
Tel: 05113.562666; Fax: 05113.562662
Tel: +84 511 3562666
Fax: +84 511 3562662
E-mail: khangndv@fpt.com.vn quangdd@fpt.com.vn
Service hours: Mon. To Fri.: 8:00am-12:00pm,
1:30pm-5:30pm; Sat.: 8:00am-12:00pm

3. Can tho Province : Company: FPT Service Informatic Company Ltd. -Can Tho Office Address: 71/4 Tran Phu Street, Ninh Kieu District, Can tho City Tel: +84 5113.562666 Fax: +84 5113.562662 E-mail: nhieptv@fpt.com.vn quangdd@fpt.com.vn Service hours: Mon. To Fri.: 8:00am-12:00pm, 1:30pm-5:30pm; Sat.: 8:00am-12:00pm

Philippines:

Company: Glee Electronics, Inc. Address: Unit 1103-1104 11F The Taipan Place Bldg. F. Ortigas Center Pasig City Tel: (02) 633-4533 to 34 / (02) 637-6559 to 60 Fax: (02) 6334563 E-mail: arnold.manabat@glee.com.ph Service hours: Mon.~Fri. 8:00am~6:00pm

Taiwan:

Company: FETEC.CO Address: No.499, Ciwen Rd., Taoyuan City, Taoyuan County 330, Taiwan Consumer Care: 0800-231-099 Tel: (03)2120336 Fax: (03)3129184 E-mail: knlin08@xuite.net Service hours: Mon.~Fri. 8:30am~7:00pm

Africa

SOUTH AFRICA

Company name: Sylvara Technologies Pty Ltd Address: Ho Address Palm Springs Centre Christoffel Road Van Riebeeck Park Kempton Park, South Africa Tel: +27878084456 Fax: +2711 391 1060 E-mail: customercare@philipssupport.co.za Service hours: Mon.~ Fri. 08:00am~05:00pm

Middle East Middle East + North Africa

Company: AL SHAHD COMPUTER L.L.C Address: P.O.BOX: 29024, DUBAI, UNITED ARAB EMIRATES TEL: 00971 4 2276525 FAX: 00971 4 2276242 E-mail: shahd52@eim.ae Service hours: Sat.~Thur. 9:00am~1:00pm & 4:00pm- 8:00pm

Israel

Company: Eastronics LTD Address: 13 Rozanis St. P.O.B. 39300, Tel Aviv 61392 Israel Tel: 1-800-567000 call free in Israel; (972-50-8353722 after service hours until 20:00) Fax: 972-3-6458759 E-mail: eastronics@eastronics.co.il Service hours: Sun.~Thurs. 08:00 - 18:00

Your Philips F1rst Choice Warranty(USA)

Thank you for purchasing this Philips monitor.



All Philips monitors are designed and manufactured to high standards and deliver high-quality performance, ease of use and ease of installation. Should you encounter any difficulties while

installing or using this product, please contact Philips directly to benefit from your Philips F1rst Choice Warranty. This three-year service warranty entitles you to a swap model on-site within 48 hours of your call being received within the first year of purchase. If you have any problems with your monitor within the second or third year of purchase, we will repair it after it has been sent to the service provider at your expense and returned to you within five working days, free of charge.

LIMITED WARRANTY (Computer Monitor)

Click here to access the Warranty Registration Card.

Three Years Free Labor / Three Years Free Service on Parts / One Year Exchange*

*Product will be exchanged with a new or renewed to original specifications unit within two business days for the first year. This product must be shipped in at your expense for service during years two and three.

WHO IS COVERED?

You must have proof of purchase to receive warranty service. A sales receipt or other document showing that you purchased the product is considered proof of purchase. Attach it to this owner's manual and keep both nearby.

WHAT IS COVERED?

Warranty coverage begins the day you buy your product. For three years thereafter, all parts will be repaired or replaced, and labor is free. After three years from the day of purchase, you pay for the replacement or repair of all parts, and for all labor charges.

All parts, including repaired and replaced parts, are covered only for the original warranty period. When the warranty on the original product expires, the warranty on all replaced and repaired products and parts also expires.

WHAT IS EXCLUDED?

Your warranty does not cover:

labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.

product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Philips Consumer Electronics.

reception problems caused by signal conditions or cable or antenna systems outside the unit.

a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.

incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, prerecorded material, whether copyrighted or not copyrighted.)

the model or production number on the product has been altered, deleted, removed or made illegible.

Where IS SERVICE AVAILABLE?

Warranty service is available in all countries where the product is officially distributed by Philips Consumer Electronics. In countries where Philips Consumer Electronics does not distribute the product, the local Philips service organization will attempt to provide service (although there may be a delay if the appropriate spare parts and technical manual(s) are not readily available).

Where CAN I GET MORE INFORMATION?

For more information, contact the Philips Customer Care Center by calling (877) 835-1838 (U.S.A. customers only) or (919) 573-7855.

Before Requesting Service...

Please check your owner's manual before requesting service. Adjustments of the controls discussed there may save you a service call. TO GET WARRANTY SERVICE IN U.S.A., PUERTO RICO OR U.S.VIRGIN ISLANDS... Contact the Philips Customer Care Center phone number listed below for product assistance and procedures for servicing:

Philips Customer Care Center (877) 835-1838 or (919) 573-7855

(In U.S.A., Puerto Rico and U.S. Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. But, because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.)

TO GET WARRANTY SERVICE IN CANADA ...

Please contact Philips at: (800) 479-6696

Three years free parts and three years free labor will be provided at Philips Canada depot or any one of its authorized service centers.

(In Canada, this warranty is given in lieu of all other warranties. No other warranties are expressed or implied, including any implied warranties of merchantability or fitness for a particular purpose. Philips is not liable under any circumstances for any direct, indirect, special, incidental or consequential damages, howsoever incurred, even if notified of the possibility of such damages.) REMEMBER... Please record the model and serial numbers found on the product below.

MODEL # _____

SERIAL # _____

This warranty gives you specific legal rights. You may have other rights which vary from state/ province to state/province.

Before contacting Philips, please prepare the following details so we can solve your problem quickly.

- Philips type number
- Philips serial number
- Purchase date (copy of purchase may be required)
- PC environment Processor:
 - CUP and Graphic card name and driver version
 - Operating system
 - Application being used
- Other cards installed Having the following information available will also help speed up the process:
- Your proof of purchase indicating: date of purchase, dealer name, model and product serial number:
- The full address to which the swap model should be delivered.

Just a phone call away

Philips' customer help desks are located worldwide. Within the U.S. you can contact Philips customer care Monday-Friday from 8:00 AM-9:00 PM Eastern Time (ET) and on Saturdays from 10:00 AM-5:00 PM ET hrs by using one of the contact phone numbers.

For more information on this and more great Philips products visit our website at:

Website: http://www.philips.com

Your International Guarantee

Dear Customer,

Thank you for purchasing this Philips product which has been designed and manufactured to the highest quality standards.

If, unfortunately, something should go wrong with this product Philips guarantees free of charge labor and replacement parts irrespective of the country where it is repaired during a period of 12 months from date of purchase. This international Philips guarantee complements the existing national guarantee obligations to you of dealers and Philips in the country of purchase and does not affect your statutory rights as a customer.

The Philips guarantee applies provided the product is handled properly for its intended use, in accordance with its operating instructions and upon presentation of the original invoice or cash receipt, indicating the date of purchase, dealer's name and model and production number of the product.

The Philips guarantee may not apply if:

- the documents have been altered in any way or made illegible;
- the model or production number on the product has been altered, deleted, removed or made illegible;
- repairs or product modifications and alterations have been executed by unauthorized service organizations or persons;
- damage is caused by accidents including but not limited to lightning, water or fire, misuse or neglect.

Please note that the product is not defective under this guarantee in the case where modifications become necessary in order for the product to comply with local or national technical standards which apply in countries for which the product was not originally designed and/or manufactured. Therefore always check whether a product can be used in a specific country.

In case your Philips product is not working correctly or is defective, please contact your Philips dealer. In the event you require service whilst in another country a dealer address can be given to you by the Philips Consumer Help Desk in that country, the telephone and fax number of which can be found in the relevant part of this booklet.

In order to avoid unnecessary inconvenience, we advise you to read the operating instructions carefully before contacting your dealer. If you have questions which your dealer cannot answer or any related question please contact the Philips Consumer Information Centers or via: Website: http://www.philips.com

7 Troubleshooting & FAQs

7.1 Troubleshooting

This page deals with problems that can be corrected by a user. If the problem still persists after you have tried these solutions, contact Philips customer service representative.

1 Common Problems

No Picture (Power LED not lit)

- Make sure the power cord is plugged into the power outlet and into the back of the monitor.
- First, ensure that the power button on the front of the monitor is in the OFF position, then press it to the ON position.

No Picture (Power LED is white blinking)

- Make sure the computer is turned on.
- Make sure the signal cable is properly connected to your computer.
- make sure the monitor cable has no bent pins on the connect side. If yes, repair or replace the cable.
- The Energy Saving feature may be activated

Screen says



- Make sure the monitor cable is properly connected to your computer. (Also refer to the Quick Set-Up Guide).
- Check to see if the monitor cable has bent pins.
- Make sure the computer is turned on.

AUTO button doesn't function

• The auto function is applicable only in VGA-Analog mode. If the result is not satisfactory, you can do manual adjustments via the OSD menu.

Note

The Auto Function is not applicable in DVI-Digital mode as it is not necessary.

Visible signs of smoke or sparks

- Do not perform any troubleshooting steps
- Disconnect the monitor from mains power source immediately for safety
- Contact with Philips customer service
 representative immediately.

2 Imaging Problems

Image is not centered

- Adjust the image position using the "Auto" function in OSD Main Controls.
- Adjust the image position using the Phase/ Clock of Setup in OSD Main Controls. It is valid only in VGA mode.

Image vibrates on the screen

• Check that the signal cable is properly securely connected to the graphics board or PC.

Vertical flicker appears



- Adjust the image using the "Auto" function in OSD Main Controls.
- Eliminate the vertical bars using the Phase/ Clock of Setup in OSD Main Controls. It is valid only in VGA mode.

Horizontal flicker appears

- Adjust the image using the "Auto" function in OSD Main Controls.
- Eliminate the vertical bars using the Phase/ Clock of Setup in OSD Main Controls. It is valid only in VGA mode.

Image appears blurred, indistinct or too dark

• Adjust the contrast and brightness on On-Screen Display.

An "after-image", "burn-in" or "ghost image" remains after the power has been turned off.

- Uninterrupted display of still or static images over an extended period may cause " burn in", also known as "after-imaging" or "ghost imaging", on your screen. "Burn-in", "afterimaging", or "ghost imaging" is a well-known phenomenon in monitor panel technology. In most cases, the "burned in" or "after-imaging" or "ghost imaging" will disappear gradually over a period of time after the power has been switched off.
- Always activate a moving screen saver program when you leave your monitor unattended.
- Always activate a periodic screen refresh application if your monitor will display unchanging static content.
- Severe" burn-in" or "after-image" or "ghost image" symptoms will not disappear and cannot be repaired. The damage mentioned above is not covered under your warranty.

Image appears distorted. Text is fuzzy or blurred.

 Set the PC's display resolution to the same mode as monitor's recommended screen native resolution.

Green, red, blue, dark, and white dots appears on the screen

• The remaining dots are normal characteristic of the liquid crystal used in today's technology, Please refer the pixel policy for more detail.

The "power on" light is too strong and is disturbing

 You can adjust "power on" light using the power LED Setup in OSD main Controls.

3 Audio problem

No sound

- Check if audio cable is connected to PC and monitor correctly.
- Ensure audio is not muted. Press OSD "Menu", select "Audio" then "Mute". Check it on "Off" position.
- Press "Volume" in OSD main control to adjust the volume.

4 USB problem

USB peripherals are not working

- Check if USB upstream cable is connected to your monitor correctly
- Turn your monitor OFF and ON once again. You may need to install/reinstall USB drivers in your PC and ensure hub is active.
- Reconnect your USB peripherals

For further assistance, refer to the Consumer Information Centers list and contact Philips customer service representative.

7.2 SmartControl Premium FAQs

- Q1. I change the monitor on a PC to a different one and the SmartControl Premium becomes un-usable, what do I do?
- Ans.: Restart your PC and see if SmartControl Premium can work. Otherwise, you will need to remove and re-install SmartControl Premium to ensure proper driver is installed.

Q2. The SmartControl Premium functions worked well before, but it does not work anymore, what can I do?

Ans.: If the following actions were executed, the monitor driver may need to be re-installed.

re-installed.

- Changed video graphic adapter to another one
- Updated video driver
- Activities on OS, such as service pack or patch
- Run Windows Update and updated monitor and/or video driver
- Windows was booted with the monitor power off or disconnected. To find out, please right click My Computer and click on Properties->Hardware-> Device Manager. If you see "Plug and Play Monitor" shows under Monitor; then you need to re-install. Simply remove SmartControl Premium and re-install it.

- Q3 After installing SmartControl Premium, when clicking on SmartControl Premium tab, nothing shows up after a while or a failure message shows, what happened?
- Ans.: It might be your graphic adaptor is not compatible with the SmartControl Premium. If your graphic adaptor is one of the above mentioned brands, try to download the most updated graphic adaptor driver from corresponding companies' web site. Install the driver: Remove SmartControl Premium, and re-install it once more. If it is still not working, we are sorry that

the graphic adaptor is not supported. Please visit Philips website and check if an updated SmartControl Premium driver is available.

Q4. When I click on Product Information, only partial information is shown, what happened?

Ans.: It might be your graphic card adaptor driver is not the most updated version which fully supporting DDC/Cl interface. Please try to download the most updated graphic adaptor driver from corresponding companies' web site. Install the driver. Remove SmartControl Premium and re-install it once more.

ATTENTION

Theft Deference enabled

Q5. I forgot my PIN for Theft Deterrence Function.What can I do?

Ans.: Philips Service center has a right to ask for legitimate identification and authorization, in order to establish ownership of the monitor.

> Please note that the anti-theft deterrence function is provided as a convenient free option. Managing PIN numbers is the sole responsibility of the individual user or the organization who sets it.

In case the PIN number is forgotten, Philips service center can re-set it for you at a nominal charge after verification of ownership. Please note that this activity is not covered by standard warranty terms.

- Q6. In a monitor with the SmartImage feature, the sRGB scheme of color temperature function in SmartControl Premium is not responding, why?
- Ans.: When SmartImage is enabled, the sRGB scheme is disabled automatically. To use sRGB, you need to disable SmartImage with the 🗇 button at the front bezel of your monitor.

7.3 General FAQs

Q1:When I install my monitor what should I do if the screen shows 'Cannot display this video mode'?

Ans.:Recommended resolution for Philips 23": 1920×1080 @60Hz.

- Unplug all cables, then connect your PC to the monitor that you used previously.
- In the Windows Start Menu, select Settings/ Control Panel. In the Control Panel Window, select the Display icon. Inside the DisplayControl Panel, select the 'Settings' tab. Under the setting tab, in box labeled 'desktop area', move the sidebar to 1920x1080 pixels (23").
- Open 'Advanced Properties' and set the Refresh Rate to 60Hz, then click OK.
- Restart your computer and repeat step 2 and 3 to verify that your PC is set at 1920×1080@60Hz (23").
- Shut down your computer, disconnect your old monitor and reconnect your Philips monitor.
- Turn on your monitor and then turn on your PC.

Q2: What does the recommended refresh rate for monitor?

Ans.: Recommended refresh rate in monitors is 60Hz. In case of any disturbance on screen, you can set it up to 75Hz to see if that removes the disturbance.

- Q3: What are the .inf and .icm files on the CD-ROM? How do I install the drivers (.inf and .icm)?
- **Ans.:** These are the driver files for your monitor. Follow the instructions in your user manual to install the drivers. Your computer may ask you for monitor drivers (.inf and .icm files) or a driver disk when you first install your monitor. Follow the instructions to insert the (companion CD-ROM) included in this package. Monitor drivers (.inf and .icm files) will be installed automatically.

Q4: How do I adjust the resolution?

Ans.: Your video card/graphic driver and monitor together determine the available resolutions. You can select the desired resolution under Windows[®] Control Panel with the "Display properties".

Q5: What if I get lost when I am making monitor adjustments via OSD?

Ans.: Simply press the OK button, then select 'Reset' to recall all of the original factory settings.

Q6: Is the monitor screen resistant to scratches?

Ans.: In general it is recommended that the panel surface is not subjected to excessive shocks and is protected from sharp or blunt objects. When handling the monitor, make sure that there is no pressure or force applied to the panel surface side. This may affect your warranty conditions.

Q7: How should I clean the monitor surface?

Ans.: For normal cleaning, use a clean, soft cloth. For extensive cleaning, please use isopropyl alcohol. Do not use other solvents such as ethyl alcohol, ethanol, acetone, hexane, etc.

Q8: Can I change the color setting of my monitor?

- Ans.: Yes, you can change your color setting through OSD control as the following procedures,
- Press "OK" to show the OSD (On Screen Display) menu
- Press "Down Arrow" to select the option "Color" then press "OK" to enter color setting, there are three settings as below.
 - Color Temperature; The six settings are 5000K, 6500K, 7500K, 8200K, 9300K and 11500K. With settings in the 5000K range the panel appears 'warm,' with a red-white color tone, while a 11500K temperature yields 'cool, blue-white toning."
 - sRGB; this is a standard setting for ensuring correct exchange of colors between different device (e.g. digital cameras, monitors, printers, scanners, etc)
 - **3.** User Define; the user can choose his/her preference color setting by adjusting red, green blue color.

Solution Note:

A measurement of the color of light radiated by an object while it is being heated. This measurement is expressed in terms of absolute scale, (degrees Kelvin). Lower Kevin temperatures such as 2004K are red; higher temperatures such as 9300K are blue. Neutral temperature is white, at 6504K.

Q9: Can the Philips monitor be mounted on the wall?

Ans.: Yes. Philips monitors have this optional feature. Four standard VESA mount holes on the rear cover allows the user to mount the Philips monitor on most of the VESA standard arms or accessories. We recommend you to contact your Philips sales representative for more information.

Q10: Can I connect my monitor to any PC, workstation or Mac?

Ans.: Yes. All Philips monitors are fully compatible with standard PCs, Macs and workstations. You may need a cable adapter to connect the monitor to your Mac system. Please contact your Philips sales representative for more information.

Q11: Are Philips monitors Plug-and- Play?

Ans.: Yes, the monitors are Plug-and-Play compatible with Windows 7/Vista/XP/NT, Mac OSX, Linux

Q12: What kind of wide-angle technology is available?

Ans.: Currently, the IPS type panels offer the best Contrast Ratio, compared to MVA, or PVA technologies. TN panels have improved over the years, but IPS panel still gives superior results over TN panel.

- Q13: What is Image Sticking, or Image Burn-in, or After Image, or Ghost Image in monitor panels?
- Ans.: Uninterrupted display of still or static images over an extended period may cause "burn in", also known as "after-imaging" or "ghost imaging", on your screen. "Burn-in", "afterimaging", or "ghost imaging" is a well-known phenomenon in monitor panel technology. In most cases, the "burned in" or "atter-imaging" or "ghost imaging" will disappear gradually over a period of time after the power has been switched off. Always activate a moving screen saver program when you leave your monitor unattended.

Always activate a periodic screen refresh application if your monitor will display unchanging static content.

Warning

Severe"burn-in" or "after-image" or "ghost image" symptoms will not disappear and cannot be repaired. The damage mentioned above is not covered under your warranty.

Q14: Why is my Display not showing sharp text, and is displaying jagged characters?

Ans.: Your monitor works best at its native resolution of 1920x1080@60Hz. For best display please use this resolution.



2011 © Koninklijke Philips Electronics N.V. All rights reserved.

Philips and the Philips Shield Emblem are registered trade marks of Koninklijke Philips Electronics N.V. and are used under license from Koninklijke Philips Electronics N.V.

Specifications are subject to change without notice.

M2235PE3Q