

# PHILIPS



Video Wall Display

Signage Solutions

65"

Direct LED Backlight

Ultra HD

500cd/m<sup>2</sup>



65BDL6005X

## Get the bigger picture

Monitor, manage and control

Ensure every detail is under control. The Philips X-Line Videowall display is designed for 24/7 operation and can be customised to fit all your content needs. View content from multiple sources in real-time with enhanced picture quality.

### **Effortless setup. Total control.**

- Operate, monitor and maintain with CMND & Control
- Add Android processing power with an optional CRD50 module

### **Powerful system solution**

- Energy-saving automatic backlight control
- OPS slot allows for PC embedding without cabling
- Tiling mode. Create tiled 4K videowalls of any size

### **Brilliant images. Endless possibilities.**

- IPS panel: rich color consistency from every angle
- Ultra HD monitors. Brilliant images. Clear contrast
- Ultra-narrow bezels. For distraction-free images

### **Cost-effective system solution**

- FailOver ensures content is always playing

# Specifications

## Picture/Display

Diagonal screen size (metric): 164 cm  
 Diagonal screen size (inch): 64.5 inch  
 Aspect ratio: 16:9  
 Panel resolution: 3840 x 2160  
 Pixel pitch: 0.372 x 0.372 mm  
 Optimum resolution: 3840 x 2160 @ 60 Hz  
 Brightness: 500 cd/m<sup>2</sup>  
 Display colors: 1.07 B  
 Contrast ratio (typical): 1300:1  
 Dynamic contrast ratio: 500,000:1  
 Response time (typical): 8 ms  
 Viewing angle (horizontal): 178 degree  
 Viewing angle (vertical): 178 degree  
 Haze: 25 %

## Connectivity

Audio output: 3.5 mm Mini Jack (x1)  
 Video input: Display Port 1.2 (x1), DVI-D (x1),  
 HDMI 2.0 (x2), VGA (Analog D-Sub) (x1)  
 Audio input: 3.5 mm mini jack (x1)  
 Other connections: OPS, USB 2.0 (x1)  
 Video output: DisplayPort 1.2 (x1)  
 External control: IR (in) 3.5 mm jack, IR (in/out)  
 RJ45, LAN RJ45 (x2), RS232 (in/out) RJ45

## Convenience

Placement: Landscape (24/7), Portrait (24/7)  
 Tiled Matrix: Up to 10 x 10  
 Screen saving functions: Pixel Shift, Low Bright  
 Signal loop through: DisplayPort, IR and RS232  
 via RJ45, LAN  
 Ease of installation: Carrying Handles, Smart  
 Insert  
 Energy saving functions: Smart Power  
 Network controllable: LAN (RJ45)

## Sound

Built-in speakers: 2 x 10W (RMS)

## Power

Consumption (On mode): 150 W  
 Consumption (Typical): 210 W  
 Consumption (Max): 400 W  
 Standby power consumption: 0.5 W  
 Energy Label Class: G

## Supported Display Resolution

Computer formats: 720 x 400, 70Hz, 800 x 600,  
 60, 75Hz, 1024 x 768, 60, 75Hz, 1280 x 768, 60Hz,  
 1280 x 800, 60Hz, 1280 x 960, 60Hz, 1280

x 1024, 60Hz, 1360 x 768, 60Hz, 1366 x 768,  
 60Hz, 1600 x 1200, 60Hz, 1920 x 1080, 60Hz,  
 3840 x 2160, 60Hz  
 Video formats: 720p, 50, 60Hz, 1080i, 25, 30Hz,  
 1080p, 50, 60Hz, 3840 x 2160, 60Hz, 2160P 50,  
 60Hz ((HDMI/OPS/DP)

## Dimensions

Set Width: 1432.6 mm  
 Product weight: 29.2 kg  
 Set Height: 807.6 mm  
 Set Depth: 88.8 mm(D@WallMount)/91.7  
 mm(D@Handle) mm  
 Set Width (inch): 56.40 inch  
 Set Height (inch): 31.80 inch  
 Wall Mount: 400mm x 400mm, M6  
 Set Depth (inch): 3.50 (D@WallMount)/3.61  
 (D@Handle) inch  
 Bezel width: 2.3 mm + 1.2 mm

## Operating conditions

Altitude: 0 ~ 3000 m  
 Temperature range (operation): 0 ~ 40 °C  
 MTBF: 50,000 hour(s)  
 Temperature range (storage): -20 ~ 60 °C  
 Humidity range (operation)[RH]: 20 - 80%  
 (without condensation)  
 Humidity range (storage) [RH]: 5 - 95% (without  
 condensation)

## Accessories


Included Accessories: AC Switch Cover, Edge  
 Alignment Kit, Gap pad x3, IR sensor cable (1.8  
 m) (x1), Quick start guide (x1), Remote control &  
 AAA batteries, RJ45 / RS232 converter, Wire  
 Clamper (x3), Power cord, DP cable (x1), RJ45  
 cable (x1)

## Miscellaneous

On-Screen Display Languages: Arabic, English,  
 French, German, Italian, Japanese, Polish,  
 Russian, Spanish, Simplified Chinese, Turkish,  
 Traditional Chinese  
 Warranty: 3 years warranty  
 Regulatory approvals: CE, FCC, Class A, RoHS, CB,  
 ETL


# Highlights

## CMND & Control




Run your display network over a local (LAN) connection. CMND & Control allows you to perform vital functions like controlling inputs and monitoring display status. Whether you're in charge of one screen or 100.

## FailOver

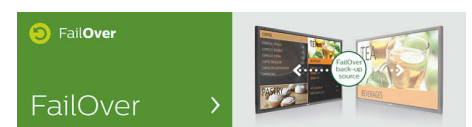

From waiting room to meeting room, never show a blank screen. FailOver lets your Philips Professional Display switch automatically between primary and secondary inputs ensuring content keeps playing even if the primary source goes down. Simply set a list of alternate inputs to be sure your business is always on.

## OPS slot



Integrate a full-power PC or Android-powered CRD50 module directly into your Philips Professional Display. The OPS slot contains all the connections you need to run your slot-in solution, including a power supply.

## Optional CRD50 module

Embed an Android System-on-Chip (SoC) in your Philips Professional Display. The optional CRD50 module is an OPS device that enables Android processing power without the need for cables. Simply slide into the OPS slot, which contains all the connections needed to run the module (including power supply).

## Tiling mode

Connect two or more Philips professional displays to create a tiled videowall-without the need for external devices. A single player takes care of content, whether you have four screens or 40. 4K content is fully supported, and if you're showing that content on four screens you get the best possible dot-by-dot resolution.

## Pure Colour Pro

Boost image quality with Pure Colour Pro. Delivering higher luminance through custom colour temperature settings and advanced gamma calibration, content looks crisper and more radiant for stunning realism with a visual pop.

