



Philips  
LCD monitor with Touch  
Control

18.5" w (47 cm) E-line  
HD

191E2SB1

## Slim, attractive HD display offers great value

With a slim, attractive design this new generation 191E2 HD display with SmartContrast and SmartImage Lite is a great choice for all your needs

### **Great picture quality**

- Ready to display HD content
- 16:9 display for best widescreen gaming and video
- SmartContrast 500,000:1 for incredible rich black details
- SmartImage Lite for an enhanced LCD viewing experience

### **Design that complements any interior**

- Glossy finish to enhance your decor
- Slim design for modern looks
- Modern Touch controls

### **Environmentally friendly green design**

- Energy Star for energy efficiency and low power consumption
- Eco-friendly materials that meets international standards

### **Great convenience**

- Easy picture format control switching in wide and 4:3 format
- Easy display performance tuning with SmartControl Lite

# PHILIPS

# Highlights

## Slim design

New range of Philips monitors use the latest new generation Slim CCFL or LED, thereby allowing designs to be much more slimmer than previous generation. Slim looks not only allow the monitors to look aesthetically pleasing, but also saves space on the desk!!

## High definition monitor

A high definition monitor is a display device designed to deliver the exceptional picture quality of high definition pictures, one fully prepared for HD sources like HD set top boxes. A HD monitor offers picture quality beyond that of progressive scan, conforming to strict standards for HD screens that display high resolution, top picture quality signals through a universal connection for either analog VGA or uncompressed DVI digital connections and supports HDCP. It displays 720p (1280x720p @ 50 and 60 Hz progressive) and 1080i (1920x1080i @ 50 and 60 Hz interlaced) signals.

## 16:9 widescreen aspect ratio

An aspect ratio is an expression of a video image's width compared to its height. The 16:9 widescreen aspect ratio is standard for universal to high-definition television and European digital television. A native 16:9 aspect ratio means outstanding game and video display without bars at top and bottom of the picture and without the quality loss than comes from scaling, altering an image to fit on a different screen size.

## SmartImage Lite

SmartImage Lite is an exclusive, leading edge Philips technology that analyzes the content displayed on your screen. Based on a scenario you select, SmartImage Lite dynamically enhances the contrast, color saturation and sharpness of images and videos for ultimate display performance - all in real time with the press on a single button.

## SmartControl Lite

SmartControl Lite is the next generation 3D icon based GUI monitor control software. This

allows user to fine-tune most parameters of the monitor like Color, Brightness, screen calibration, Multi-media, ID management, etc with the mouse.

## SmartContrast ratio 500000:1



You want the LCD flat display with the highest contrast and most vibrant images. Philips advanced video processing combined with unique extreme dimming and backlight boosting technology results in vibrant images. SmartContrast will increase the contrast with excellent blacklevel and accurate rendition of dark shades and colors. It gives a bright, lifelike picture with high contrast and vibrant colors.

## Touch controls




Touch controls are intelligent, touch sensitive icons that replace protruding buttons that lets the user adjust the monitor to their requirement. Responding to your lightest touch, Touch control gives the monitor a modern feel.

## Energy Star 5.0

Energy Star is a US EPA sponsored energy efficiency program also adopted by many other countries. Energy Star certification ensures that you are buying a product which meets the latest power efficiency standards which operates with maximum power efficiency at all operational levels. New Philips monitors are

certified for Energy Star 5.0 specifications and meet or exceed the standard. For example, in sleep mode Energy Star 5.0 requires less than 1 watt power consumption, whereas Philips monitors consume less than 0.5 watts. Further details can be obtained from [www.energystar.gov](http://www.energystar.gov)

## Easy picture format control

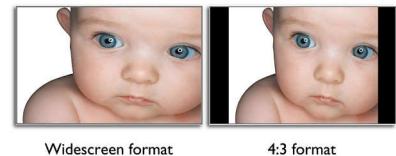

Philips easy picture format control on OSD is to switch from the 4:3 aspect ratio to the widescreen mode and back again to match the display's aspect ratio with your content for working with wide documents without scrolling or viewing widescreen media in the widescreen mode and distortion-free, native mode display of 4:3 ratio content.

## Glossy finish

An attractive, elegantly finished glossy finish that fits in with and complements your decor.

## Eco-friendly materials

"Philips is committed to use sustainable, eco-friendly materials across its monitor range. All body plastic parts, metal chassis parts and packing materials use 100% recyclable materials. In some selected models we utilize upto 65% post consumer recycled plastics. Strict adherence to RoHS standards ensure substantial reduction or elimination of toxic substances like Lead, for example. Mercury content in monitors with CCFL backlight has been reduced significantly, while eliminated in monitors with LED backlight completely. Visit Philips @ <http://www.asimpleswitch.com/global/> to learn more.



# Specifications

## Connectivity

- Signal Input: VGA (Analog ), DVI-D (digital, HDCP)
- Sync Input: Separate Sync, Sync on Green

## Picture/Display

- Panel Size: 18.5 inch / 47cm
- Aspect ratio: 16:9
- LCD panel type: TFT-LCD
- Pixel pitch: 0.30 x 0.30 mm
- Optimum resolution: 1366 x 768 @ 60 Hz
- Brightness: 250 cd/m<sup>2</sup>
- Display colors: 16.7 M
- SmartContrast: 500,000:1
- Response time (typical): 5 ms
- Viewing angle: 176° (H) / 170° (V), @ C/R > 5
- Picture enhancement: SmartImage Lite
- Scanning Frequency: 30 -83 kHz (H) / 56 -75 Hz (V)
- sRGB

## Convenience

- Plug & Play Compatibility: DDC/CI, Mac OS X, Windows 7/Vista/XP/2000/98
- User convenience: SmartImage lite, Menu, Input, Auto, Power On/Off
- OSD Languages: English, French, German, Spanish, Italian, Russian, Simplified Chinese, Portuguese, Turkish
- Other convenience: Kensington lock

## Stand

- Tilt: -3/+12 degree

## Power

- Power supply: External

- Off mode: < 0.5 W
- On mode: < 16.3W (EnergyStar 5.0 test method)
- Standby mode: < 0.5W
- Power LED indicator: Operation - White, Standby mode- White (blinking)

## Dimensions

- Product with stand (mm): 338 x 457 x 189 mm
- Packaging in mm (WxHxD): 383 x 503 x 125 mm
- Product without stand (mm): 293 x 457 x 41 mm

## Weight

- Product with packaging (kg): 3.58 kg
- Product with stand (kg): 2.38 kg
- Product without stand (kg): 2.22 kg

## Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- MTBF: 50,000 hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C

## Sustainability

- Environmental and energy: EPEAT Silver, RoHS, EnergyStar 5.0
- Recyclable packaging material: 100 %

## Compliance and standards

- Regulatory Approvals: CE Mark, FCC, Class B, TCO 5.0, GOST, BSMI, UL/cUL

## Cabinet

- Color: Black/Black
- Finish: Glossy



Issue date 2024-03-25

Version: 2.1.2

EAN: 87 12581 55897 0

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)