



LCD monitor with PowerSensor

- B Line
- 22 (21.5" / 54.6 cm diag.)
- 1920 x 1080 (Full HD)

221B7QPJEB/73

Crisp views, efficient performance

with PowerSensor

The Philips PowerSensor display using 85% post consumer recycled plastics and PVC, BFR free housing is ideal for eco-friendly productivity

Benefits

Brilliant performance

- IPS technology for full colors and wide viewing angles
- Narrow border display for a seamless appearance
- SmartImage presets for easy optimized image settings

Designed for comfortable productivity

- LowBlue Mode for easy on-the-eyes productivity
- Less eye fatigue with Flicker-free technology
- SmartErgoBase enables people-friendly ergonomic adjustments

Features for the way you work

- Built-in stereo speakers for multimedia
- SmartConnect with DisplayPort, HDMI and VGA connections
- USB 3.0 enables fast data transfers and smart phone charging

Sustainable Eco-design

- PowerSensor saves up to 80% energy costs
- Designed to meet environmental standards

PHILIPS

Features

IPS technology




IPS displays use an advanced technology which gives you extra wide viewing angles of 178/178 degree, making it possible to view the display from almost any angle - even in 90 degree Pivot mode! Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid colors, making it ideal not only for Photos, movies and web browsing, but also for professional applications which demand color accuracy and consistent brightness at all times.

UltraNarrow Border



The new Philips displays feature ultra-narrow borders which allow for minimal distractions and maximum viewing size. Especially suited for multi-display or tiling setup like gaming, graphic design and professional applications, the ultra-narrow border display gives you the feeling of using one large display.

SmartImage

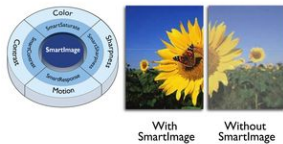

SmartImage is an exclusive leading edge Philips technology that analyzes the content displayed on your screen and gives you optimized display performance. This user friendly interface allows you to select various modes like Office, Photo, Movie, Game, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimizes the contrast, color saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time with the press of a single button!

LowBlue Mode



Studies have shown that just as ultra-violet rays can cause eye damage, shortwave length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.

Flicker-free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-free Technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

SmartErgoBase



The SmartErgoBase is a monitor base that delivers ergonomic display comfort and provides cable management. The base's people-friendly height, swivel, tilt and rotation angle adjustments position the monitor for maximum comfort that can ease the physical strains of a long workday; cable management reduces cable clutter and keeps the workspace neat and professional.

Built-in stereo speakers



A pair of high quality stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.

SmartConnect

With a plethora of connectivity, these Philips displays come equipped with multi connections like VGA, Display Port, universal HDMI connector, enabling you to enjoy high resolution uncompressed video and audio content. USB connections ensures that you can have super speed data transfers while having global connectivity. Regardless of what source you use, you can rest assured that this Philips display will ensure your investment is not made obsolete any time soon!

PowerSensor



PowerSensor is a built-in 'people sensor' that transmits and receives harmless infrared signals to determine if user is present and automatically reduces monitor brightness when user steps away from the desk, cutting energy costs by up to 80 percent and prolonging monitor life

USB 3.0 super speed

Super Speed USB 3.0 deploys 5.0 gbit/s transfer rate, which is about 10 times faster than USB 2.0 standard significantly reducing data transfer time saving you time and money. With more bandwidth, super speed transfer rates, better power management and superior overall performance, USB 3.0 sets the

global standard allowing you to use the large capacity storage devices. Sync-N-Go technology ensures you don't have to wait anymore for bandwidth to be freed up. Your investment in USB 2.0 devices is protected as it is backward compatible.

Designed for sustainability

Designed for sustainability, and reduced operating costs, this monitor meets environmental standards. Such as: ENERGY STAR, EPEAT, TCO Certified. For more information on certification, please visit: ENERGY STAR: <https://www.energystar.gov/> EPEAT: <https://www.epeat.net/> TCO Certified: <https://tccertified.com/>

Specifications

[field not found 'disclaimer_text']

Picture/Display

LCD panel type	IPS technology
Backlight type	W-LED system
Panel Size	21.5 inch / 54.6 cm
Effective viewing area	476.1 (H) x 267.8 (V)
Aspect ratio	16:9
Optimum resolution	1920 x 1080 @ 60Hz
Response time (typical)	5 ms (Gray to Gray)*
Brightness	250 cd/m ²
Contrast ratio (typical)	1,000:1
SmartContrast	20,000,000:1
Pixel pitch	0.248 x 0.248 mm
Viewing angle	178° (H) / 178° (V) @ C/R > 10
Flicker-free	Yes
Picture enhancement	SmartImage
Display colors	16.7 M
Scanning Frequency sRGB	30 - 83 kHz (H) / 56 - 76 Hz (V) Yes

Connectivity

Signal Input	VGA (Analog) DisplayPort 1.2 HDMI 1.4
USB Sync Input	USB 3.0x2 (1 w/fast charging)* Separate Sync Sync on Green
Audio (In/Out)	PC audio-in Headphone out

Convenience

Built-in Speakers	2 W x 2
User convenience	SmartImage Input PowerSensor Menu Power On/Off Low Blue Mode
Control software	SmartControl
OSD Languages	Brazil Portuguese Czech Dutch English Finnish French German Greek Hungarian Italian Japanese Korean Polish Portuguese Russian Simplified Chinese Spanish Swedish Traditional Chinese Turkish Ukrainian
Other convenience	Kensington lock VESA mount (100x100mm)
Plug & Play Compatibility	DDC/CI Mac OS X sRGB

Windows 10 / 8.1 / 8 / 7

Stand

Height adjustment	130 mm
Pivot	90 degree
Swivel	-175/+175 degree
Tilt	-5/20 degree

Power

ECO mode	10.7 W (typ.)
On mode	14.6 W (typ.) (EnergyStar 7.0 test method)
Standby mode	<0.3 W (typ.)
Off mode	Zero watts with Zero switch
Power LED indicator	Operation - White Standby mode- White (blinking)
Power supply	Built-in 100-240VAC, 50-60Hz

Dimensions

Product with stand(max height)	490 x 473 x 220 mm
Product without stand (mm)	490 x 302 x 52 mm
Packaging in mm (WxHxD)	552 x 464 x 187 mm

Weight

Product with stand (kg)	5.08 kg
Product without stand (kg)	2.98 kg
Product with packaging (kg)	7.05 kg

Operating conditions

Temperature range (operation)	0°C to 40°C °C
Temperature range (storage)	-20°C to 60°C °C
Relative humidity	20%-80 %
Altitude	Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
MTBF (demonstrated)	70,000 hrs (excluded backlight)

Sustainability

Environmental and energy	PowerSensor EnergyStar 7.0 EPEAT* TCO Certified Edge RoHS
Recyclable packaging material	100 %
Post consumer recycled plastic	85%
Specific Substances	PVC / BFR free housing Mercury free

Compliance and standards

Regulatory Approvals	CE Mark FCC Class B SEMKO cETLus
----------------------	---

CU-EAC
TUV Ergo
TUV/GS
WEEE
EPA
ICES-003
KUCAS
SASO
UKRAINIAN

Cabinet

Front bezel	Black
Rear cover	Black
Foot	Black
Finish	Texture

- * "IPS" word mark / trademark and related patents on technologies belong to their respective owners.
- * EPEAT rating is valid only where Philips registers the product. Please visit <https://www.epeat.net/> for registration status in your country.
- * Fast charging complies with USB BC 1.2 standard
- * Response time value equal to SmartResponse



data subject to change
2021, May 22

Version: 2.0.1
EAN: 8712581747534

© 2021 Koninklijke Philips N.V.
All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

www.philips.com